C129

12A581

B213
Intake Air Temperature (IAT) sensor (12A697)

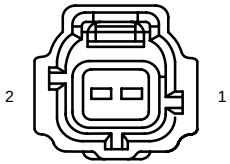

F02101

Pin	Circuit	Circuit function
1	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input
2	359 (GY/RD)	signal, return

C130

12A581

N412a
A/C clutch cycling pressure switch (19D594)

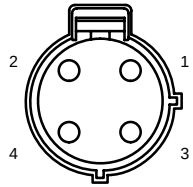

F04083

Pin	Circuit	Circuit function
1	441 (RD/YE)	A/C pressure switch, to A/C cycling switch
2	–	not used
3	–	not used
4	348 (VT)	A/C demand signal
	57 (BK)	Ground

C131

13076

H1
Horn (13832)

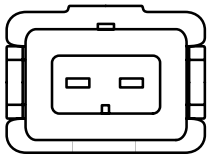
F02089

Pin	Circuit	Circuit function
1	6 (YE/LG)	Horn relay, switched power, output
2	57 (BK)	Ground

C132

12A581

B203
Ambient air temperature sensor (19E702)

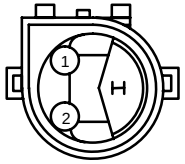

F02004

Pin	Circuit	Circuit function
1	3061 (LB/OG)	Ambient air temperature sensor (19E702), feed
2	3060 (GY/RD)	Sensor signal return (reference/ground)

C133

13076

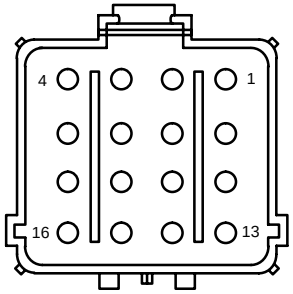

F16020

14405

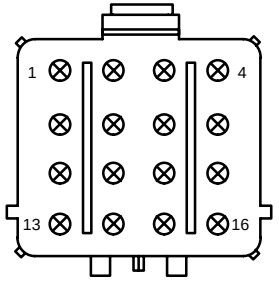

F16095

(1)	2 (WH/LB)	(9)	12 (LG/BK)
(2)	3 (LG/WH)	(10)	161 (DG/OG)
(3)	14 (BN)	(11)	
(4)		(12)	
(5)	160 (DB/WH)	(13)	57 (BK)
(6)	6 (YE/LG)	(14)	471 (OG/LG)
(7)	478 (TN/OG)	(15)	544 (VT)
(8)		(16)	57 (BK)