6.8L BI-FUEL

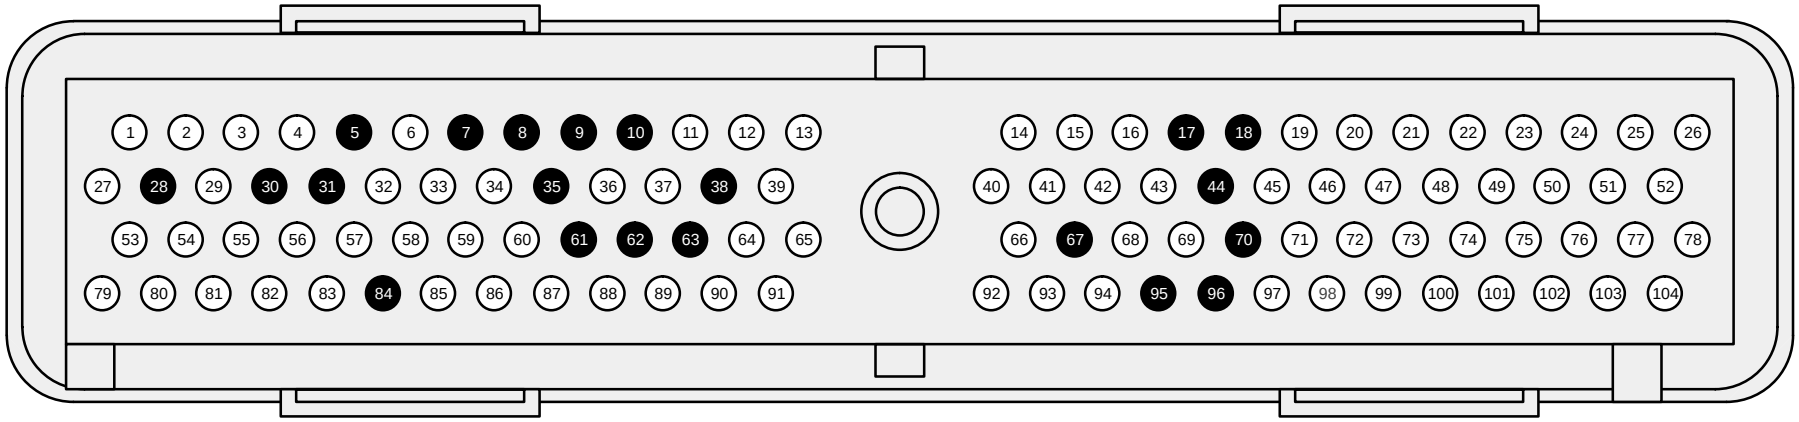

C1027

POWERTRAIN CONTROL MODULE (PCM)

22-21 ENGINE CONTROLS (6.8L BI-FUEL)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Coil On Plug #6	36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return
2	658 (PK/LG)	MIL Lamp Control			
3	570 (BK/WH)	Ground	37	923 (OG/BK)	Transmission Fluid Temperature Sensor
4	322 (LB/YE)	Power Take Off Input			
5	–	NOT USED	38	–	NOT USED
6	237 (OG/YE)	Shift Solenoid #1	39	743 (GY)	Intake Air Temperature Input
7	–	NOT USED	40	238 (DG/YE)	Fuel Pump Monitor
8	–	NOT USED	41	439 (TN/LG)	A/C Head Pressure Switch
9	–	NOT USED	42	1101 (GY/RD)	Fuel Injector #10
10	–	NOT USED	43	71 (OG/LG)	Data Output Link
11	315 (VT/OG)	Shift Solenoid #2	44	–	NOT USED
12	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)	45	39 (RD/WH)	Temperature Output to Dash
			46	679 (GY/BK)	Vehicle Speed Sensor
13	107 (VT)	Flash EPROM Power Supply (FEPS)	47	360 (BN/PK)	Exhaust Gas Recirculation (EGR) Solenoid
14	784 (LB/BK)	4x4 Low Range Switch	48	648 (WH/PK)	Clean Tach Output
15	915 (PK/LB)	SCP Data Bus (–)	49	1145 (DB/WH)	Digital Transmission Range (DTR) Sensor (TR2)
16	914 (TN/OG)	SCP Data Bus (+)			
17	–	NOT USED	50	1143 (DG/YE)	Digital Transmission Range (DTR) Sensor (TR4)
18	–	NOT USED			
19	27 (OG/LG)	Fuel Pump Speed Relay Control	51	570 (BK/WH)	Ground
			52	1028 (WH/PK)	Coil On Plug #5
20	924 (BN/OG)	Coast Clutch Solenoid	53	1030 (DG/VT)	Coil On Plug #7
21	349 (DB)	Crankshaft Position Sensor (+)	54	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid
22	350 (GY)	Crankshaft Position Sensor (–)			
23	570 (BK/WH)	Ground	55	729 (RD/WH)	Power (Hot at All Times) (KAPWR)
24	570 (BK/WH)	Ground	56	191 (LG/BK)	EVAP Canister Purge Valve
25	567 (LB/YE)	Case Ground	57	310 (YE/RD)	Knock Sensor (KS+)
26	1024 (LG/WH)	Coil On Plug #1	58	679 (GY/BK)	Vehicle Speed Sensor (+)
27	1021 (LG/YE)	Coil On Plug #10	59	970 (DG/WH)	Turbine Speed Sensor
28	–	NOT USED	60	74 (GY/LB)	HEGO #11
29	224 (TN/WH)	Transmission Control Switch	61	–	NOT USED
30	–	NOT USED	62	–	NOT USED
31	–	NOT USED	63	–	NOT USED
32	311 (DG/VT)	Knock Sensor (KS–)	64	*199 (LB/YE)	Digital Transmission Range (DTR) Sensor (TR3A)
33	676 (PK/OG)	Vehicle Speed Sensor (–)			
34	1144 (WH/YE)	Digital Transmission Range (DTR) Sensor (TR1)		**481(WH/PK)	Clutch Pedal Position (CPP)Switch
35	–	NOT USED	65	352 (BN/LG)	Delta Pressure Feedback EGR (DPFE) Sensor

*** AUTOMATIC TRANSMISSION**
**** MANUAL TRANSMISSION**

PIN	CIRCUIT	CIRCUIT FUNCTION
66	1102 (YE/LG)	Cylinder Head Temperature (CHT) Sensor
67	–	NOT USED
68	1100 (GY/BK)	Fuel Injector #9
69	331 (PK/YE)	A/C Clutch Relay
70	–	NOT USED
71	361 (RD)	Power Input
72	561 (TN/RD)	Fuel Injector #7
73	559 (TN/BK)	Fuel Injector #5
74	557 (BN/YE)	Fuel Injector #3
75	555 (TN)	Fuel Injector #1
76	570 (BK/WH)	Ground
77	570 (BK/WH)	Ground
78	1027 (PK/LB)	Coil On Plug #2
79	1029 (WH/RD)	Coil On Plug #8
80	926 (LB/OG)	Fuel Pump Relay Control
81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid
82	1142 (WH/RD)	Coil On Plug #9
83	264 (WH/LB)	Idle Air Control (IAC) Valve
84	–	NOT USED
85	795 (DG)	Cam Sensor Signal
86	136 (DB/YE)	Output Shaft Speed Sensor
87	94 (RD/BK)	HEGO #21
88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
89	355 (GY/WH)	Throttle Position (TP) Sensor
90	351 (BN/WH)	Reference Output Voltage
91	359 (GY/RD)	Sensor Signal Return
92	810 (RD/LG)	Brake Pedal Position (BPP) Switch
93	387 (RD/WH)	HEGO Sensor Heater #11 Voltage Monitor
94	388 (YE/LB)	HEGO Sensor Heater #21 Voltage Monitor
95	–	NOT USED
96	–	NOT USED
97	361 (RD)	Power Input
98	562 (LB)	Fuel Injector #8
99	560 (LG/OG)	Fuel Injector #6
100	558 (BN/LG)	Fuel Injector #4
101	556 (WH)	Fuel Injector #2
102	1141 (YE/BK)	Coil On Plug #4
103	570 (BK/WH)	Ground
104	1026 (PK/WH)	Coil On Plug #3

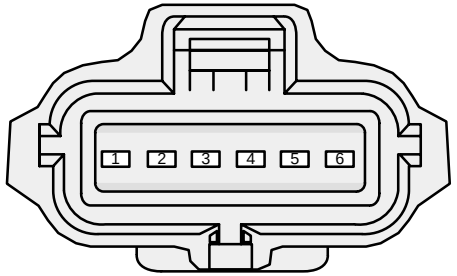

C1041

MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	359 (GY/RD)	Sensor Signal Return
2	361 (RD)	Power (Hot in Start And Run)
3	570 (BK/WH)	Power Ground
4	968 (TN/LB)	MAF Sensor Signal Return
5	967 (LB/RD)	MAF Signal Output
6	743 (GN)	Intake Air Temperature (IAT) Sensor