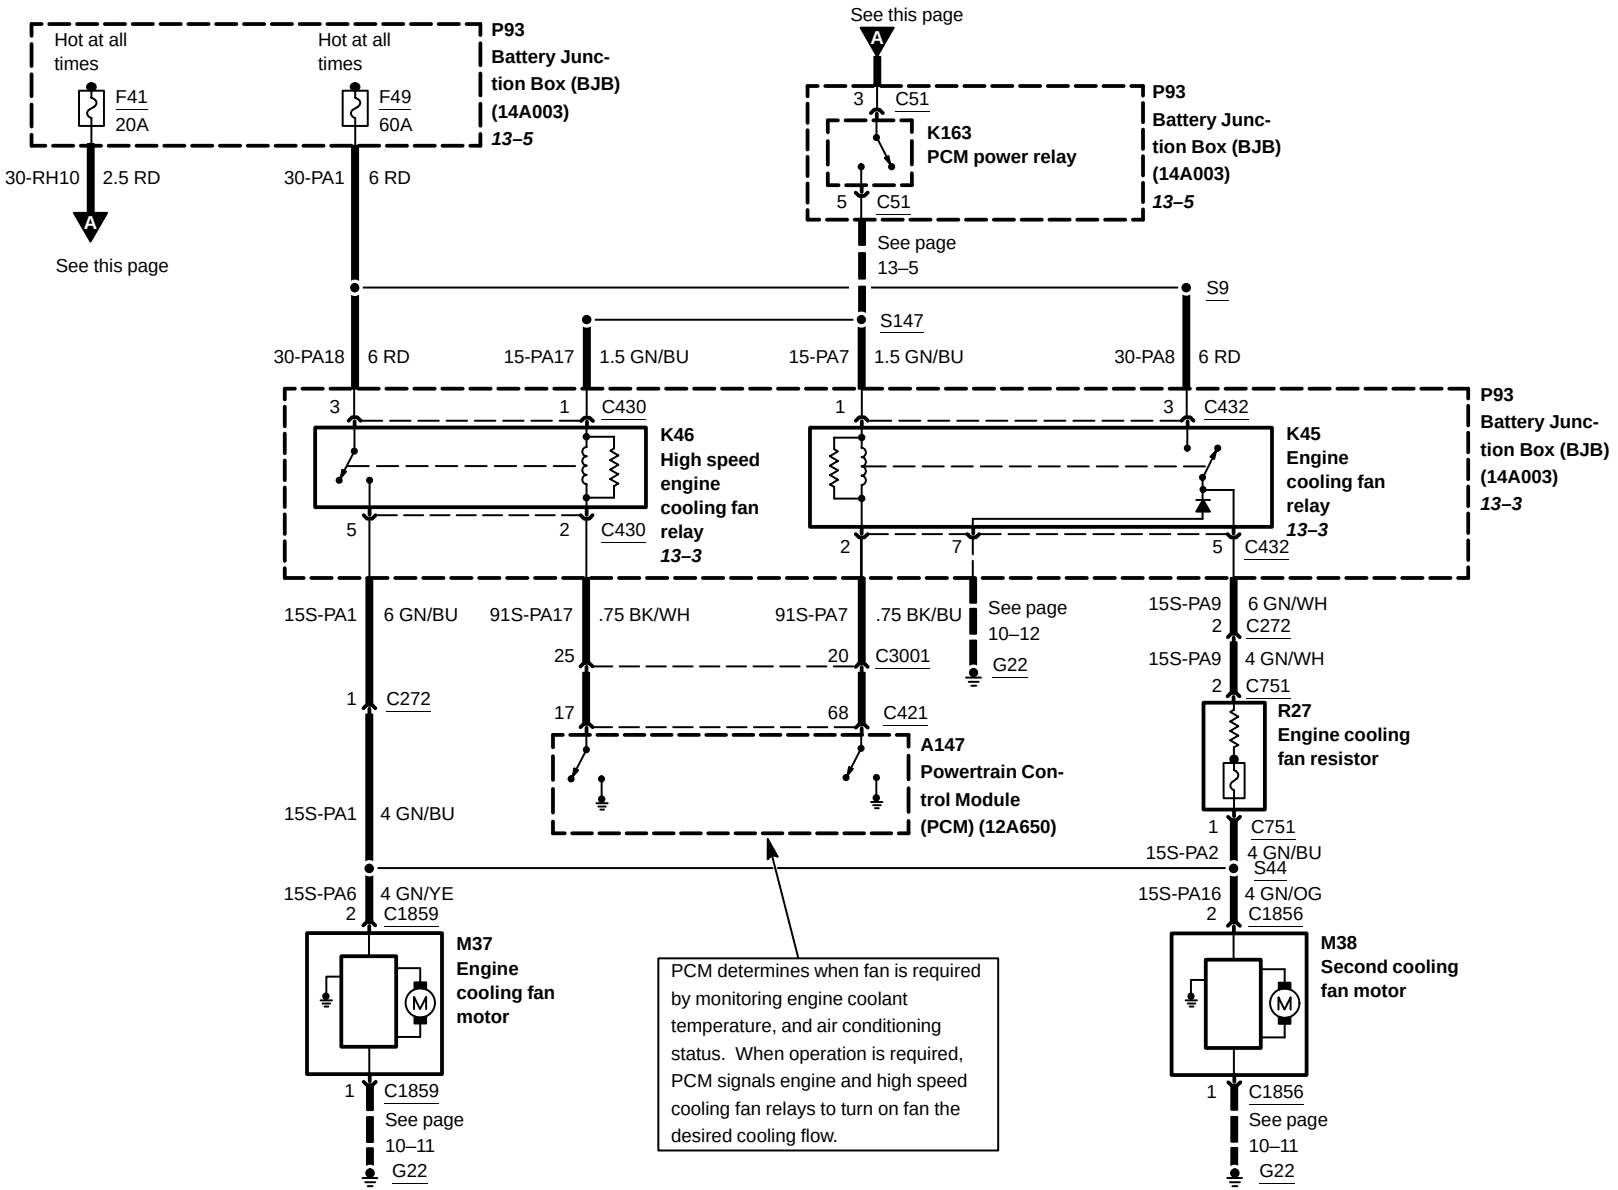
Hot at all times
F41
20A
Hot at all times
F49
60A
P93
Battery Junction Box (BJB)
(14A003)
13–5
30-RH10 2.5 RD
A
See this page
30-PA1 6 RD
See this page
A
3 C51
K163
PCM power relay
5 C51
P93
Battery Junction Box (BJB)
(14A003)
13–5
See page 13–5
S9
S147
30-PA18 6 RD
15-PA17 1.5 GN/BU
15-PA7 1.5 GN/BU
30-PA8 6 RD
3
1 C430
K46
High speed engine cooling fan relay
13–3
5
2 C430
1
3 C432
K45
Engine cooling fan relay
13–3
2
7
5 C432
P93
Battery Junction Box (BJB)
(14A003)
13–3
15S-PA1 6 GN/BU
91S-PA17 .75 BK/WH
91S-PA7 .75 BK/BU
See page 10–12
G22
25
20 C3001
1 C272
17
68 C421
A147
Powertrain Control Module (PCM) (12A650)
15S-PA9 6 GN/WH
2 C272
15S-PA9 4 GN/WH
2 C751
R27
Engine cooling fan resistor
15S-PA1 4 GN/BU
1 C751
15S-PA2 4 GN/BU
S44
15S-PA6 4 GN/YE
2 C1859
15S-PA16 4 GN/OG
2 C1856
M37
Engine cooling fan motor
M38
Second cooling fan motor
PCM determines when fan is required by monitoring engine coolant temperature, and air conditioning status. When operation is required, PCM signals engine and high speed cooling fan relays to turn on fan the desired cooling flow.
1 C1859
See page 10–11
G22
1 C1856
See page 10–11
G22