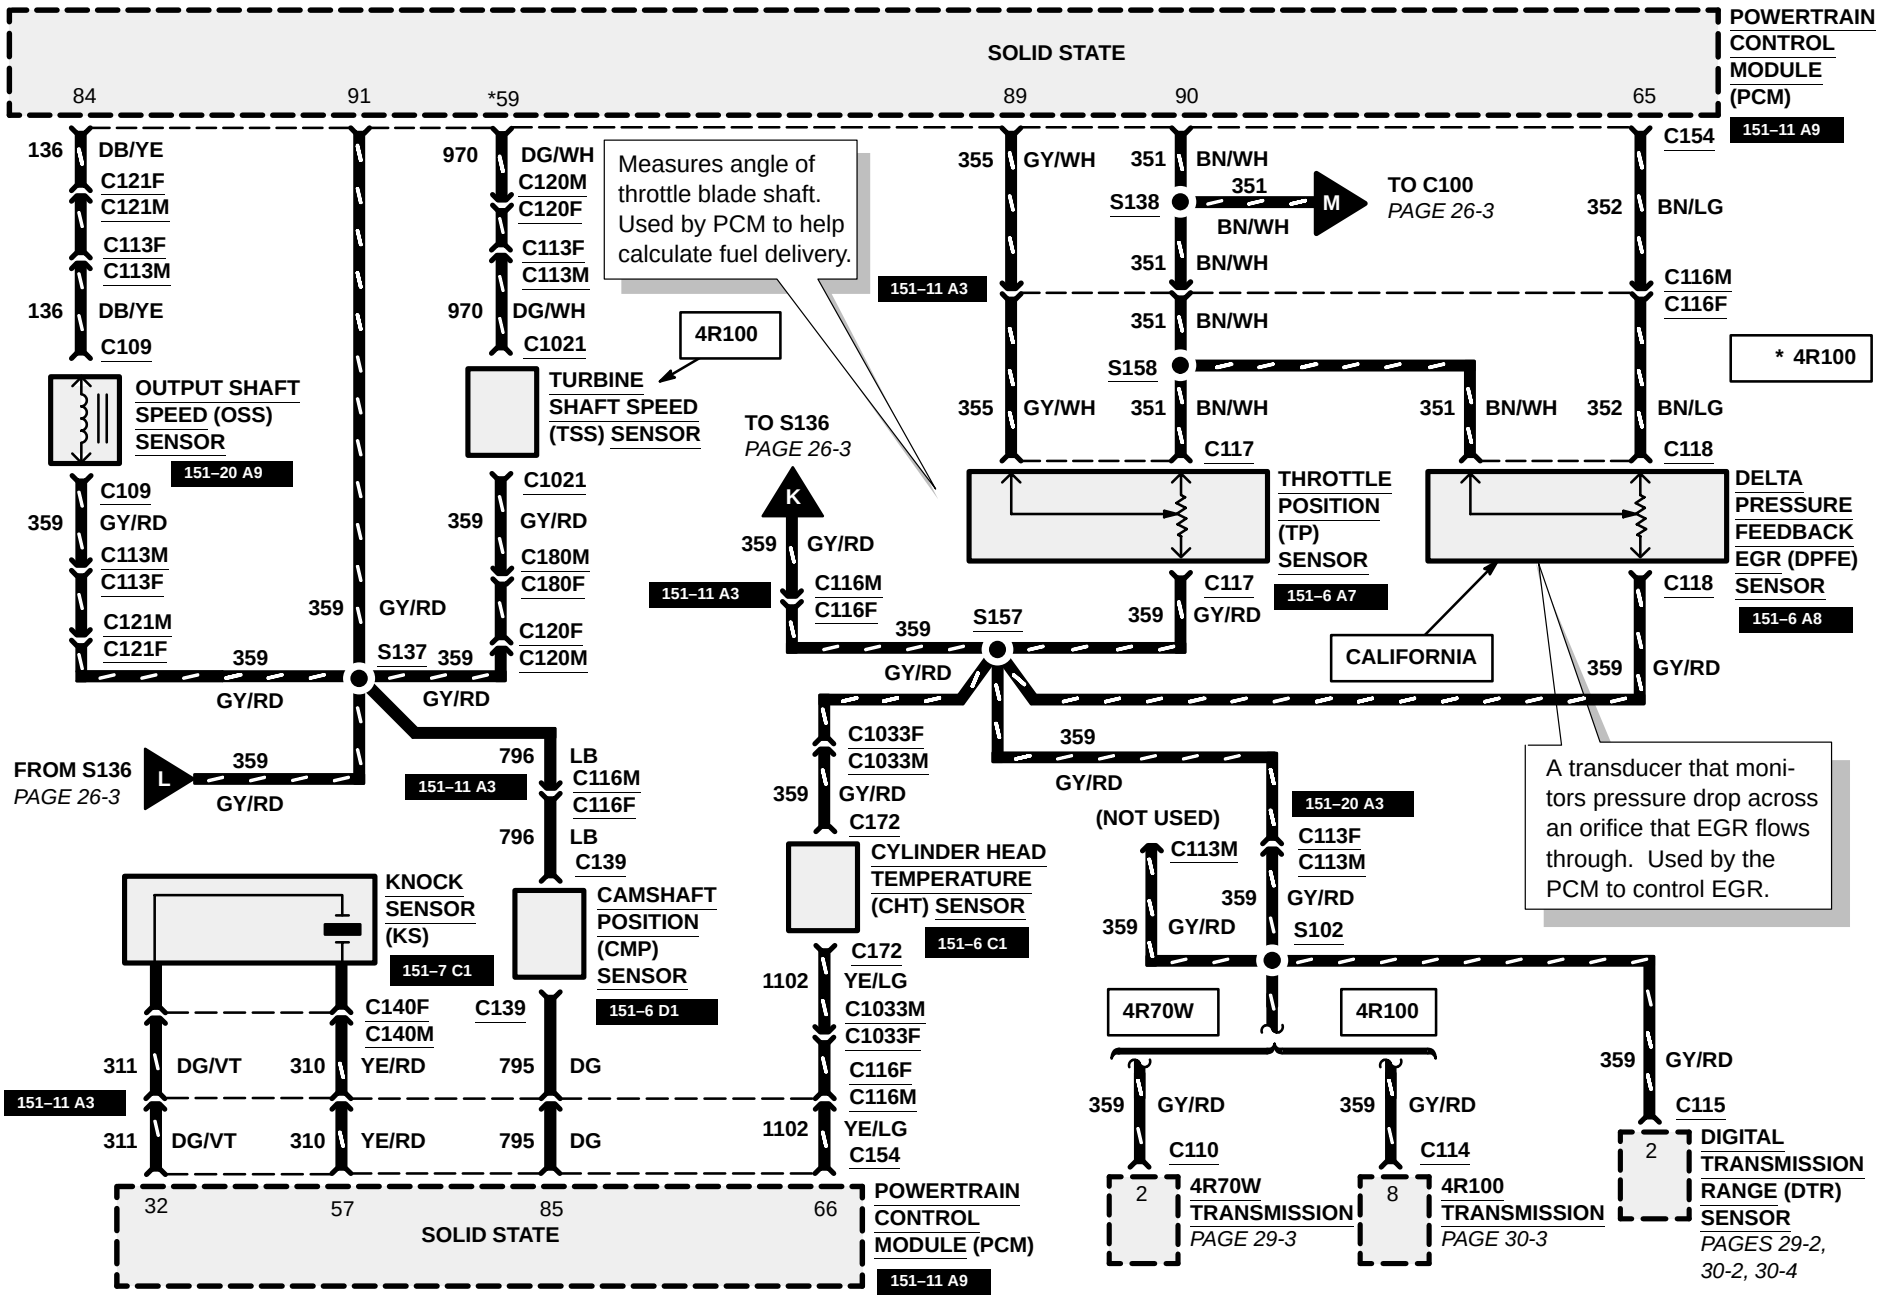
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
84
91
*59
89
90
65
136 DB/YE
C121F
C121M
C113F
C113M
136 DB/YE
C109
OUTPUT SHAFT SPEED (OSS) SENSOR
151–20 A9
C109
359 GY/RD
C113M
C113F
C121M
C121F
359 GY/RD
359 GY/RD
S137
359 GY/RD
970 DG/WH
C120M
C120F
C113F
C113M
970 DG/WH
C1021
4R100
TURBINE SHAFT SPEED (TSS) SENSOR
C1021
359 GY/RD
C180M
C180F
C120F
C120M
Measures angle of throttle blade shaft. Used by PCM to help calculate fuel delivery.
TO S136
PAGE 26-3
K
359 GY/RD
C116M
C116F
151–11 A3
359 GY/RD
S157
359 GY/RD
355 GY/WH
351 BN/WH
S138
351 BN/WH
M
TO C100
PAGE 26-3
351 BN/WH
151–11 A3
355 GY/WH
351 BN/WH
S158
351 BN/WH
C117
THROTTLE POSITION (TP) SENSOR
151–6 A7
C117
359 GY/RD
C154
352 BN/LG
C116M
C116F
* 4R100
351 BN/WH
352 BN/LG
C118
DELTA PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–6 A8
C118
359 GY/RD
CALIFORNIA
A transducer that monitors pressure drop across an orifice that EGR flows through. Used by the PCM to control EGR.
FROM S136
PAGE 26-3
L
359 GY/RD
796 LB
C116M
C116F
151–11 A3
796 LB
C139
C1033F
C1033M
359 GY/RD
C172
CYLINDER HEAD TEMPERATURE (CHT) SENSOR
151–6 C1
359 GY/RD
(NOT USED)
C113M
359 GY/RD
S102
C113F
C113M
151–20 A3
KNOCK SENSOR (KS)
151–7 C1
CAMSHAFT POSITION (CMP) SENSOR
151–6 D1
C140F
C140M
C139
C172
1102 YE/LG
C1033M
C1033F
C116F
C116M
1102 YE/LG
C154
311 DG/VT
310 YE/RD
795 DG
151–11 A3
311 DG/VT
310 YE/RD
795 DG
4R70W
4R100
359 GY/RD
359 GY/RD
C110
359 GY/RD
C114
359 GY/RD
C115
2
4R70W TRANSMISSION
PAGE 29-3
8
4R100 TRANSMISSION
PAGE 30-3
2
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGES 29-2, 30-2, 30-4
32
57
85
66
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9