C911

14334

Electrochromatic inside mirror unit (17700)

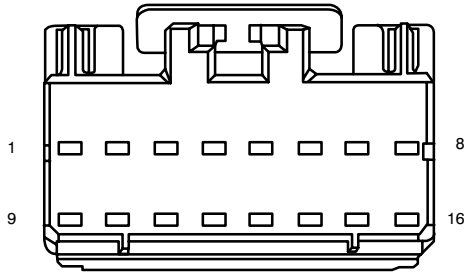

F16143

Pin	Circuit	Circuit function
1	–	Voltage, hot in run only
2	31-AD15 (BK)	Ground
3	8-AD15 (WH/BU)	Voltage supplied in reverse
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	9-AD15 (BN/BU)	Electrochromatic inside mirror unit (17700) -
9	8-MC8 (WH/RD)	Microphone +
10	9-MC8 (BN/RD)	Microphone +
11	–	not used
12	7-AD15 (YE/BU)	Electrochromatic inside mirror unit (17700) +
13	75-AD15 (YE/BU)	Voltage in Run or Accessory (overload protected)
14	–	not used
15	–	not used
16	–	not used

C912

14334

Roof opening panel switch (15B691)

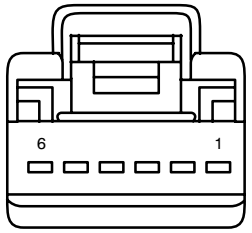

F006179

Pin	Circuit	Circuit function
1	–	not used
2	32-AG10 (WH/BU)	Roof opening panel switch (15B691) - Slide, Up
3	9-AG7 (BN/RD)	Roof opening panel switch (15B691) - common
4	32-AG12 (WH/GN)	Roof opening panel switch (15B691) - Tilt
5	33-AG10 (YE/BU)	Roof opening panel switch (15B691) - Slide, Close
6	–	not used