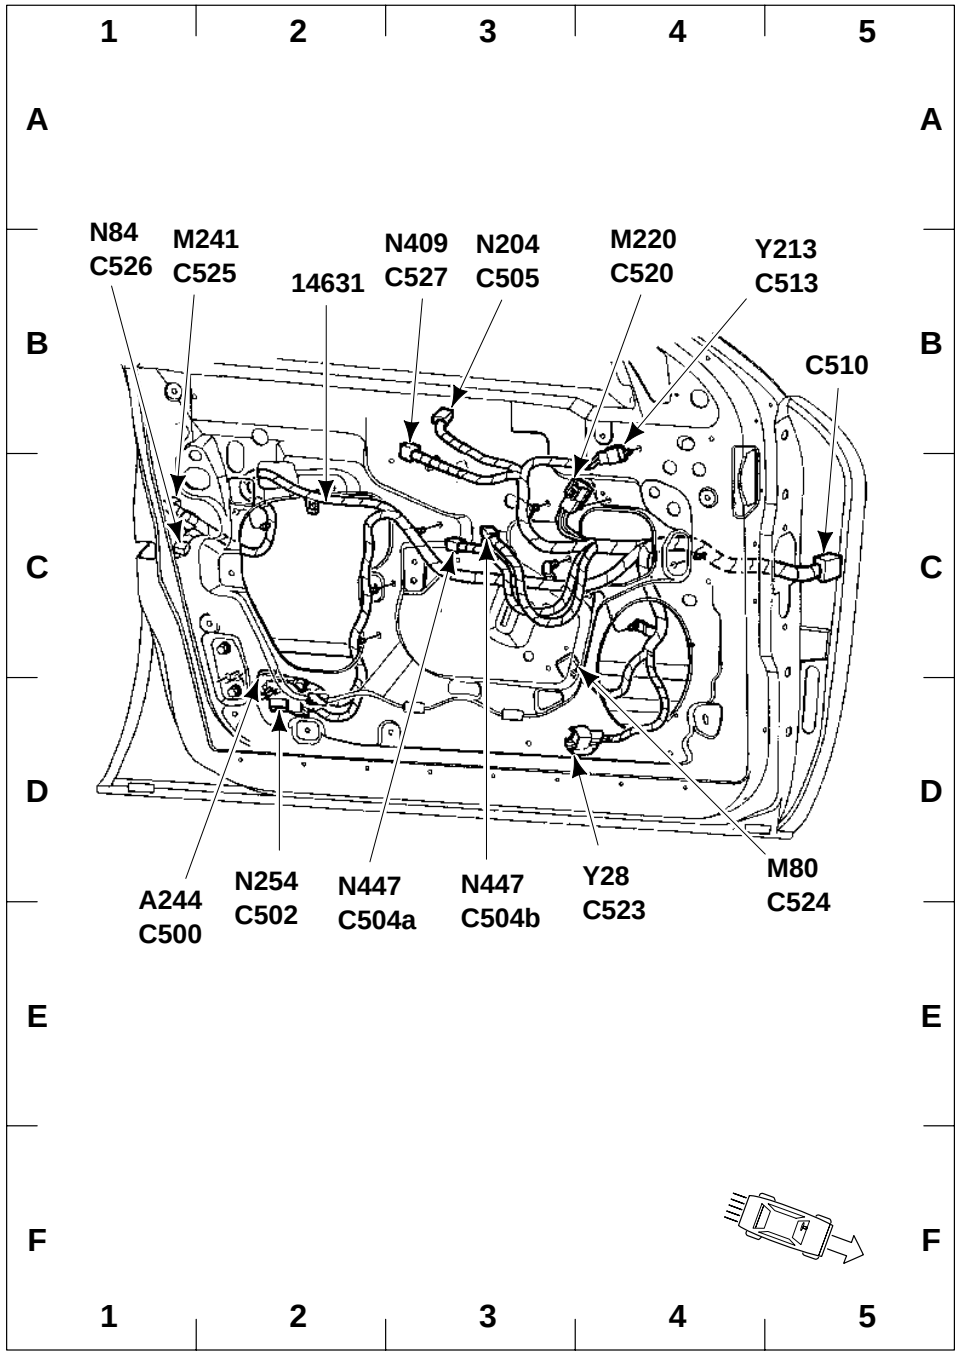

left front door

14631		B 2
A244	Key pad switch assembly	E 1
C500		E 1
C502		E 2
C504a		E 2
C504b		E 3
C505		B 3
C510		B 5
C513		B 5
C520		B 4
C523		E 4
C524		E 5
C525		B 2
C526		B 1
C527		B 3
M80	Power window motor, driver side front (23395)	D 5
M220	Exterior rear view mirror, driver side (17682)	B 4
M241	Door lock actuator, left front	B 2
N84	Door ajar switch, left front	B 1
N204	Door lock switch, driver side (14028)	B 3
N254	Lock cylinder switch, left	D 2
N409	Exterior rear view mirror switch (17B676)	B 3
N447	Master window adjust switch	D 2
N447	Master window adjust switch	D 3
Y28	Speaker, left front (18808)	D 4
Y213	Tweeter, left front	B 5