C177

14398

B411
Front impact severity sensor

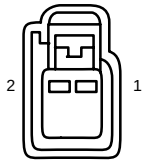

F02221

Pin	Circuit	Circuit function
1	618 (VT/LG)	Front impact severity sensor, to module
2	617 (PK/OG)	Front impact severity sensor, to module

C179

12B637

Y33
Electr. Vacuum Regulator (EVR) solenoid valve

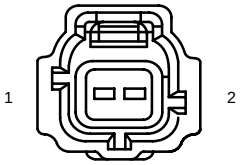

F02101

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	360 (BN/PK)	EGR Vacuum Regulator (EVR), control

C180

12B637

B41
Camshaft position sensor (6B288)

F02371

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	795 (DG)	Camshaft position sensor (6B288) to Powertrain Control Module (PCM) (12A650)

C181

12B637

Y108
Fuel injector 1 (9F593)

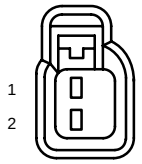

F02058

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C182

12B637

Y109
Fuel injector 2 (9F593)

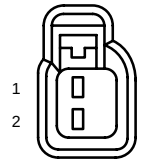

F02058

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C183

12B637

Y110
Fuel injector 3 (9F593)

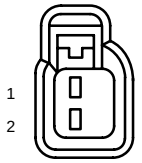

F02058

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)