160-1 VEHICLE REPAIR LOCATION CODES

VEHICLE REPAIR LOCATION CODES

TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR, THE VEHICLE REPAIR LOCATION CODE IS REQUIRED.

FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.

LOCATION CODE, FOR THE EXAMPLE: A5/FU – (UNDER THE FLOOR OF DRIVER'S LEFT FOOT.)

FRONT/REAR DIRECTION

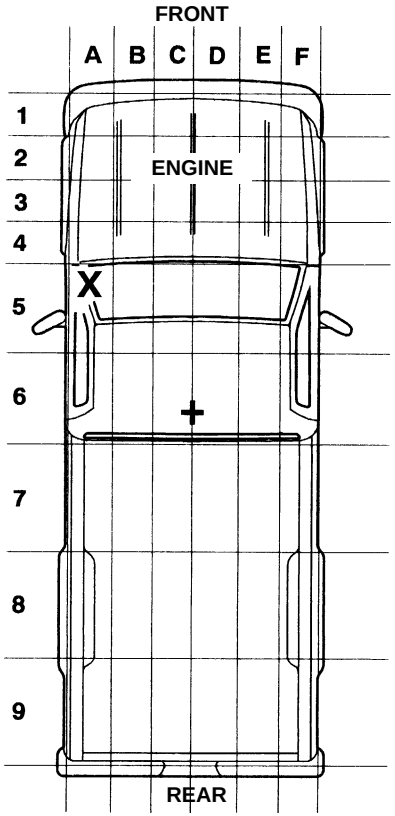

+ CENTER OF VEHICLE

OVER/UNDER DIRECTION

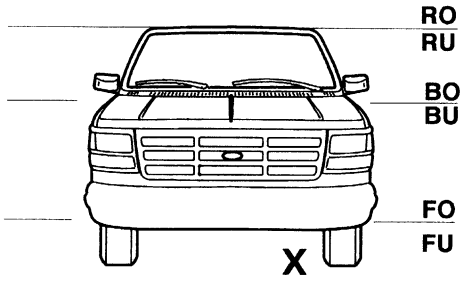

R = ROOF LINE
- RO = ROOF OVER
- RU = ROOF UNDER

B = BELT LINE
- BO = BELT OVER
- BU = BELT UNDER

F = FLOOR PAN
- FO = FLOOR OVER
- FU = FLOOR UNDER

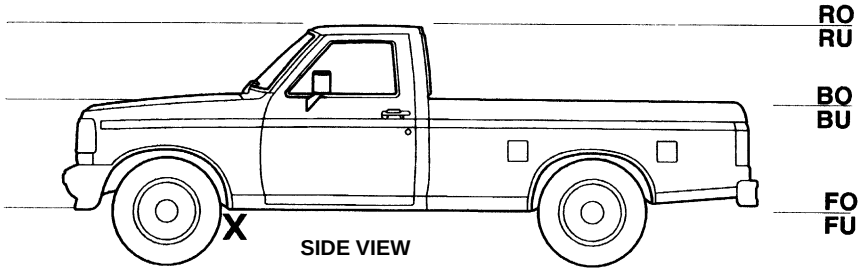

SIDE VIEW

EXCURSION, SUPER DUTY SERIES
F-250, F-350, F-450, F-550
FCS-12254-01