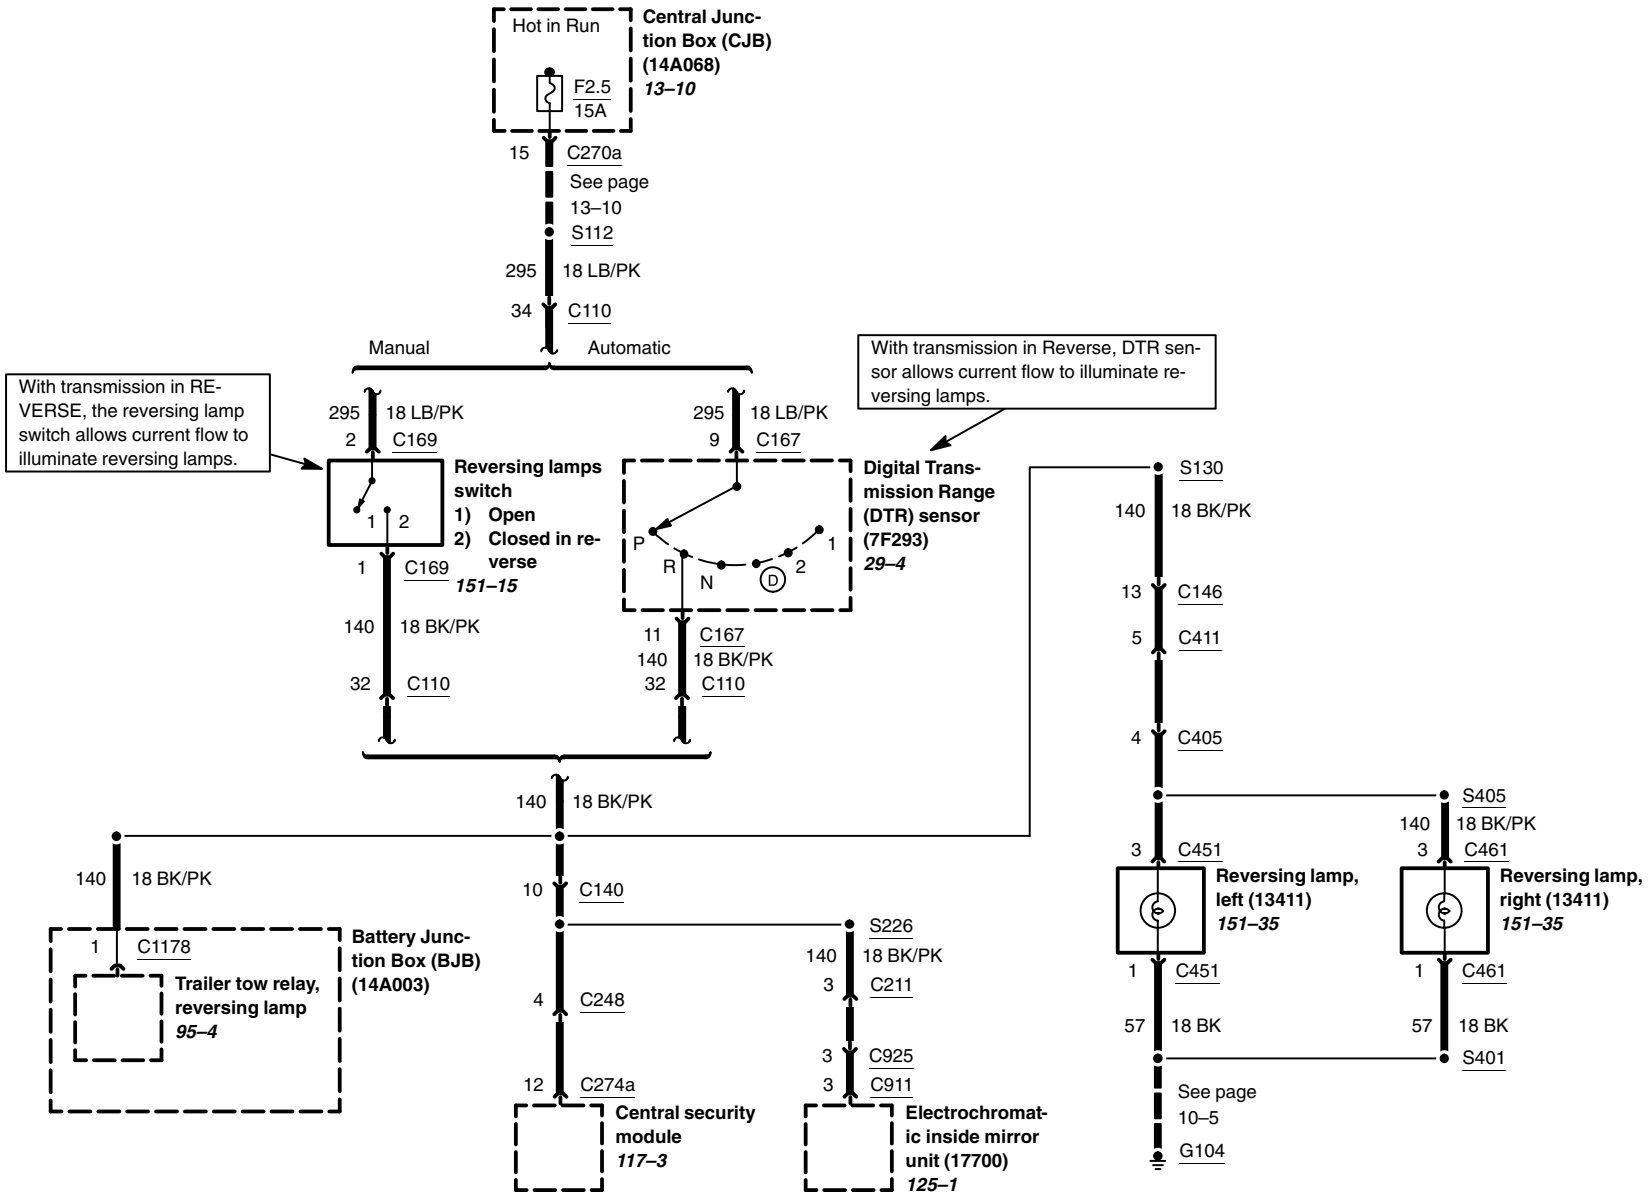
Hot in Run
Central Junction Box (CJB) (14A068) 13–10
F2.5 15A
15 C270a
See page 13–10
S112
295 18 LB/PK
34 C110
Manual
Automatic
With transmission in REVERSE, the reversing lamp switch allows current flow to illuminate reversing lamps.
With transmission in Reverse, DTR sensor allows current flow to illuminate reversing lamps.
295 18 LB/PK
2 C169
Reversing lamps switch
1) Open
2) Closed in reverse
1 C169 151–15
140 18 BK/PK
32 C110
295 18 LB/PK
9 C167
Digital Transmission Range (DTR) sensor (7F293) 29–4
P R N D 1 2
11 C167
140 18 BK/PK
32 C110
140 18 BK/PK
S130
140 18 BK/PK
13 C146
5 C411
4 C405
S405
140 18 BK/PK
3 C451
3 C461
Reversing lamp, left (13411) 151–35
Reversing lamp, right (13411) 151–35
1 C451
1 C461
57 18 BK
57 18 BK
S401
See page 10–5
G104
140 18 BK/PK
10 C140
140 18 BK/PK
1 C1178
Trailer tow relay, reversing lamp 95–4
Battery Junction Box (BJB) (14A003)
S226
140 18 BK/PK
3 C211
4 C248
3 C925
3 C911
12 C274a
Central security module 117–3
Electrochromatic inside mirror unit (17700) 125–1