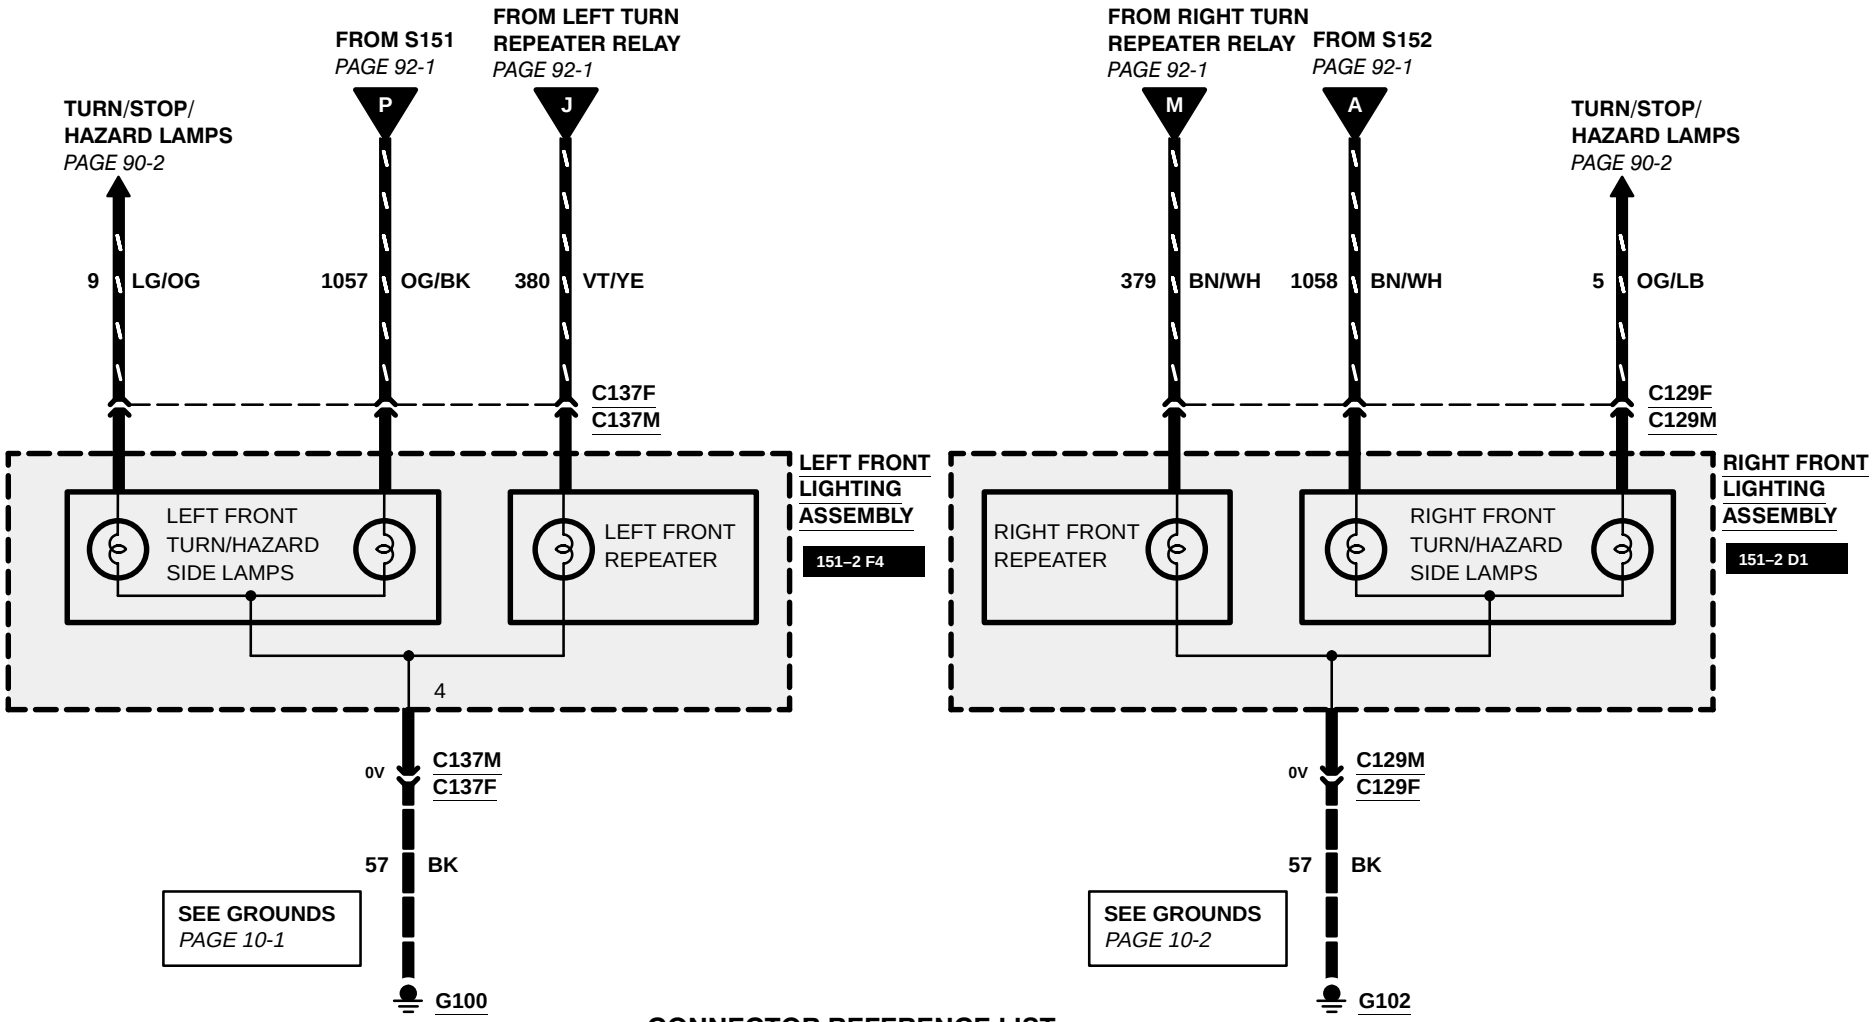

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C129	90-5
C137	90-5
C210	85-4
C217	90-6

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.