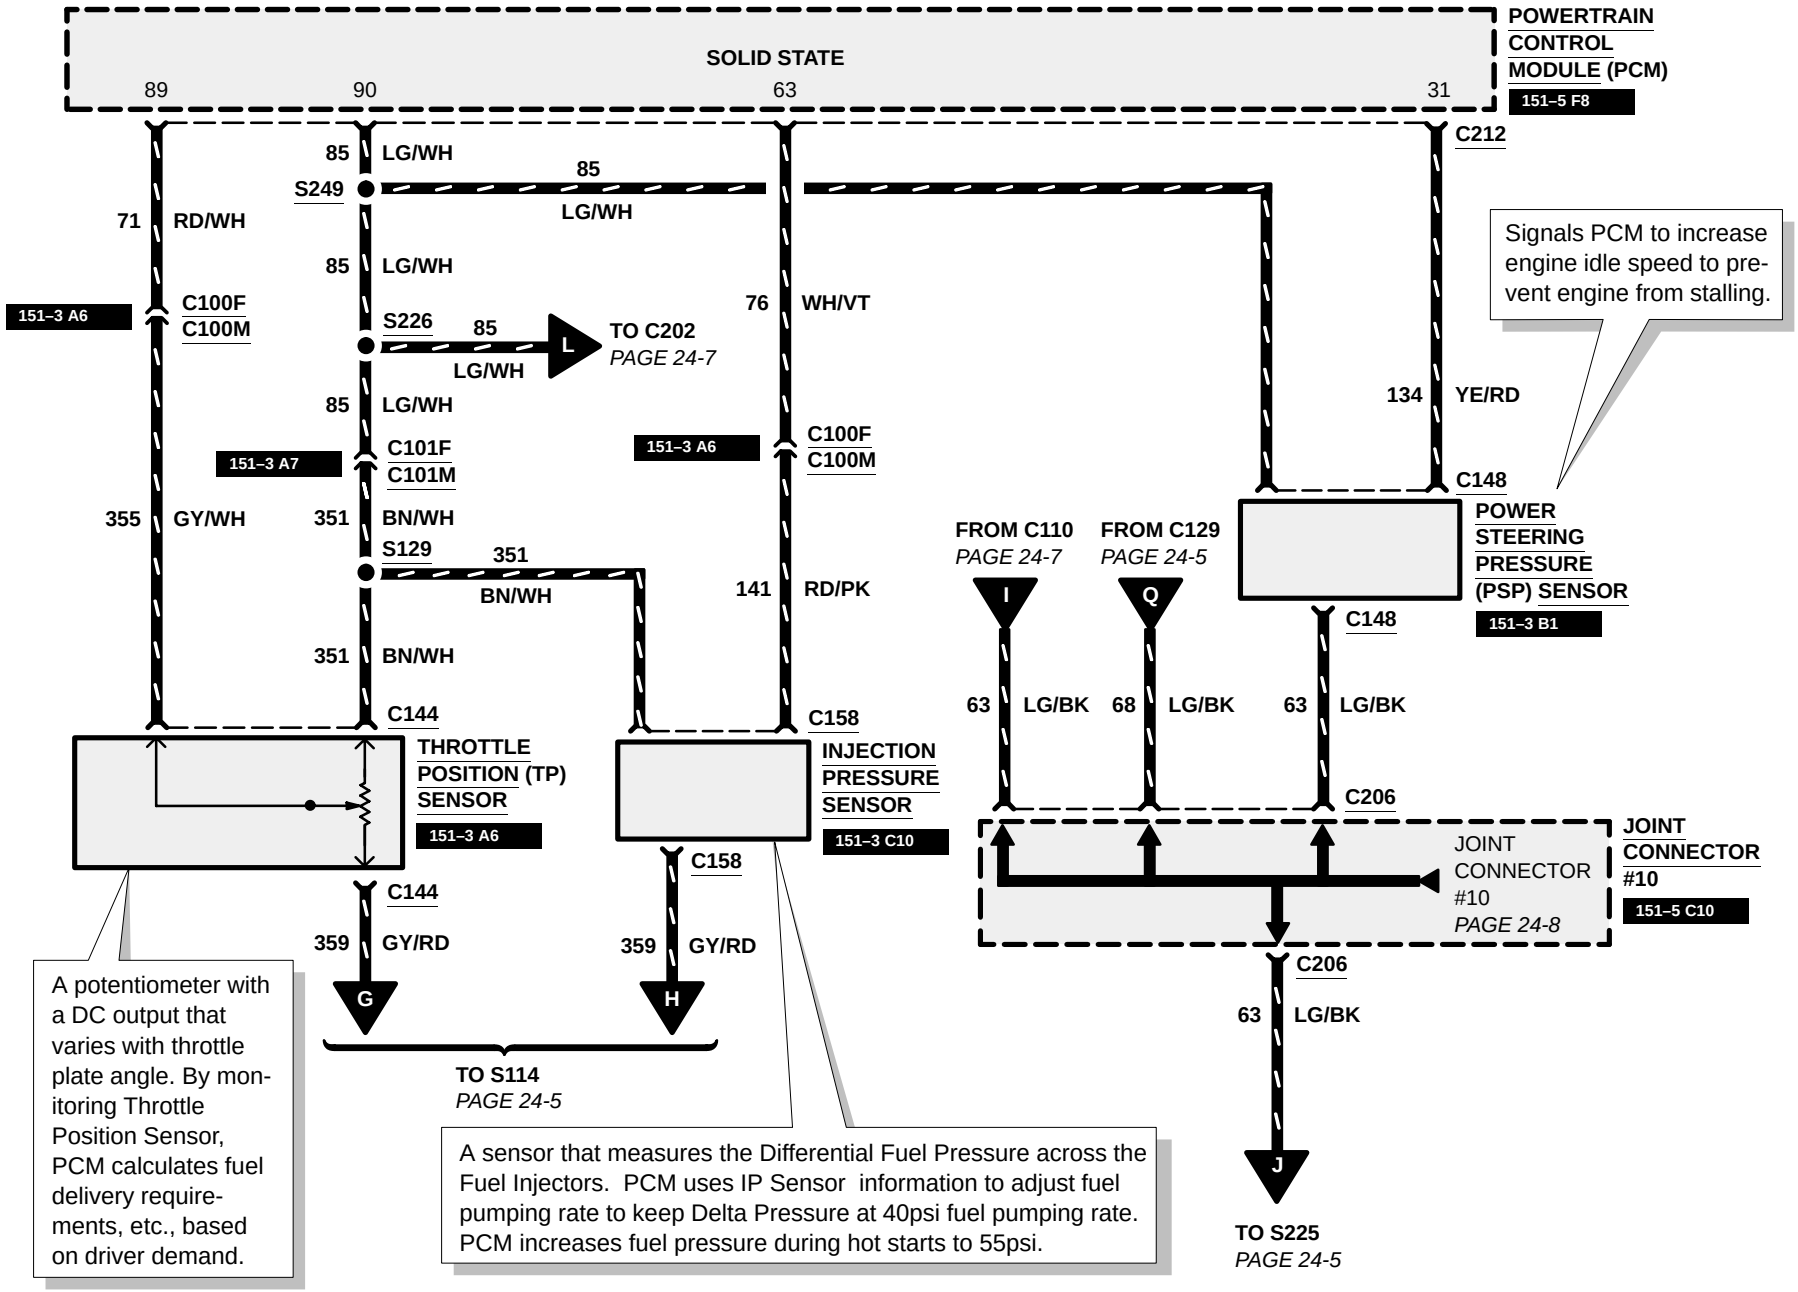
SOLID STATE
89
90
63
31
POWERTRAIN CONTROL MODULE (PCM)
151–5 F8
85 LG/WH
S249
85 LG/WH
71 RD/WH
85 LG/WH
151–3 A6
C100F
C100M
S226
85 LG/WH
L
TO C202
PAGE 24-7
85 LG/WH
151–3 A7
C101F
C101M
355 GY/WH
351 BN/WH
S129
351 BN/WH
351 BN/WH
C144
76 WH/VT
151–3 A6
C100F
C100M
141 RD/PK
C158
C212
134 YE/RD
C148
POWER STEERING PRESSURE (PSP) SENSOR
151–3 B1
FROM C110
PAGE 24-7
FROM C129
PAGE 24-5
I
Q
C148
63 LG/BK
68 LG/BK
63 LG/BK
C206
THROTTLE POSITION (TP) SENSOR
151–3 A6
INJECTION PRESSURE SENSOR
151–3 C10
JOINT CONNECTOR #10
PAGE 24-8
JOINT CONNECTOR #10
151–5 C10
C144
359 GY/RD
G
C158
359 GY/RD
H
TO S114
PAGE 24-5
C206
63 LG/BK
J
TO S225
PAGE 24-5
Signals PCM to increase engine idle speed to prevent engine from stalling.
A potentiometer with a DC output that varies with throttle plate angle. By monitoring Throttle Position Sensor, PCM calculates fuel delivery requirements, etc., based on driver demand.
A sensor that measures the Differential Fuel Pressure across the Fuel Injectors. PCM uses IP Sensor information to adjust fuel pumping rate to keep Delta Pressure at 40psi fuel pumping rate. PCM increases fuel pressure during hot starts to 55psi.