C148

14A584

M67
Door lock motor,
driver side

F08083

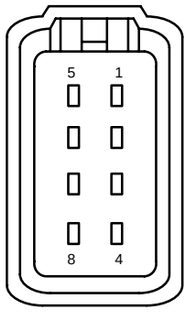

Pin	Circuit	Circuit Function
1	33-AA59A (YE/BK)	Switched between: Battery voltage, Ground or Open
	33-AA59 (YE/BK)	Switched between: Battery voltage, Ground or Open
	33-AA59B (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-AA59A (WH/BK)	Switched between: Battery voltage, Ground or Open
	32-AA59 (WH/BK)	Switched between: Battery voltage, Ground or Open
	32-AA59B (WH/BK)	Switched between: Battery voltage, Ground or Open
3	33-AA60A (YE)	Switched between: Battery voltage, Ground or Open
	33-AA60 (YE)	Switched between: Battery voltage, Ground or Open
	33-AA60B (YE)	Switched between: Battery voltage, Ground or Open
4	31S-AA64A (BK/GN)	Ground, switched
	31S-AA64B (BK/GN)	Ground, switched
5	31S-AA61A (BK/BU)	Ground, switched
	31S-AA61B (BK/BU)	Ground, switched
6	31-AA58A (BK)	Ground
	31-AA58B (BK)	Ground
7	31S-AA62A (BK/WH)	Ground, switched
	31S-AA62B (BK/WH)	Ground, switched
8	31S-AA63A (BK/OG)	Ground, switched
	31S-AA63B (BK/OG)	Ground, switched