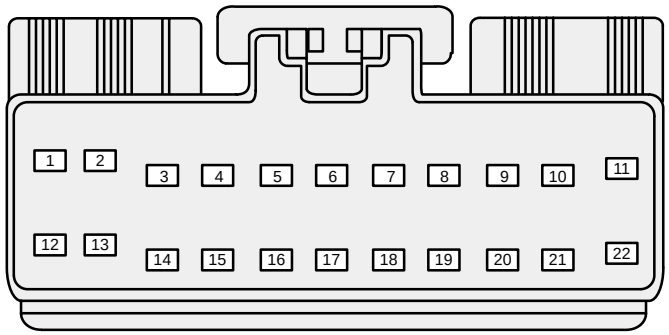

C372

DRIVER SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1480 (WH/LG)	RH Mirror L/R Motor Left Feed
2	1481 (DG)	RH Mirror L/R Motor Right Feed
3	270 (BN/OG)	Memory Set Switch Set Signal
4	1482 (PK)	RH Mirror Up/Down Motor Up Feed
5	1483 (WH/PK)	RH Mirror Up/Down Motor Down Feed
6	1484 (YE/RD)	LH Mirror L/R Motor Left Feed
7	1485 (RD)	LH Mirror L/R Motor Right Feed
8	949 (RD/WH)	LH Mirror L/R Position Sensor Signal
9	1487 (DB)	LH Mirror Up/Down Motor Down Feed
10	1486 (YE/LB)	LH Mirror Up/Down Motor Up Feed
11	1205 (BK)	Ground
12	956 (OG/LG)	Power (Hot at All Times)
13	272 (WH/OG)	Memory Set Switch Lamp Drive
14	958 (GY/RD)	Mirror Position Sensor Feed
15	268 (BK/OG)	Memory Set Switch Position #2
16	267 (BN/LG)	Memory Set Switch Position #1
17	957 (VT/WH)	RH Mirror Up/Down Position Sensor Signal
18	954 (DG/WH)	RH Mirror L/R Position Sensor Signal
19	951 (DB/WH)	LH Mirror Up/Down Position Sensor Signal
20	1434 (LB/PK)	REM Park Status Output
21	955 (GY)	Mirror Position Sensor Return
22	70 (LB/WH)	Data Link Connector (DLC)

W/MEMORY

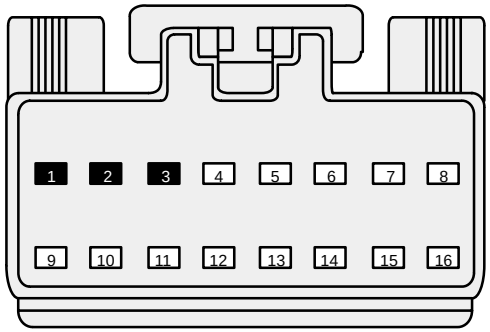

C373

DRIVER SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	–	NOT USED
3	–	NOT USED
4	544 (VT)	RH Mirror Up/Down Switch Signal
5	540 (RD)	LH Mirror Left/Right Switch Signal
6	1545 (OG)	Left/Right Up/Down Switch Common
7	543 (DG)	RH Mirror Left/Right Switch Signal
8	541 (DB)	LH Mirror Up/Down Switch Signal
9	1494 (RD)	Adjustable Pedal Switch Forward
10	1495 (WH)	Adjustable Pedal Switch Rearward
11	1463 (RD/YE)	Seat Front Up Switch Signal
12	1464 (YE)	Seat Front Down Switch Signal
13	1465 (GY/WH)	Seat Rearward Switch Signal
14	1466 (GY/OG)	Seat Forward Switch Signal
15	1468 (GY/LB)	Seat Rear Up Switch Signal
16	1467 (GY/YE)	Seat Rear Down Switch Signal