C627

14A005

N217
Seat adjust switch,
passenger side front

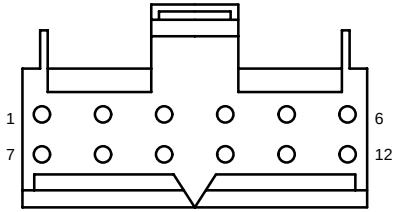

F12018

Pin	Circuit	Circuit function
1	988 (YE/LG)	Seat adjust switch, to, rear, Tilt, Seat motor
2	989 (RD/LG)	Seat adjust switch, to, rear, Tilt, Seat motor
3	–	not used
4	919 (GY/BK)	Seat regulator feed, Up/Down Circuit
5	918 (GY)	Seat regulator feed, Up/Down Circuit
6	985 (RD/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
7	490 (RD)	Fused battery feed, Hot at all times
8	987 (RD/WH)	Seat adjust switch, to, Passenger seat horizontal motor
9	–	not used
10	986 (YE/WH)	Seat adjust switch, to, Passenger seat horizontal motor
11	984 (YE/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
12	57 (BK)	Ground

C630

14A005

N275
Seat heater switch,
passenger side

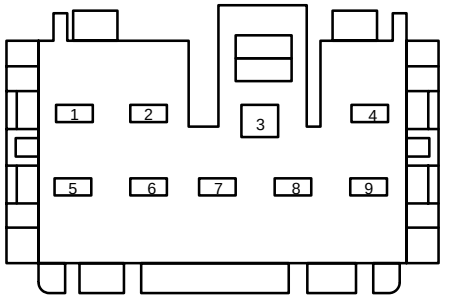

F09031

Pin	Circuit	Circuit function
1	484 (OG/BK)	Headlamp switch, on input
2	1040 (RD/BK)	Voltage in Run (overload protected)
3	–	not used
4	57 (BK)	Ground
5	57 (BK)	Ground
6	581 (RD)	Seat heater switch, passenger side, to, Heated seat module, passenger side front
7	461 (OG)	Electronic Automatic Temperature Control (EATC) module (19980), to, Heated seat module, passenger side front
8	579 (BK/OG)	Heated seats
9	580 (BN)	Heated seats

C700

14A005

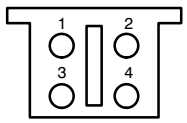

F04271

(1) 484 (OG/BK)
(2) 53 (BK/LG)

14A511

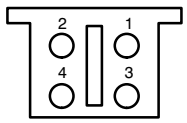

F04271

(3) 1523 (DG)
(4) 57 (BK)