12-1 CHARGING SYSTEM

2001 EXPLORER/MOUNTAINEER

For diagnostic information, refer to Section 414-00 of the Workshop Manual.

*** 4.0L EI**

With voltage applied, regulator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator, this voltage (typically half battery voltage), is used by regulator to turn off indicator.

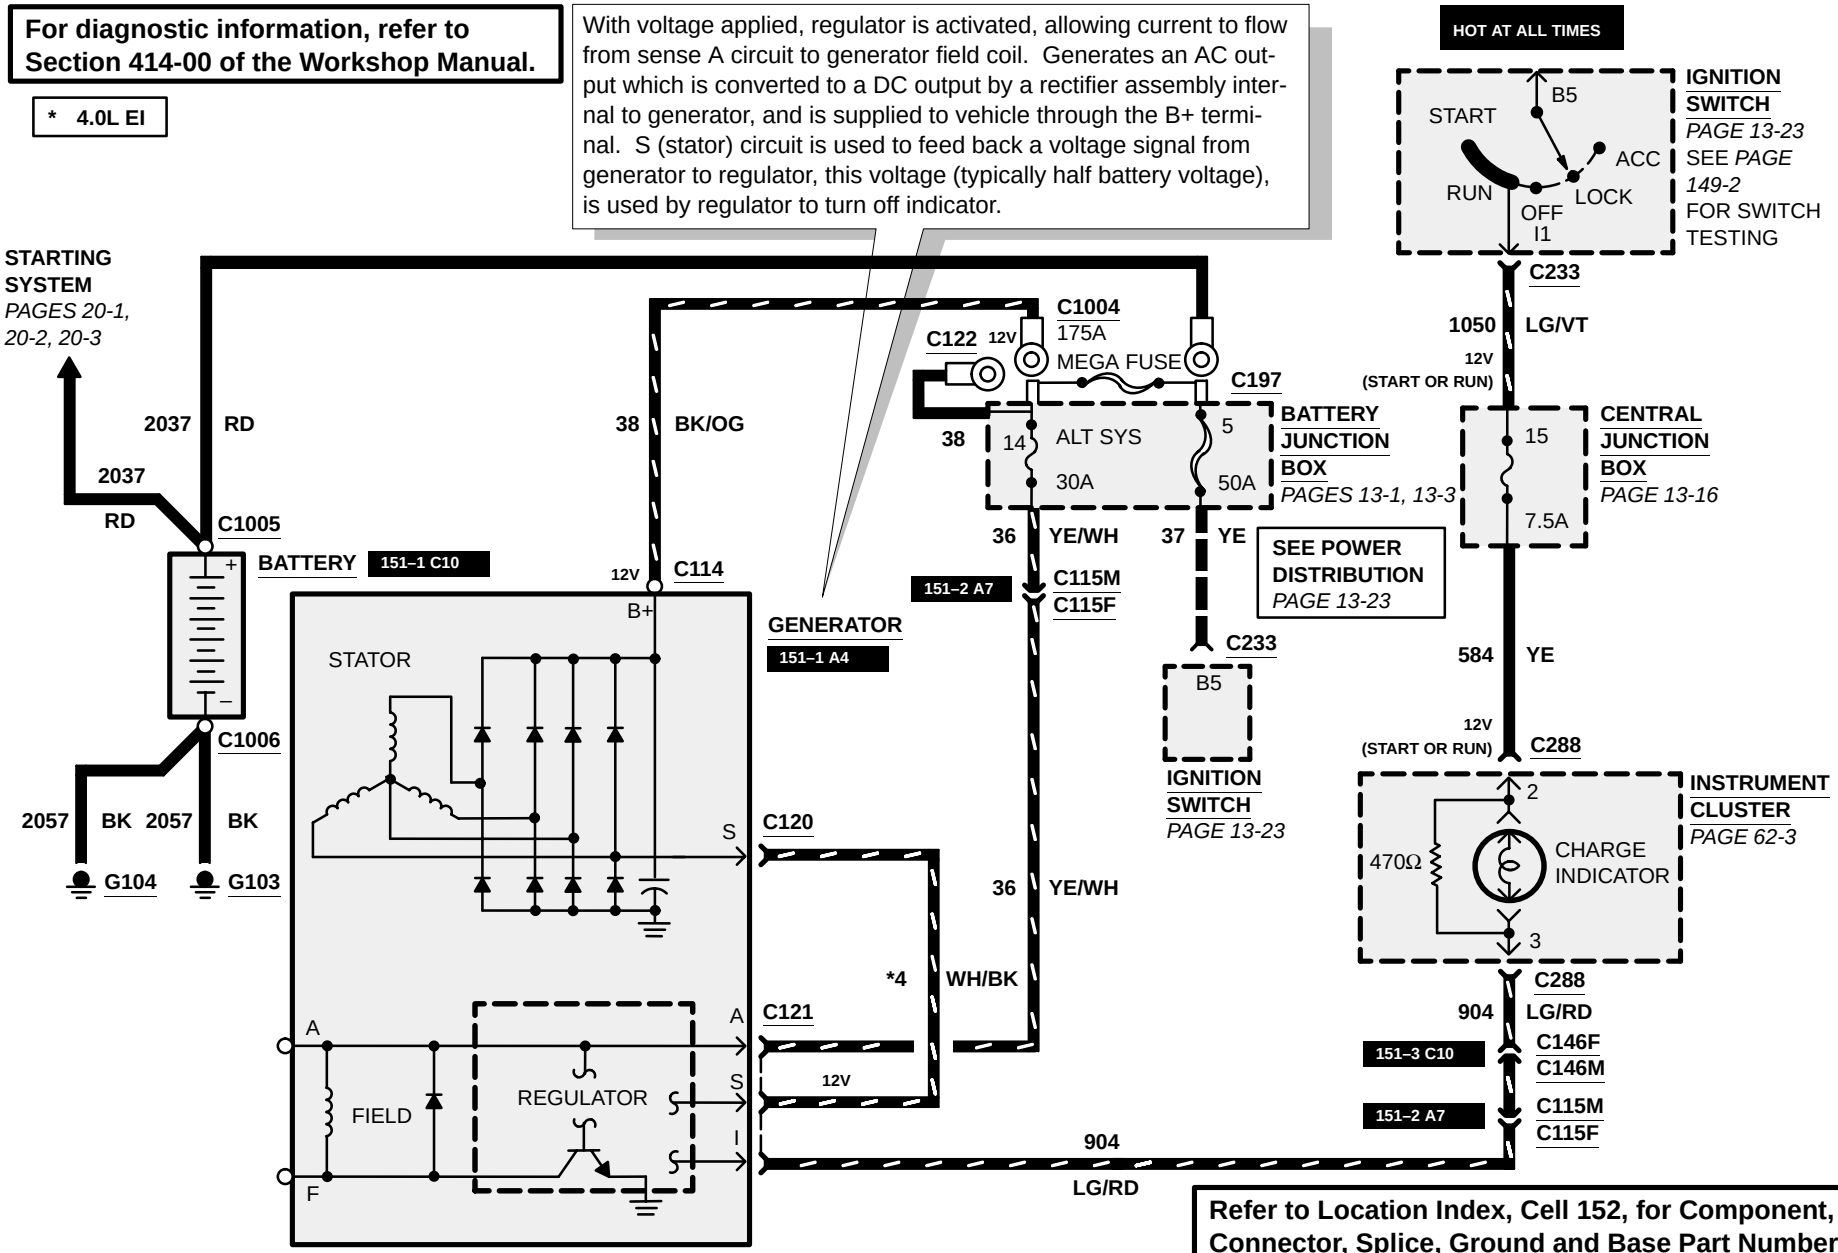

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.