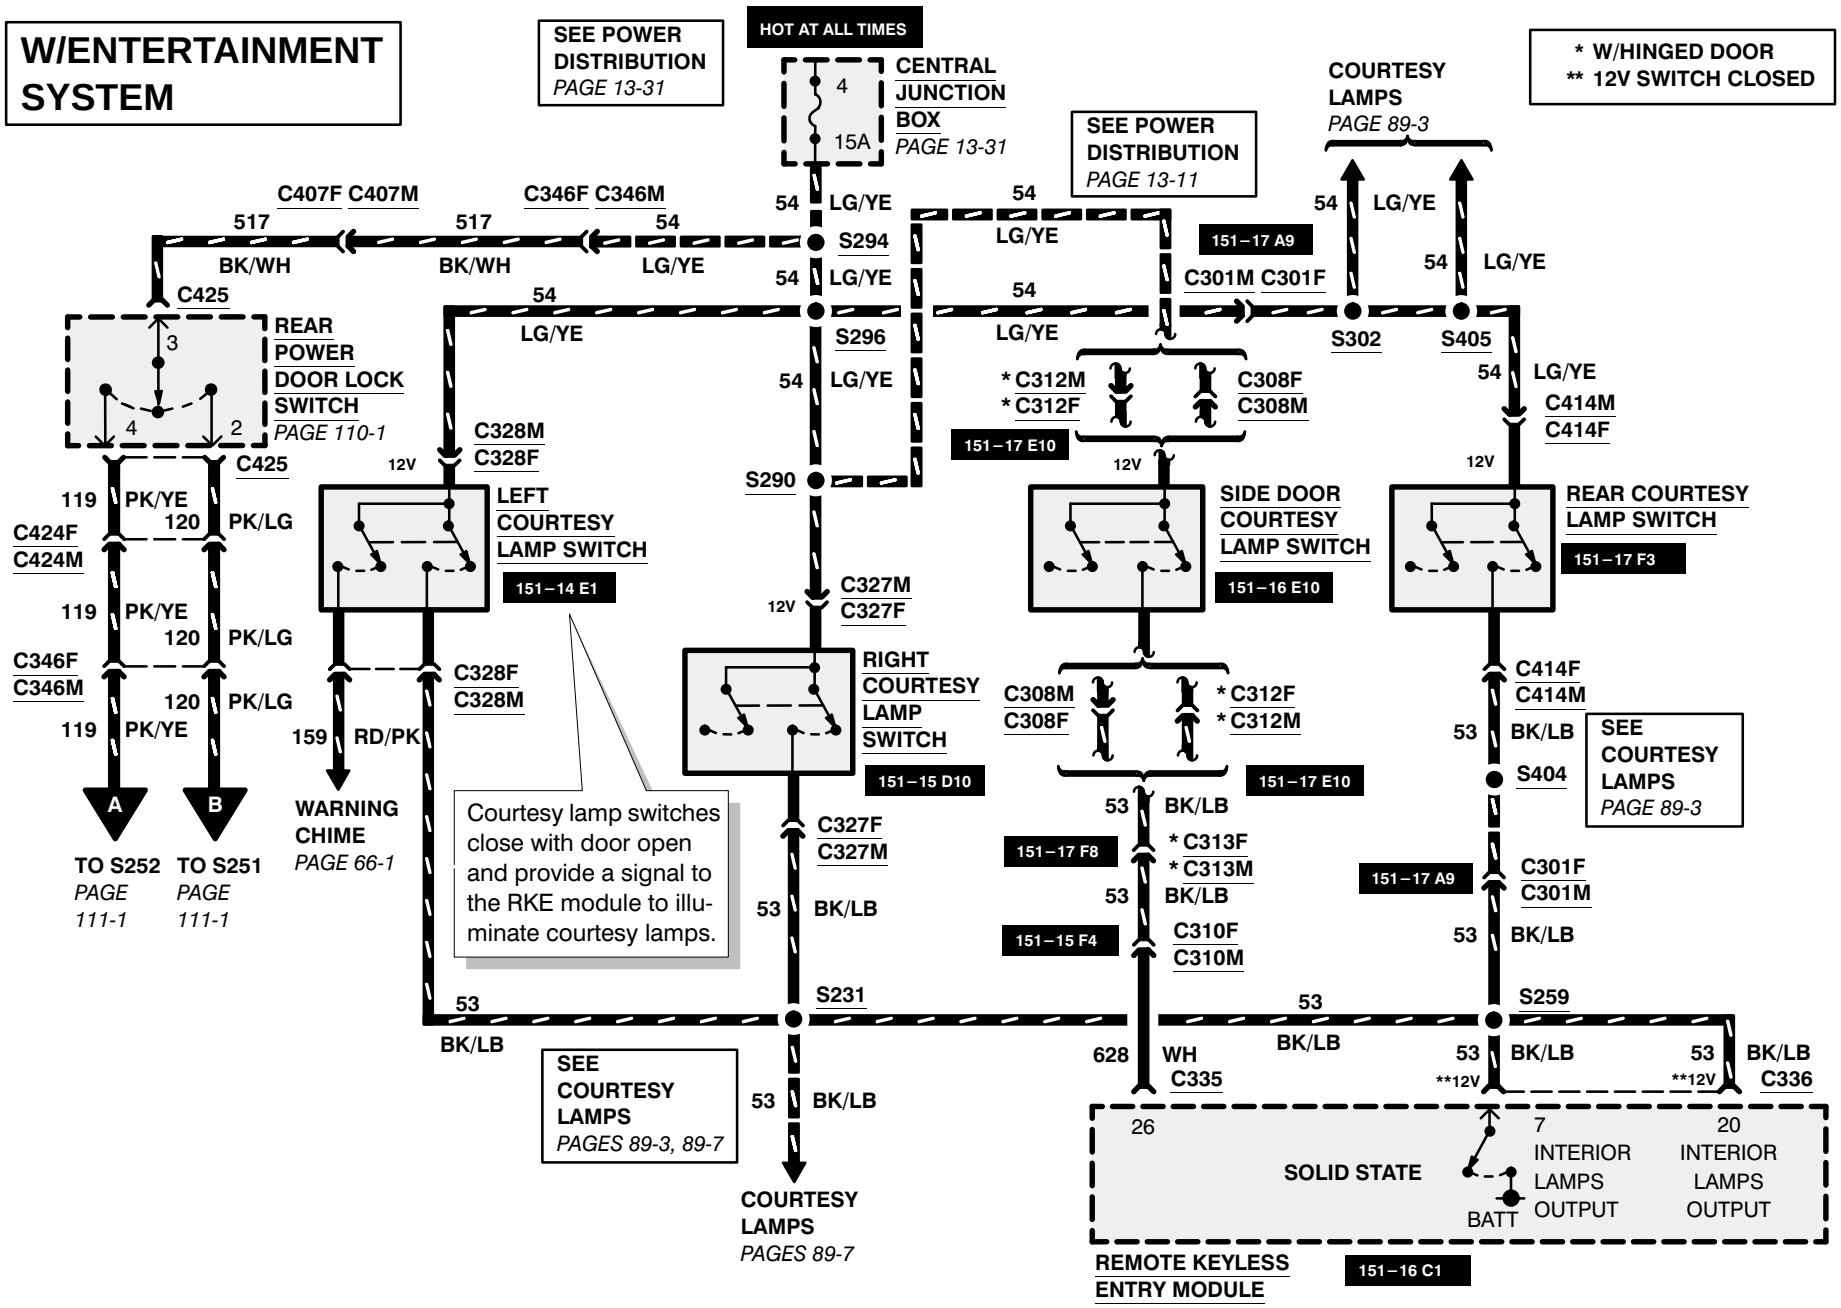
W/ENTERTAINMENT SYSTEM
SEE POWER DISTRIBUTION PAGE 13-31
HOT AT ALL TIMES
CENTRAL JUNCTION BOX PAGE 13-31
4
15A
SEE POWER DISTRIBUTION PAGE 13-11
COURTESY LAMPS PAGE 89-3
* W/HINGED DOOR
** 12V SWITCH CLOSED
C407F C407M
C346F C346M
517
517
54
BK/WH
BK/WH
LG/YE
54 LG/YE
S294
54 LG/YE
54
LG/YE
54
LG/YE
151–17 A9
C301M C301F
54 LG/YE
54 LG/YE
C425
REAR POWER DOOR LOCK SWITCH PAGE 110-1
3
4
2
54
LG/YE
S296
54 LG/YE
54
LG/YE
S302
S405
54 LG/YE
C414M
C414F
* C312M
* C312F
C308F
C308M
151–17 E10
C328M
C328F
12V
S290
12V
12V
LEFT COURTESY LAMP SWITCH
151–14 E1
SIDE DOOR COURTESY LAMP SWITCH
151–16 E10
REAR COURTESY LAMP SWITCH
151–17 F3
C425
119 PK/YE
120 PK/LG
C424F
C424M
119 PK/YE
120 PK/LG
C346F
C346M
120 PK/LG
119 PK/YE
C327M
C327F
12V
RIGHT COURTESY LAMP SWITCH
151–15 D10
C308M
C308F
* C312F
* C312M
C414F
C414M
53 BK/LB
SEE COURTESY LAMPS PAGE 89-3
S404
159 RD/PK
C328F
C328M
A
B
WARNING CHIME PAGE 66-1
Courtesy lamp switches close with door open and provide a signal to the RKE module to illuminate courtesy lamps.
C327F
C327M
53 BK/LB
151–17 F8
* C313F
* C313M
53 BK/LB
151–17 A9
C301F
C301M
53 BK/LB
151–15 F4
C310F
C310M
TO S252 PAGE 111-1
TO S251 PAGE 111-1
53
BK/LB
S231
53
BK/LB
S259
628 WH
C335
53 BK/LB
**12V
53 BK/LB
**12V
C336
SEE COURTESY LAMPS PAGES 89-3, 89-7
53 BK/LB
COURTESY LAMPS PAGES 89-7
26
SOLID STATE
7 INTERIOR LAMPS OUTPUT
20 INTERIOR LAMPS OUTPUT
BATT
REMOTE KEYLESS ENTRY MODULE
151–16 C1