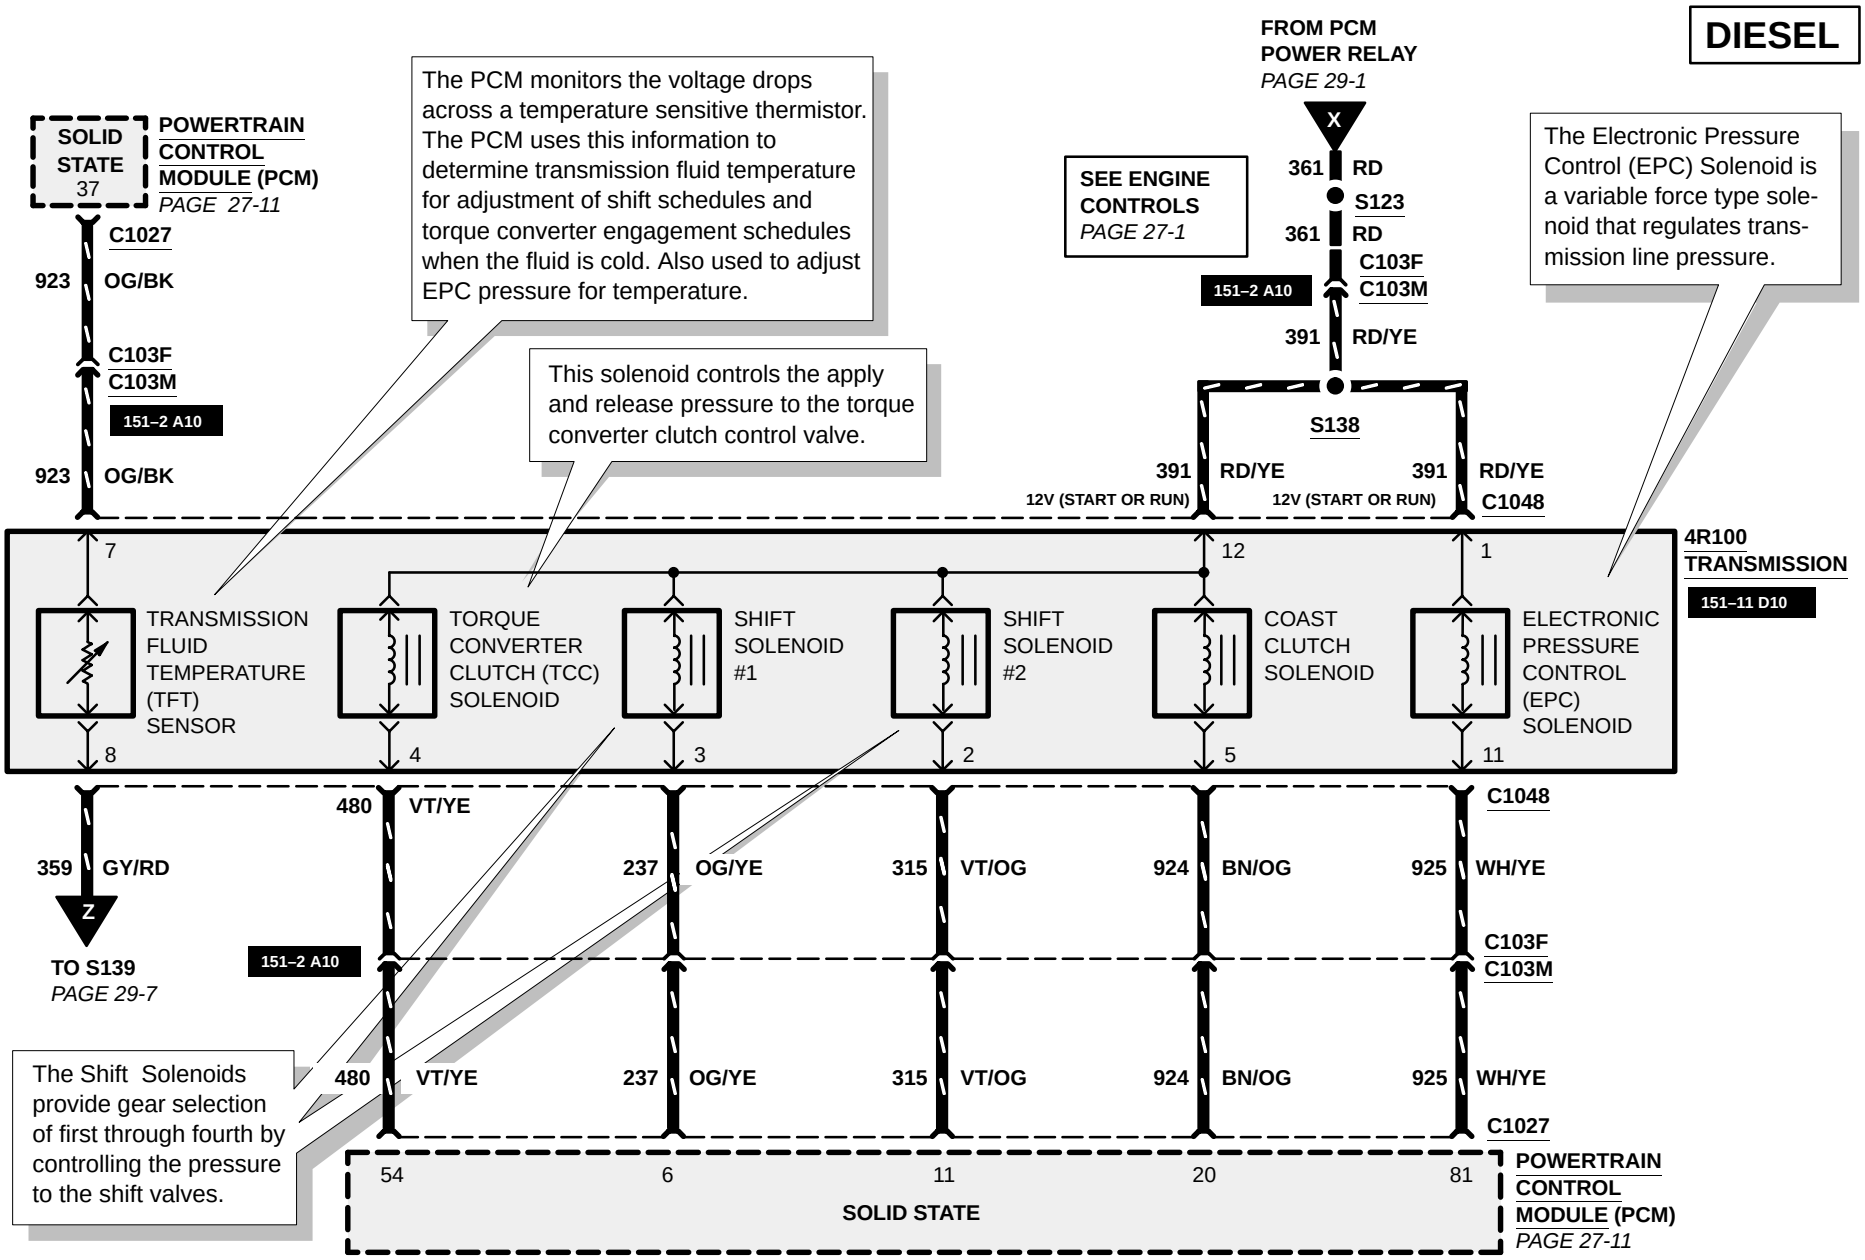
DIESEL
FROM PCM POWER RELAY
PAGE 29-1
X
361 RD
S123
361 RD
C103F
C103M
151–2 A10
391 RD/YE
S138
391 RD/YE
12V (START OR RUN)
391 RD/YE
12V (START OR RUN)
C1048
SEE ENGINE CONTROLS
PAGE 27-1
SOLID STATE
37
POWERTRAIN CONTROL MODULE (PCM)
PAGE 27-11
C1027
923 OG/BK
C103F
C103M
151–2 A10
923 OG/BK
The PCM monitors the voltage drops across a temperature sensitive thermistor. The PCM uses this information to determine transmission fluid temperature for adjustment of shift schedules and torque converter engagement schedules when the fluid is cold. Also used to adjust EPC pressure for temperature.
This solenoid controls the apply and release pressure to the torque converter clutch control valve.
The Electronic Pressure Control (EPC) Solenoid is a variable force type solenoid that regulates transmission line pressure.
4R100 TRANSMISSION
151–11 D10
7
12
1
TRANSMISSION FLUID TEMPERATURE (TFT) SENSOR
TORQUE CONVERTER CLUTCH (TCC) SOLENOID
SHIFT SOLENOID #1
SHIFT SOLENOID #2
COAST CLUTCH SOLENOID
ELECTRONIC PRESSURE CONTROL (EPC) SOLENOID
8
4
3
2
5
11
480 VT/YE
237 OG/YE
315 VT/OG
924 BN/OG
925 WH/YE
C1048
359 GY/RD
Z
TO S139
PAGE 29-7
151–2 A10
C103F
C103M
480 VT/YE
237 OG/YE
315 VT/OG
924 BN/OG
925 WH/YE
C1027
The Shift Solenoids provide gear selection of first through fourth by controlling the pressure to the shift valves.
54
6
11
20
81
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGE 27-11