C600
CAB Harness

Door ajar switch, right front

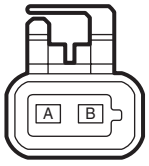

3579018C1

Pin	Circuit	Circuit Function
A	345 (BK/PK)	Door ajar switch to GEM
B	57 (BK)	Ground circuit

C601
CAB Harness

Door lock motor, right front



3578528C1

Pin	Circuit	Circuit Function
A	118 (PK/OG)	Door lock motor (unlock)
B	117 (PK/BK)	Door lock motor (lock)

C602
CAB Harness

Door power window motor, right front

3578625C1

Pin	Circuit	Circuit Function
1	333 (YE/RD)	Window regulator switch to window regulator motor
2	334 (RD/YE)	Window regulator switch to window regulator motor

C603
CAB Harness

Door speaker, right front

3579014C1

Pin	Circuit	Circuit Function
1	805 (WH/LG)	Speaker voice coil feed-front (right channel)
2	811 (DG/OG)	Speaker switch ground to right front speaker

C604
CAB Harness

Window switch, right front

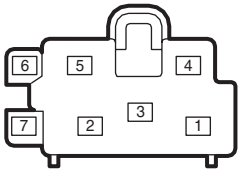

3578532C1

Pin	Circuit	Circuit Function
1	314 (TN/LB)	LH front window regulator sw. to RH front window regulator motor sw.
2	333 (YE/RD)	Window regulator switch to window regulator motor
3	170 (RD/LB)	Window regulator switch feed
4	334 (RD/YE)	Window regulator switch to window regulator motor
5	313 (WH/YE)	Passenger switch to drivers switch circuit
6	57 (BK)	Ground circuit
7	296 (WH/VT)	Illumination feed