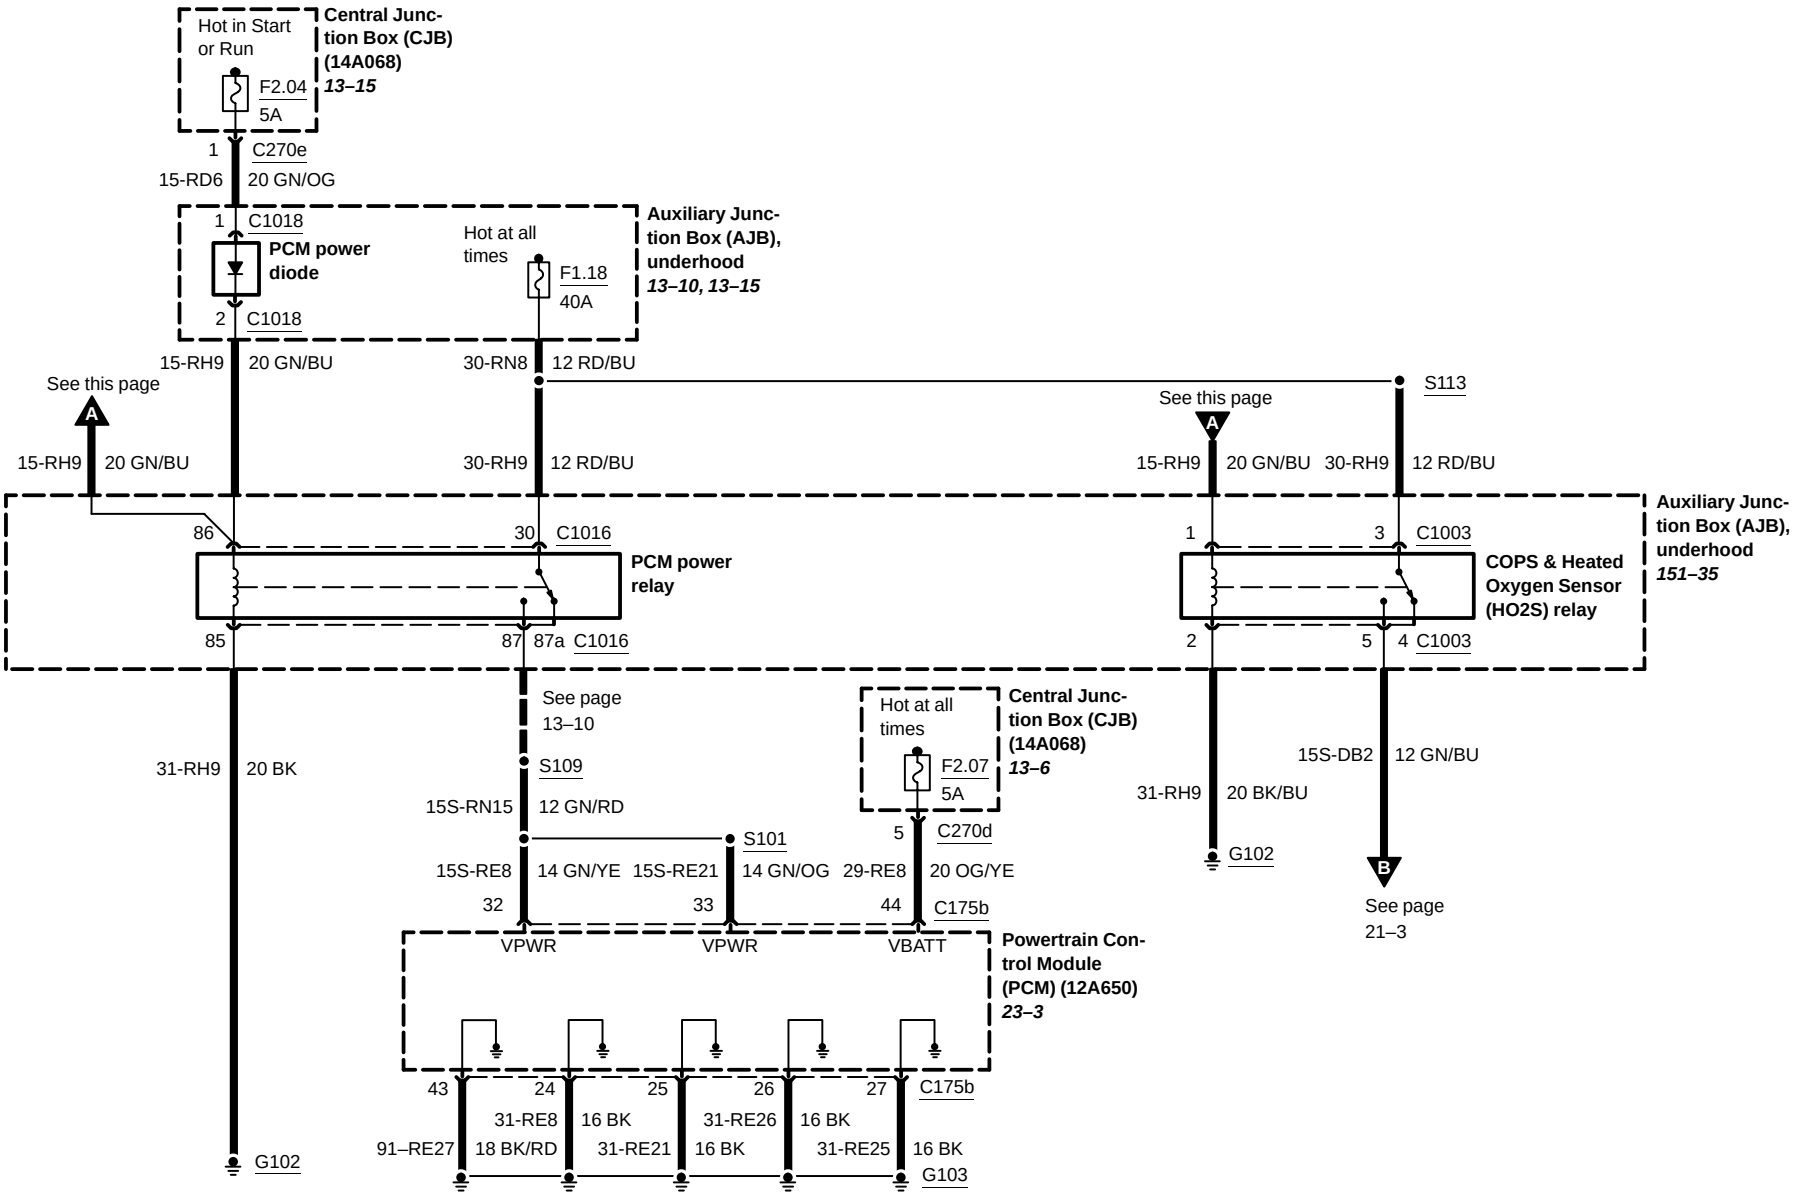
Hot in Start or Run
Central Junction Box (CJB) (14A068) 13–15
F2.04
5A
1
C270e
15-RD6
20 GN/OG
1
C1018
PCM power diode
2
C1018
Hot at all times
F1.18
40A
Auxiliary Junction Box (AJB), underhood 13–10, 13–15
15-RH9
20 GN/BU
30-RN8
12 RD/BU
See this page
A
15-RH9
20 GN/BU
30-RH9
12 RD/BU
See this page
A
15-RH9
20 GN/BU
30-RH9
12 RD/BU
S113
86
30
C1016
PCM power relay
85
87
87a
C1016
1
3
C1003
COPS & Heated Oxygen Sensor (HO2S) relay
2
5
4
C1003
Auxiliary Junction Box (AJB), underhood 151–35
See page 13–10
31-RH9
20 BK
S109
15S-RN15
12 GN/RD
S101
15S-RE8
14 GN/YE
15S-RE21
14 GN/OG
29-RE8
20 OG/YE
32
33
44
C175b
VPWR
VPWR
VBATT
Hot at all times
F2.07
5A
5
C270d
Central Junction Box (CJB) (14A068) 13–6
Powertrain Control Module (PCM) (12A650) 23–3
43
24
25
26
27
C175b
31-RE8
16 BK
31-RE26
16 BK
91–RE27
18 BK/RD
31-RE21
16 BK
31-RE25
16 BK
G102
G103
31-RH9
20 BK/BU
15S-DB2
12 GN/BU
G102
B
See page 21–3