## C708

**14632**

Door lock actuator assembly, left sliding door

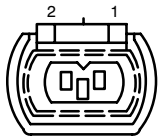


F02116

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1385 (LG) | motor drive +/– |
| 2 | 1386 (OG) | motor drive +/– |

## C709 (BK)

**14632**

Latch reverse actuator, left power sliding door

F02482

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1251 (YE/RD) | motor, return |
| 2 | 1252 (GY/RD) | motor, feed |

## C711 (BK)

**14632**

Detent switch, LH

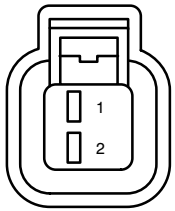


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1251 (YE/RD) | Signal return |
| 2 | 1227 (WH) | Module, power sliding door, LH side, signal |

## C802 (BK)

**14632**

Speaker, right rear (18808)

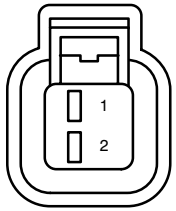


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 825 (TN/LG) | Speaker, right rear (18808) + |
| 2 | 803 (BN/PK) | Speaker, right rear (18808) – |