C537 (BK)

14631

Master window/door lock/unlock switch

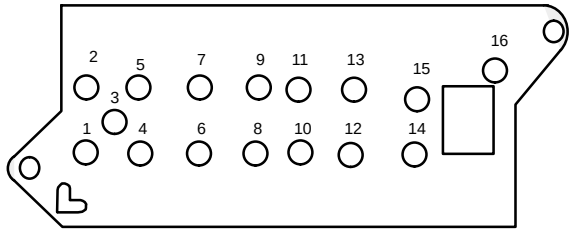

F16139

Pin	Circuit	Circuit function
1	–	not used
2	1014 (VT)	Door lock, driver side, signal +/–
3	326 (WH/VT)	Voltage supplied at all times (overload protected)
4	129 (LG)	Door unlock, driver side, signal +/–
5	–	not used
6	992 (WH/BK)	Power window motor, left front, +/–
7	313 (WH/YE)	Window switch, feed, right front, +/–
8	991 (TN/LB)	Master window adjust switch (14529), +/–
9	314 (TN/LB)	Window switch, feed, right front, +/–
10	317 (GY/OG)	Window switch, left rear, +/–
11	320 (RD/BK)	Window switch, right rear, +/–
12	316 (YE/LB)	Window switch, left rear, +/–
13	319 (YE/BK)	Window switch, right rear, +/–
14	1205 (BK)	Ground
15	400 (LB/BK)	Voltage in Run or Accessory (overload protected)
16	194 (PK)	Window lockout, switched output

C602 (BK)

14630

Door ajar switch, right front

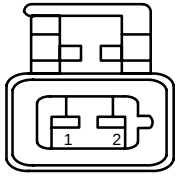

F02379

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	761 (GY/RD)	Door ajar switch, right front signal

C603 (WH)

14630

Door lock actuator, right front

F02116

Pin	Circuit	Circuit function
1	1015 (RD/WH)	Door lock actuator, feed, Right front side
2	163 (RD/OG)	Door unlock, Right front side

C612 (GY)

14630

Speaker, right front (18808)



F02048

Pin	Circuit	Circuit function
1	811 (DG/OG)	Speaker, right front (18808), –
2	805 (WH/LG)	Speaker, right front (18808), +