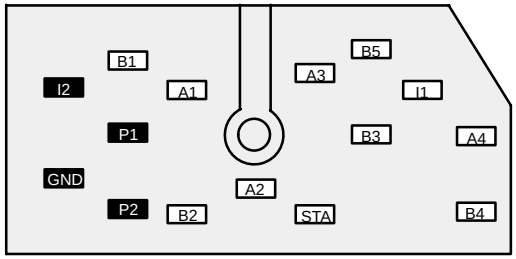

C209 (GRAY)

IGNITION SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
I2	–	NOT USED
GND	–	NOT USED
B1	37 (YE)	Battery Input
P1	–	NOT USED
P2	–	NOT USED
A1	297 (BK/LG)	Hot in Run or Acc Output
B2	37 (YE)	Battery Input
A2	687 (GY/YE)	Hot in Run Output
A3	687 (GY/YE)	Hot in Run Output
STA	33 (WH/PK)	Hot in Start Output
B5	1050 (LG/VT)	Battery Input
B3	37 (YE)	Battery Input
I1	16 (RD/LG)	Hot in Start or Run Output
A4	687 (GY/YE)	Hot in Run Output
B4	1050 (LG/VT)	Battery Input

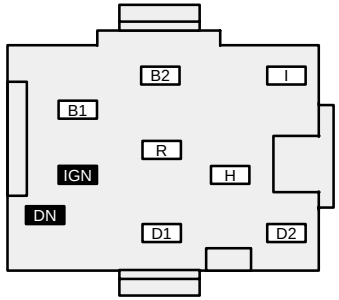

C228 (GRAY)

MAIN LIGHT SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
B1	196 (DB/OG)	Battery Power to Main Light Switch
D1	1006 (DG/WH)	Interior Lamp Switch Feed
R	14 (BN)	Exterior Lamps Feed
B2	195 (TN/WH)	Main Light Switch Feed
H	15 (RD/YE)	Headlamp Dimmer Switch Feed
D2	706 (GY)	Courtesy Lamp Switch to Courtesy Lamp
I	1045 (DB/WH)	Instrument Panel Lamps Feed
IGN	–	NOT USED
DN	–	NOT USED