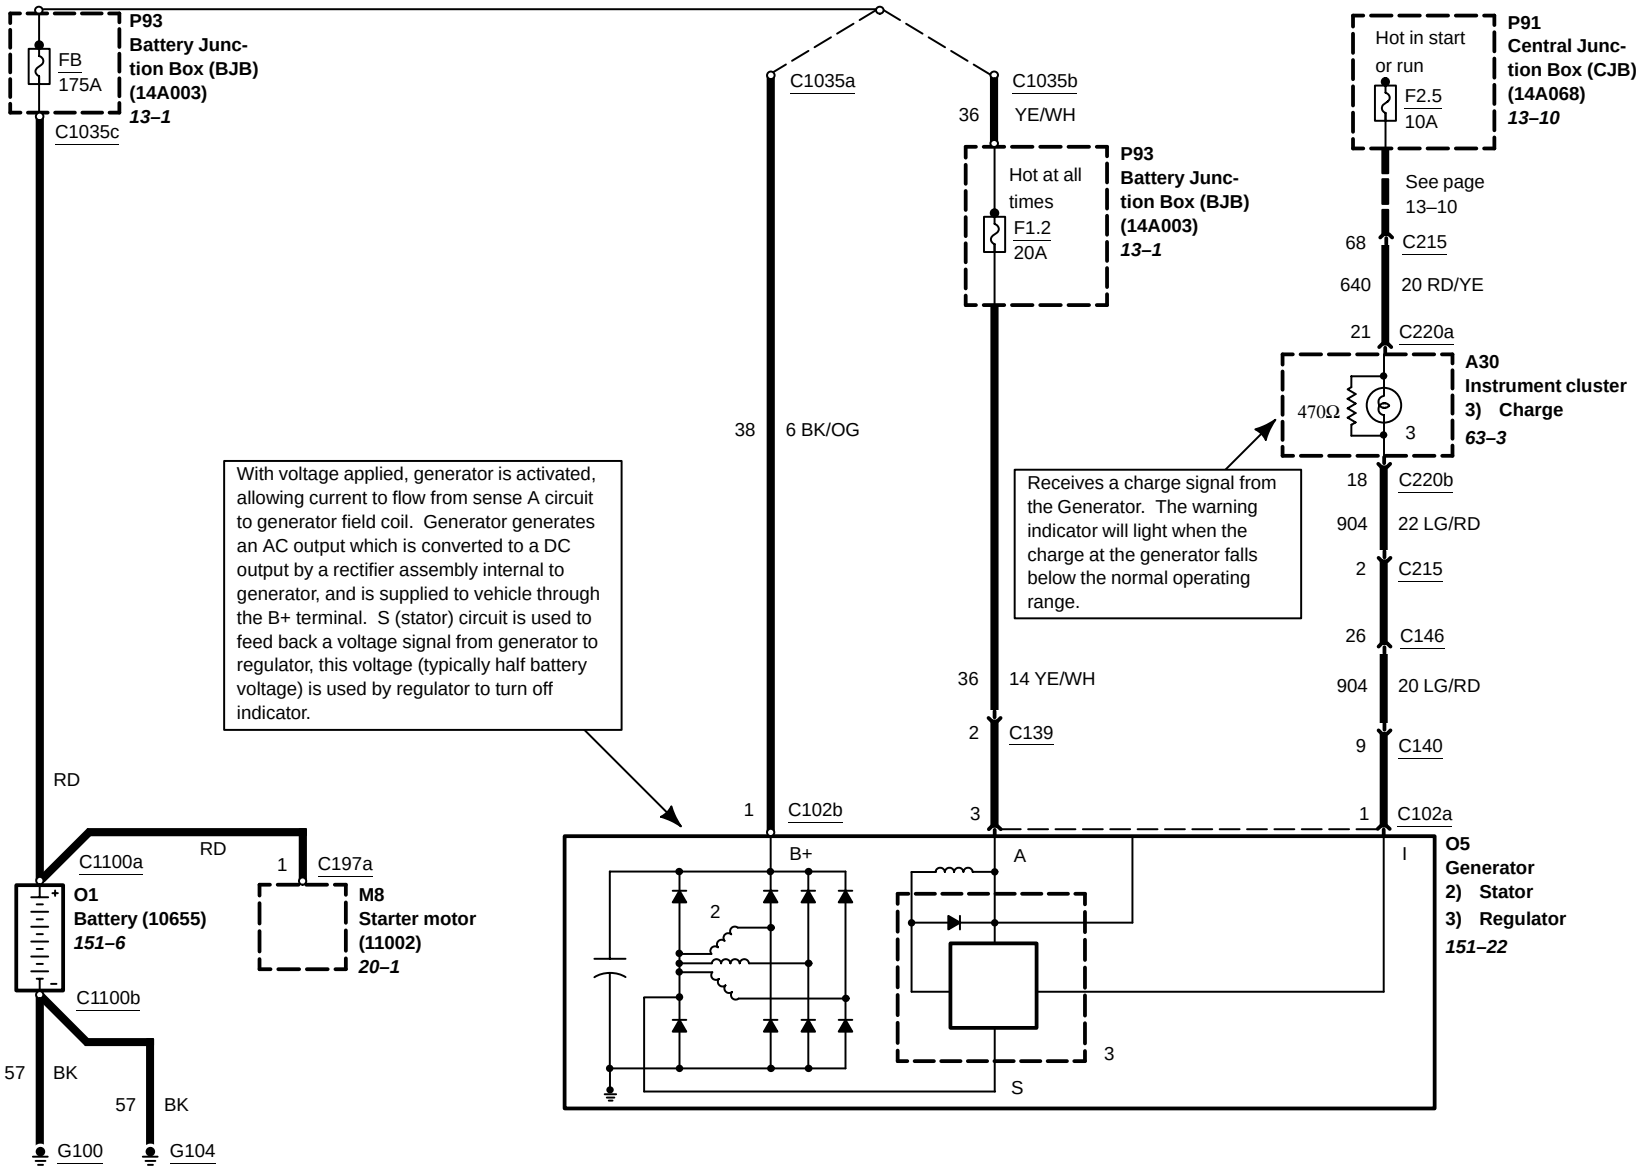
P93
Battery Junction Box (BJB)
(14A003)
13–1
FB
175A
C1035c
C1035a
C1035b
36
YE/WH
P93
Battery Junction Box (BJB)
(14A003)
13–1
Hot at all times
F1.2
20A
Hot in start or run
F2.5
10A
P91
Central Junction Box (CJB)
(14A068)
13–10
See page 13–10
68
C215
640
20 RD/YE
21
C220a
A30
Instrument cluster
3) Charge
63–3
470Ω
3
38
6 BK/OG
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generator generates an AC output which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator, this voltage (typically half battery voltage) is used by regulator to turn off indicator.
Receives a charge signal from the Generator. The warning indicator will light when the charge at the generator falls below the normal operating range.
18
C220b
904
22 LG/RD
2
C215
26
C146
36
14 YE/WH
904
20 LG/RD
2
C139
9
C140
RD
1
C102b
3
1
C102a
RD
C1100a
1
C197a
B+
A
I
O5
Generator
2) Stator
3) Regulator
151–22
2
O1
Battery (10655)
151–6
M8
Starter motor
(11002)
20–1
C1100b
3
57
BK
57
BK
S
G100
G104