C1181 (BK)

12B637

Fuel injector 1
(9F593)

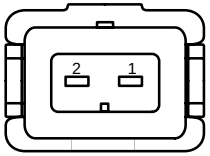

F02089

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C1182 (BK)

12B637

Fuel injector 2
(9F593)

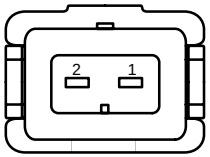

F02089

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C1183 (BK)

12B637

Fuel injector 3
(9F593)

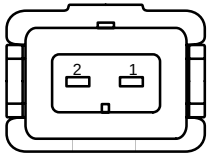

F02089

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C1184 (BK)

12B637

Fuel injector 4
(9F593)

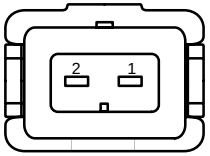

F02089

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C1185 (BK)

12B637

Fuel injector 5
(9F593)

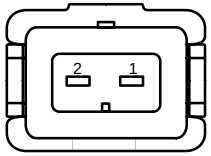

F02089

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C1186 (BK)

12B637

Fuel injector 6
(9F593)

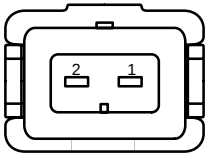

F02089

Pin	Circuit	Circuit function
1	560 (LG/OG)	Fuel injector 6, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)