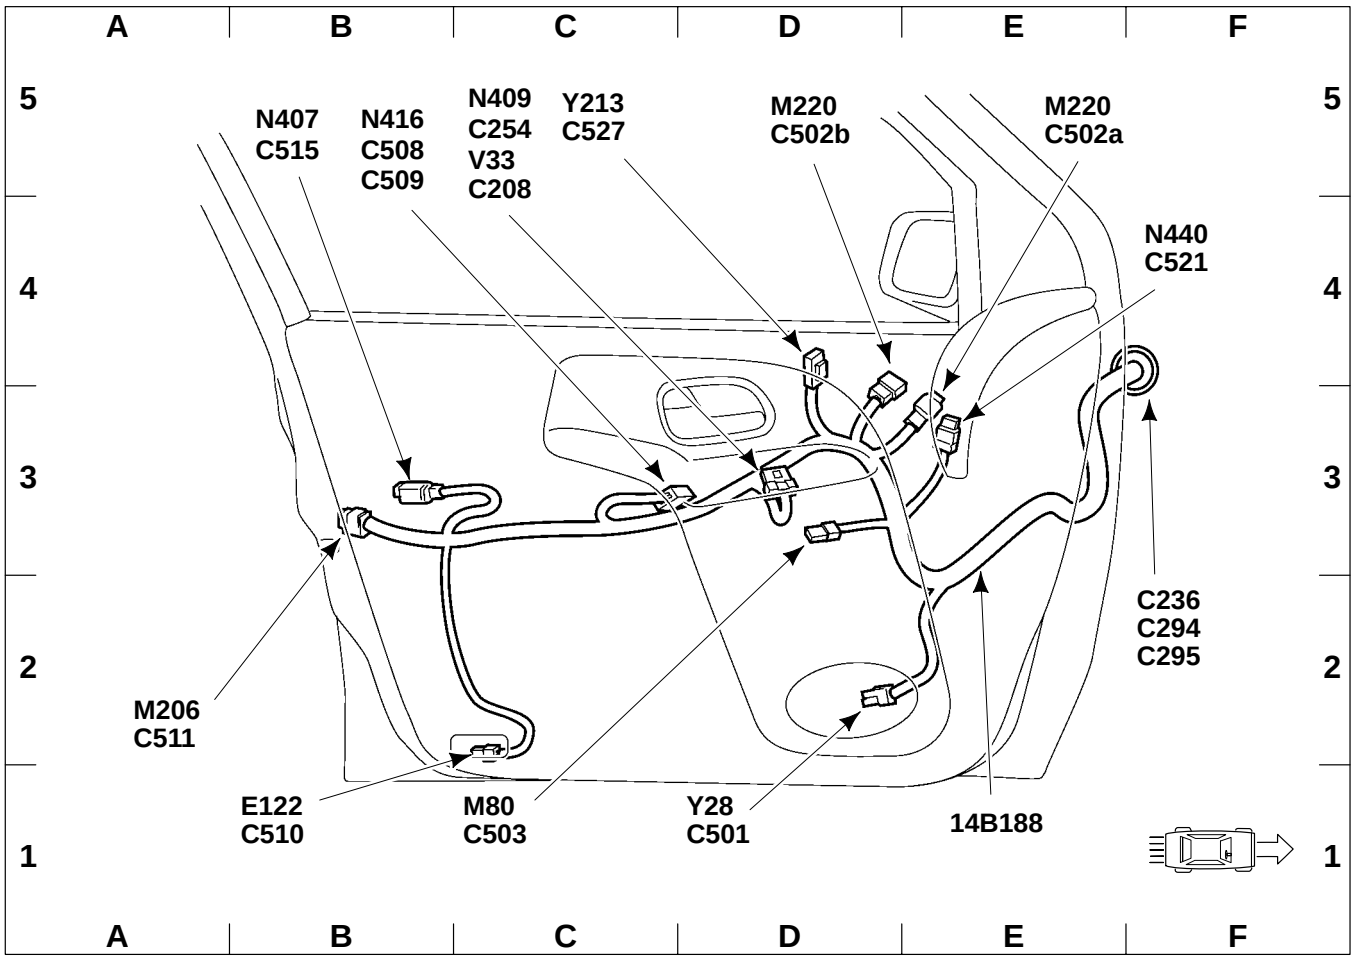

left front door

14B188		E 1
C208		C 5
C236		F 2
C254		C 5
C294		F 2
C295		F 2
C501		D 1
C502a		E 5
C502b		D 5
C503		C 1
C508		B 5
C509		B 5
C510		B 1
C511		A 2
C515		B 5
C521		F 4
C527		C 5
E122	Door entry lamp, driver side front	B 1
M80	Power window motor, driver side front	C 1
M206	Door lock actuator assembly, driver side	A 2
M220	Exterior rear view mirror, driver side	D 5
M220	Exterior rear view mirror, driver side	E 5
N407	Key lock switch, driver side	B 5
N409	Exterior rear view mirror switch	C 5
N416	Master window/door lock/unlock switch	B 5
N440	Memory set switch	F 4
V33	Diode	C 5
Y28	Speaker, left front	D 1
Y213	Tweeter, left front	C 5