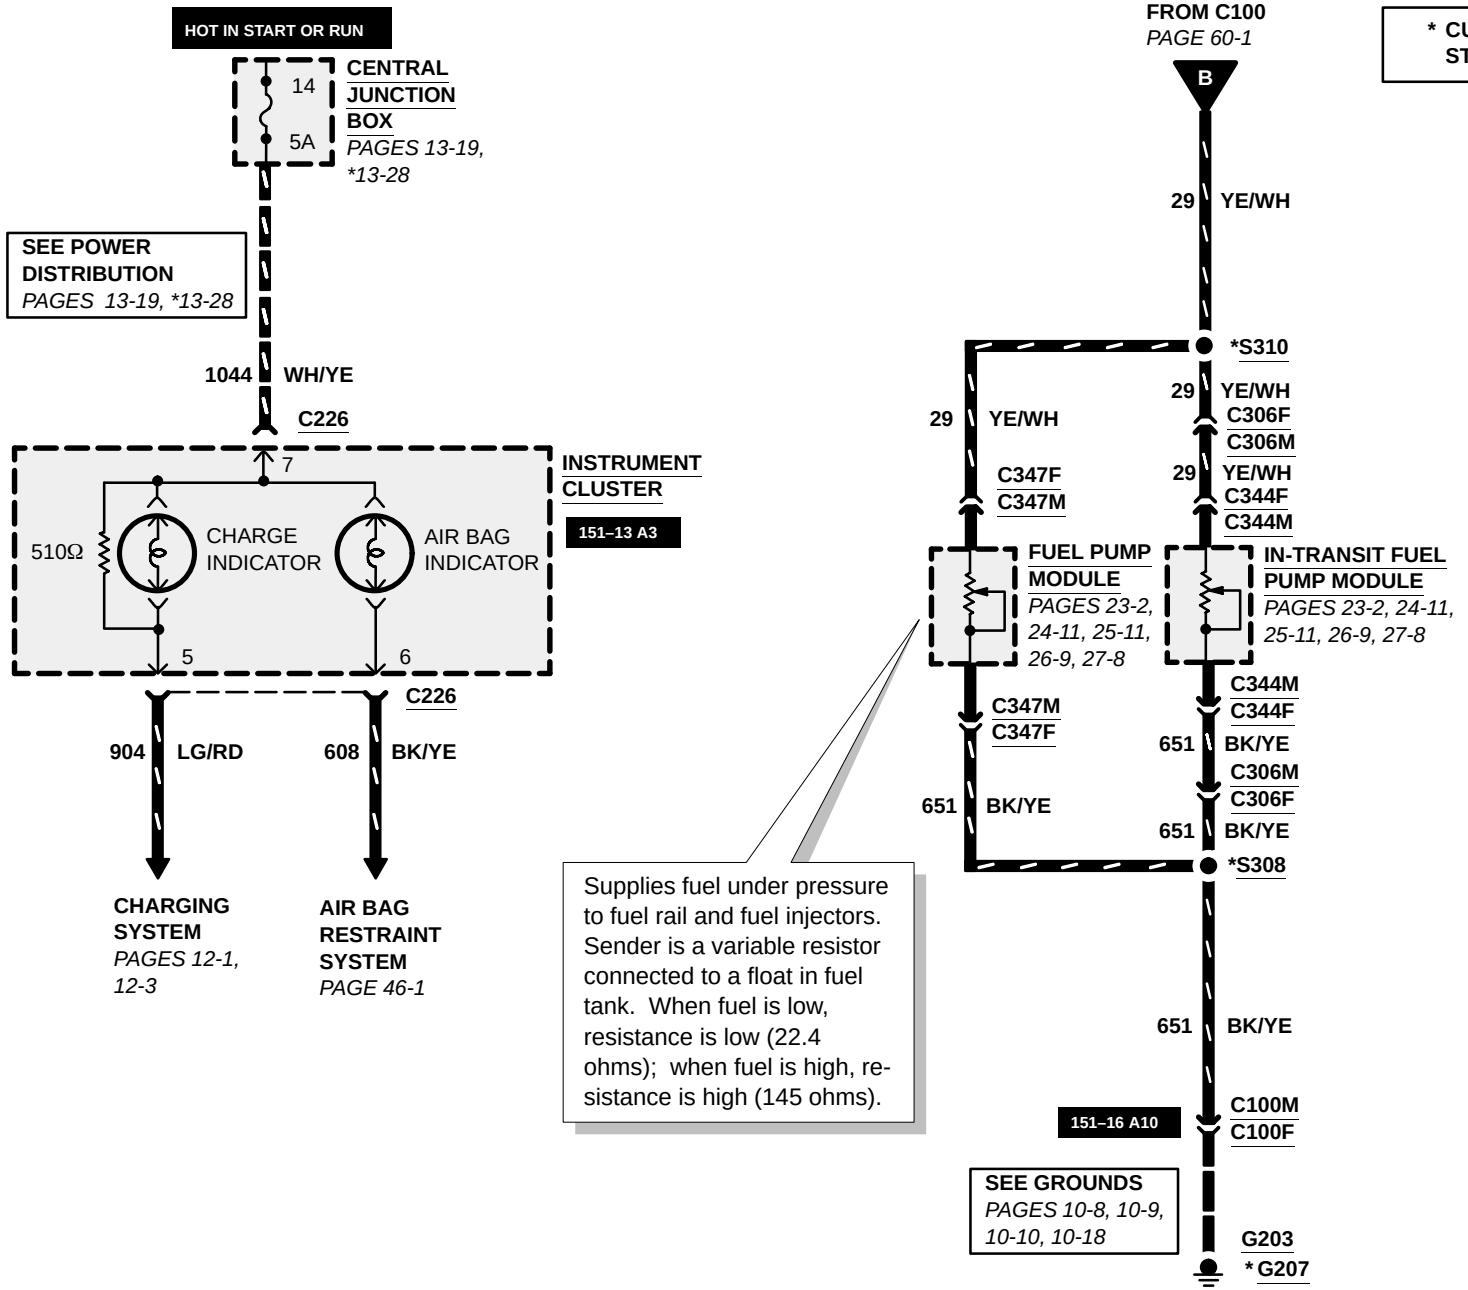
HOT IN START OR RUN
14
5A
CENTRAL JUNCTION BOX
PAGES 13-19, *13-28
SEE POWER DISTRIBUTION
PAGES 13-19, *13-28
1044 WH/YE
C226
7
510Ω
CHARGE INDICATOR
AIR BAG INDICATOR
5
6
INSTRUMENT CLUSTER
151–13 A3
C226
904 LG/RD
608 BK/YE
CHARGING SYSTEM
PAGES 12-1, 12-3
AIR BAG RESTRAINT SYSTEM
PAGE 46-1
FROM C100
PAGE 60-1
B
29 YE/WH
*S310
29 YE/WH
C306F
C306M
29 YE/WH
C344F
C344M
29 YE/WH
C347F
C347M
FUEL PUMP MODULE
PAGES 23-2, 24-11, 25-11, 26-9, 27-8
IN-TRANSIT FUEL PUMP MODULE
PAGES 23-2, 24-11, 25-11, 26-9, 27-8
C344M
C344F
651 BK/YE
C306M
C306F
651 BK/YE
651 BK/YE
C347M
C347F
651 BK/YE
*S308
651 BK/YE
C100M
C100F
151–16 A10
SEE GROUNDS
PAGES 10-8, 10-9, 10-10, 10-18
G203
*G207
* CUTAWAYS AND STRIPPED CHASSIS
Supplies fuel under pressure to fuel rail and fuel injectors. Sender is a variable resistor connected to a float in fuel tank. When fuel is low, resistance is low (22.4 ohms); when fuel is high, resistance is high (145 ohms).