C692 (BK)

12A522

N75
A/C compressor
cycling switch

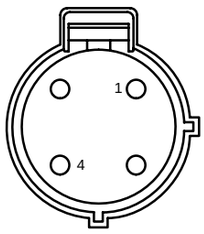

F04083

Pin	Circuit	Circuit Function
1	15S-FA38 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	–	not used
3	–	not used
4	15S-FA17 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched

C704 (BK)

9H589

B8
Throttle Position
Sensor (TPS)

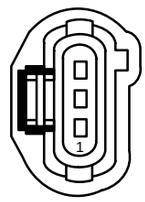

F03118

Pin	Circuit	Circuit Function
1	9-RJ28 (BN)	Sensor signal return (reference/ground)
2	8-RJ28 (WH)	Sensor signal
3	7-RJ28 (YE)	Voltage D.C. supplied at all times (sensor)

C703 (BK)

9H589

B8
Throttle Position
Sensor (TPS)

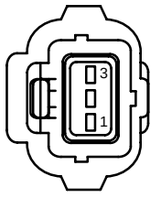

F03093

Pin	Circuit	Circuit Function
1	9-RJ28 (BN)	Sensor signal return (reference/ground)
2	8-RJ28 (WH)	Sensor signal
3	7-RJ28 (YE)	Voltage D.C. supplied at all times (sensor)

C705 (GY)

12A522

B40
Exhaust Pressure
Transducer (EPT)
sensor

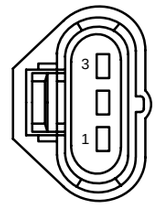

F03101

Pin	Circuit	Circuit Function
1	7-RJ7 (YE/BU)	Voltage D.C. supplied at all times (sensor)
	8-RJ7 (WH/BU)	Sensor signal
2	9-RJ7 (BN/BU)	Sensor signal return (reference/ground)
3	8-RJ7 (WH/BU)	Sensor signal
	7-RJ7 (YE/BU)	Voltage D.C. supplied at all times (sensor)