C701

14A005

N111
Window adjust switch, left rear (14A412)

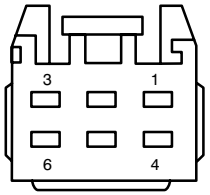

F06303

Pin	Circuit	Circuit function
1	316 (YE/LB)	Window switch, feed, left rear, Up
2	885 (YE/LB)	Window switch, to, Window motor, +/–
3	193 (YE/LG)	Window safety relay, switched output
4	–	not used
5	884 (YE/BK)	Window switch, to, Window motor, +/–
6	317 (GY/OG)	Window switch, feed, left rear, Down

C702

14632
14A005

Y17
Speaker, left rear (18808)

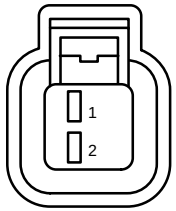

F02069

* Super cab

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, right rear (18808) +
	*802 (OG/RD)	Speaker, right rear (18808) +
2	801 (TN/YE)	Speaker, right rear (18808) –
	*803 (BN/PK)	Speaker, right rear (18808) –

C703

14A005

M116
Power window motor, left rear (23394)



F02073

Pin	Circuit	Circuit function
1	885 (YE/LB)	Window switch, to, Window motor, +/–
2	884 (YE/BK)	Window switch, to, Window motor, +/–

C704

14A005

M64
Door lock actuator, left rear (218A43)

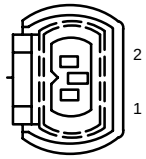

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output

C715

14A005

N237
Door ajar switch, driver side rear (14018)

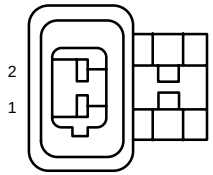

F02117

Pin	Circuit	Circuit function
1	363 (BK/LB)	Door ajar switch, left rear, signal
2	57 (BK)	Ground