## C930

**17C712**

A143
Overhead console

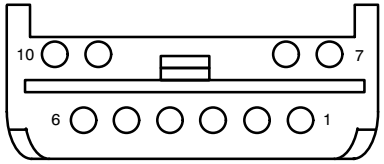


F10009

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 676 (PK/OG) | Ground |
| 2 | – | not used |
| 3 | 29 (YE/WH) | Fuel pump/fuel gauge sender |
| 4 | 70 (LB/WH) | ISO Bus |
| 5 | 679 (GY/BK) | Vehicle Speed Sensor (VSS) + |
| 6 | 3061 (LB/OG) | Ambient air temperature sensor (19E702), signal |
| 7 | 640 (RD/YE) | Voltage in Run (overload protected) |
| 8 | 71 (OG/LG) | Powertrain Control Module (PCM) (12A650) – Data output link |
| 9 | 19 (LB/RD) | Illumination dimmer |
| 10 | – | not used |

## C931

**14A005**
**14334**

E238
Interior/map lamps assembly, front

Excursion




F03303

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 53 (BK/LB) | Interior lamp relay, switched power, output |
| 2 | 57 (BK) | Ground |
| 3 | 54 (LG/YE) | Battery saver relay, switched power, output |

## C932

**14335/14A005**

E239
Interior/map lamps assembly, rear

Excursion




F03135

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 53 (BK/LB) | Interior lamp relay, switched power, output |
| 2 | 57 (BK) | Ground |
| 3 | 54 (LG/YE) | Battery saver relay, switched power, output |