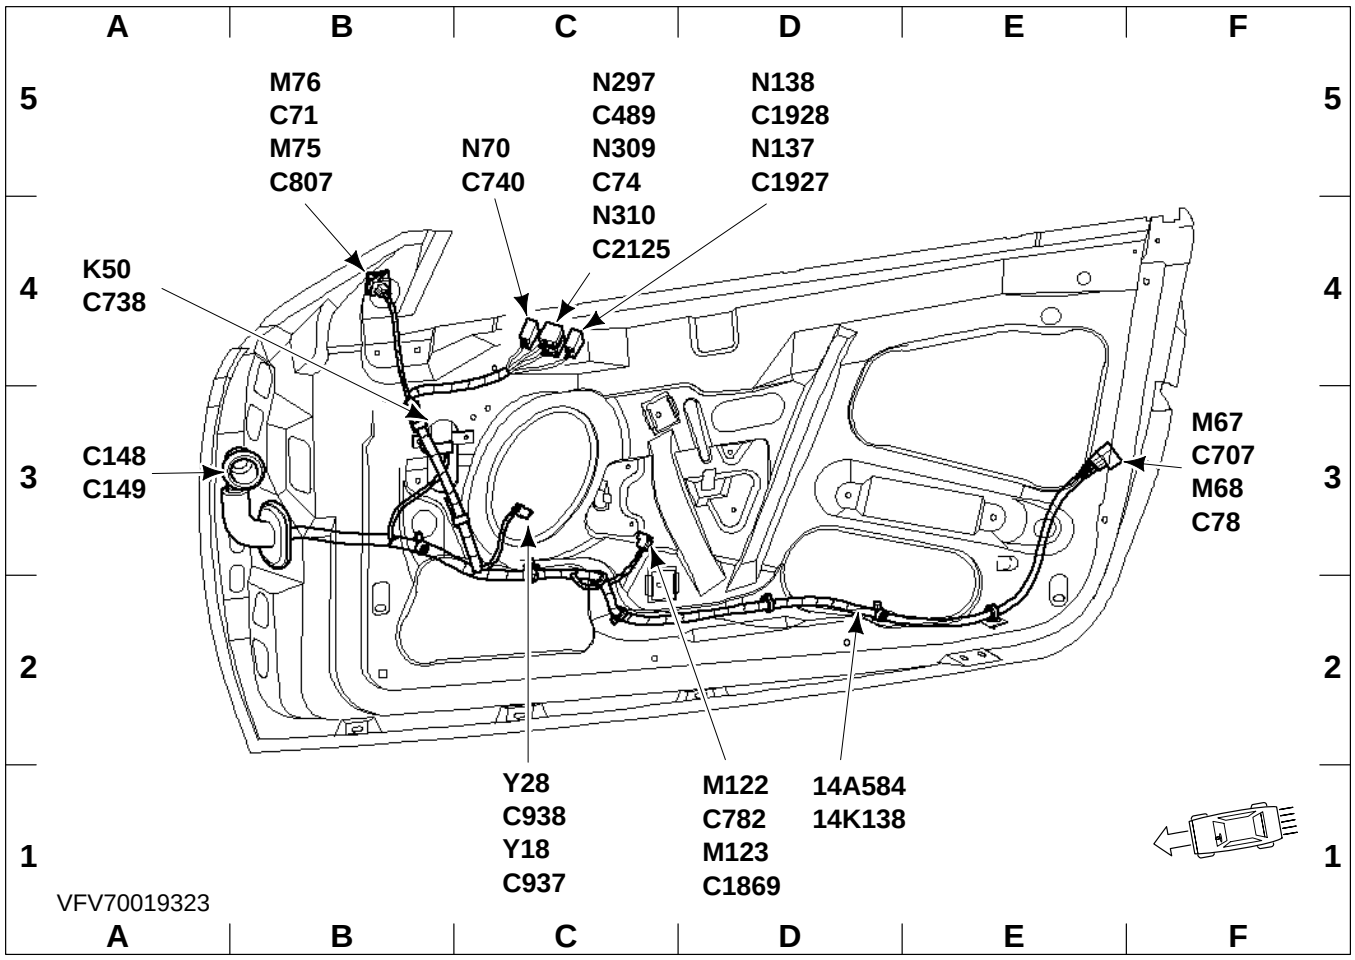

Front door

14A584 Wiring harness for front doors . . . . . D 1
14K138 Wiring harness for front doors . . . . . D 1
C71 . . . . . B 5
C74 . . . . . C 5
C78 . . . . . F 3
C148 . . . . . A 3
C149 . . . . . A 3
C489 . . . . . C 5
C707 . . . . . F 3
C738 . . . . . A 4
C740 . . . . . C 5
C782 . . . . . D 1
C807 . . . . . B 5
C937 . . . . . C 1
C938 . . . . . C 1
C1869 . . . . . D 1
C1927 . . . . . D 5
C1928 . . . . . D 5
C2125 . . . . . C 4
K50 . . One–touch window relay . . . . . A 4
M67 . Door lock motor, driver side . . . . . F 3
M68 . Door lock motor, passenger side . . . . . F 3
M75 . Mirror motor, driver side . . . . . B 5
M76 . Mirror motor, passenger side . . . . . B 5
M122 Window regulator motor, driver side front . . . . . D 1
M123 Window regulator motor, passenger side front . . . . . D 1
N70 . . Power mirror adjust switch . . . . . C 5
N137 . Door lock/unlock switch, driver . . . . . D 5
N138 . Door lock/unlock switch, passenger . . . D 5
N297 . Window operating switch, passenger side front . . . . . C 5
N309 . Window operating switch, driver side front . . . . . C 5
N310 . Window operating switch, driver side for passenger side . . . . . C 4
Y18 . . Speaker, right front . . . . . C 1
Y28 . . Speaker, left front . . . . . C 1