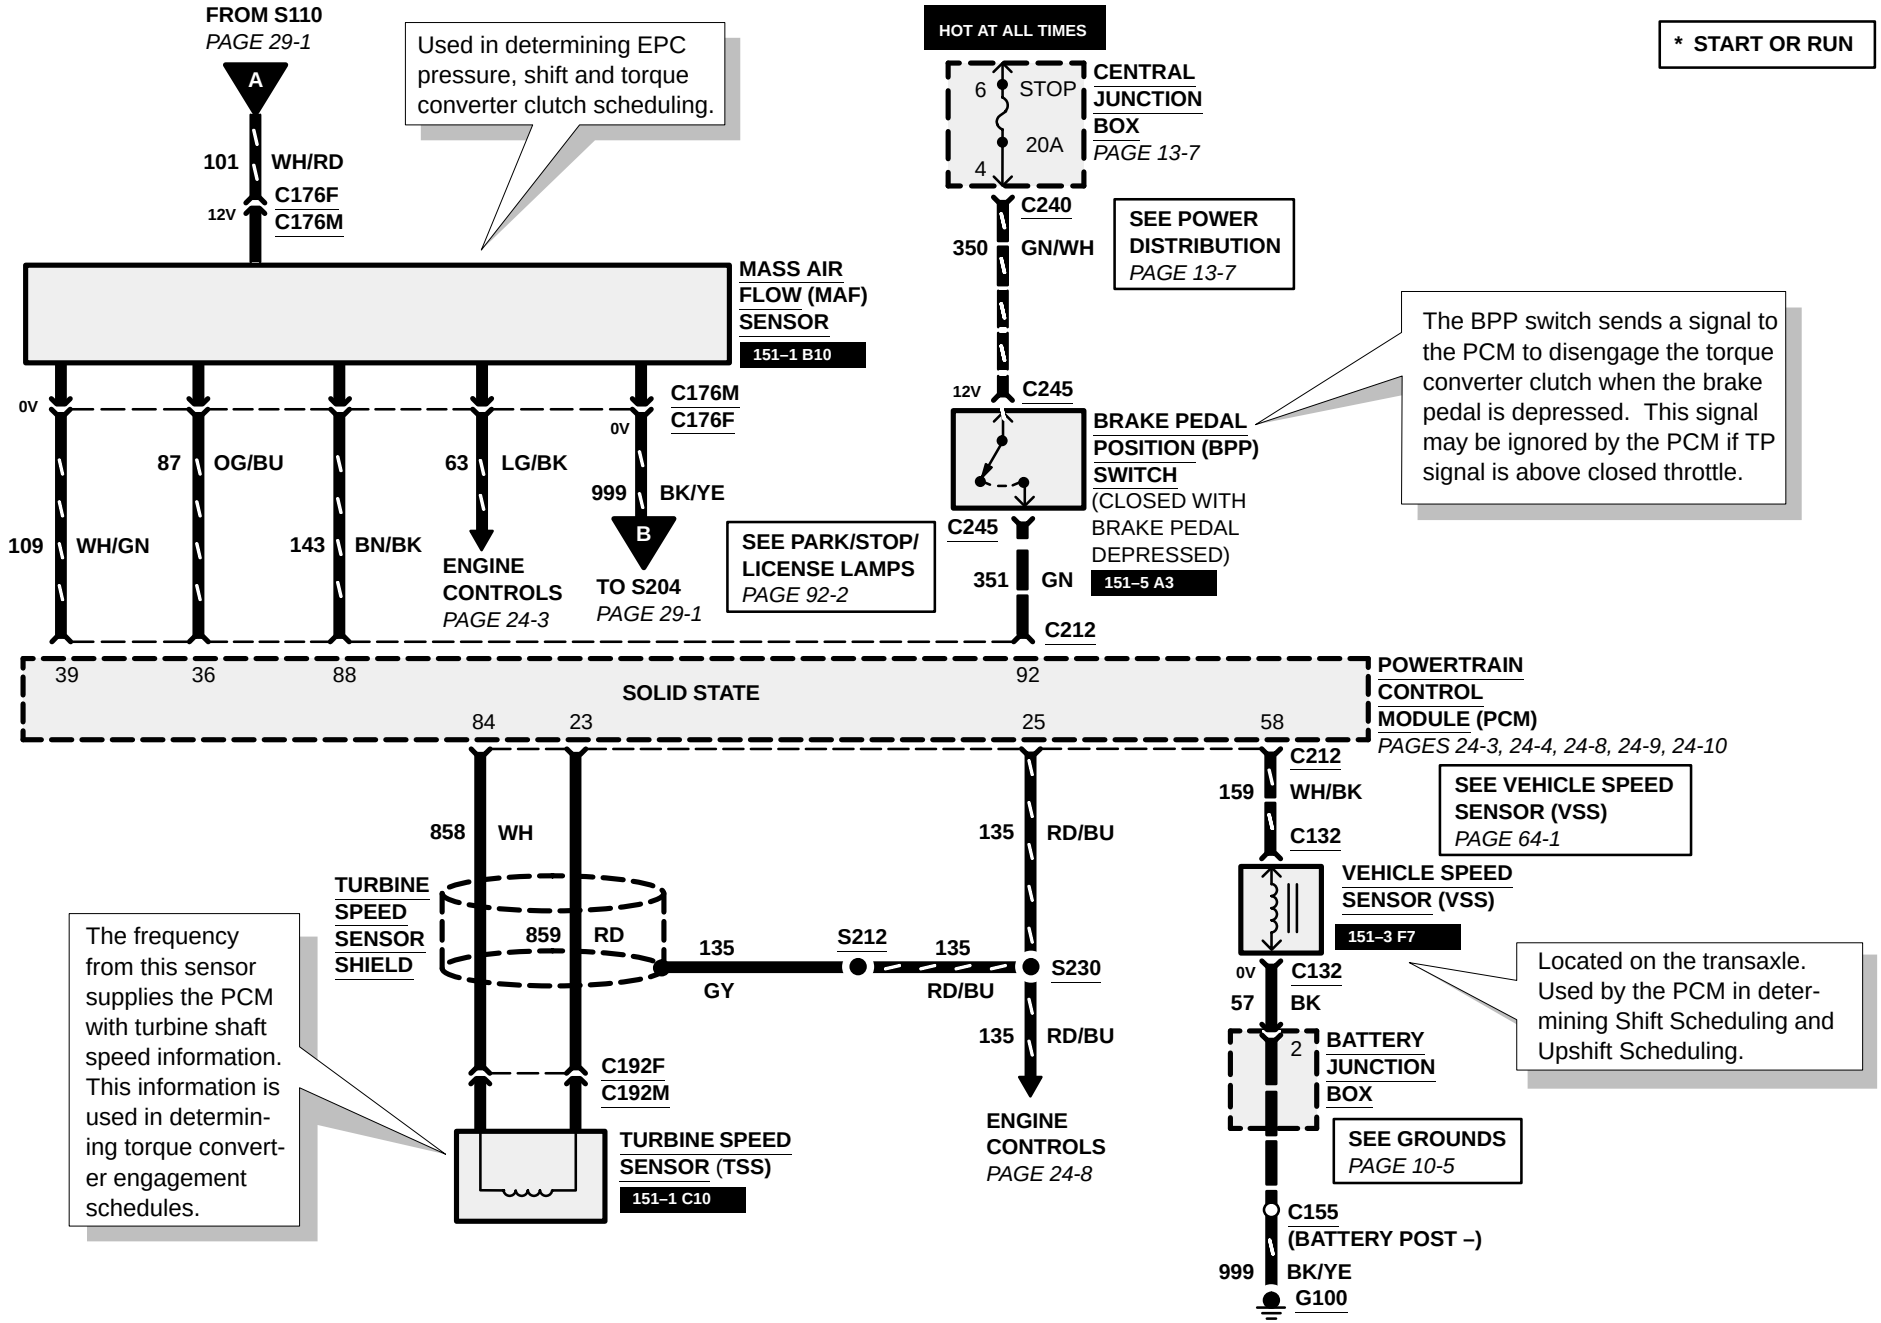
FROM S110
PAGE 29-1
A
101 WH/RD
C176F
12V
C176M
Used in determining EPC pressure, shift and torque converter clutch scheduling.
MASS AIR FLOW (MAF) SENSOR
151–1 B10
0V
87 OG/BU
63 LG/BK
C176M
C176F
0V
999 BK/YE
109 WH/GN
143 BN/BK
ENGINE CONTROLS
PAGE 24-3
B
TO S204
PAGE 29-1
SEE PARK/STOP/ LICENSE LAMPS
PAGE 92-2
HOT AT ALL TIMES
6
STOP
20A
4
CENTRAL JUNCTION BOX
PAGE 13-7
C240
350 GN/WH
SEE POWER DISTRIBUTION
PAGE 13-7
12V
C245
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
C245
351 GN
151–5 A3
C212
The BPP switch sends a signal to the PCM to disengage the torque converter clutch when the brake pedal is depressed. This signal may be ignored by the PCM if TP signal is above closed throttle.
* START OR RUN
39
36
88
92
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-3, 24-4, 24-8, 24-9, 24-10
84
23
25
58
858 WH
859 RD
TURBINE SPEED SENSOR SHIELD
135 GY
S212
135 RD/BU
135 RD/BU
S230
135 RD/BU
C212
159 WH/BK
C132
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
VEHICLE SPEED SENSOR (VSS)
151–3 F7
0V
C132
57 BK
Located on the transaxle. Used by the PCM in determining Shift Scheduling and Upshift Scheduling.
2
BATTERY JUNCTION BOX
SEE GROUNDS
PAGE 10-5
C155
(BATTERY POST –)
999 BK/YE
G100
C192F
C192M
TURBINE SPEED SENSOR (TSS)
151–1 C10
The frequency from this sensor supplies the PCM with turbine shaft speed information. This information is used in determining torque converter engagement schedules.
ENGINE CONTROLS
PAGE 24-8