-2

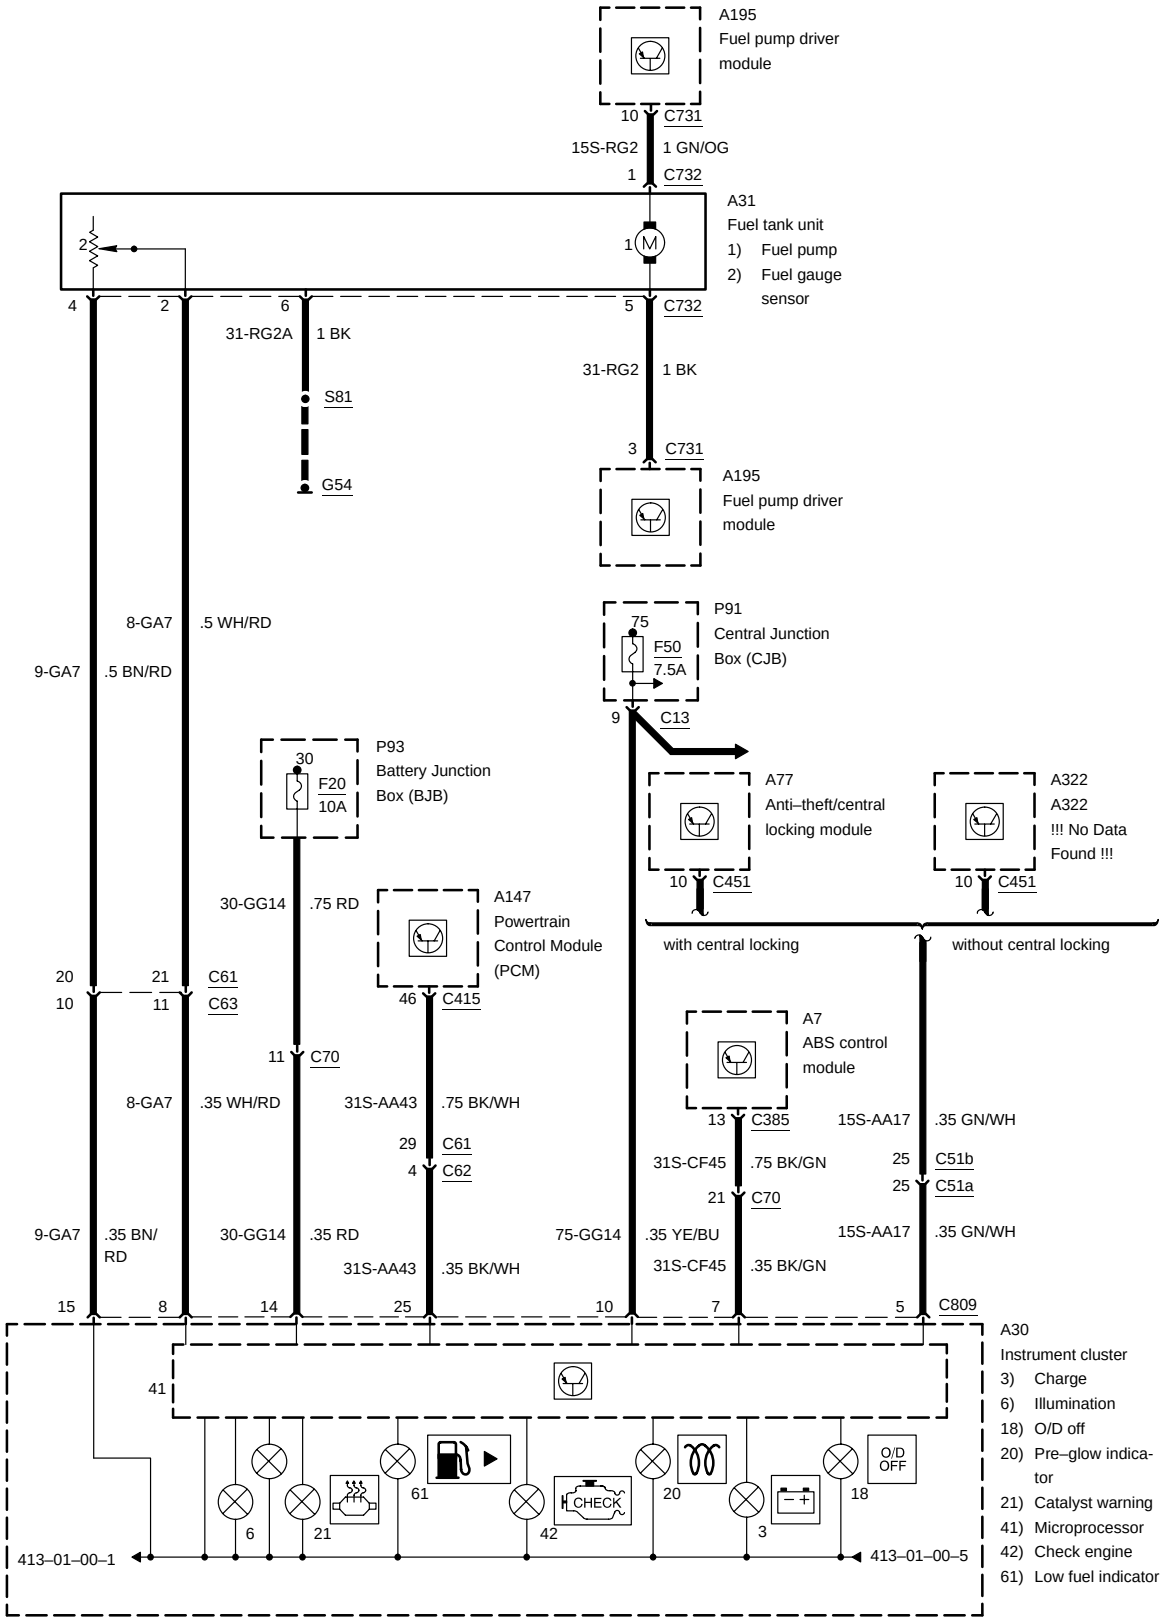
A195
Fuel pump driver module
10 C731
15S-RG2 1 GN/OG
1 C732
A31
Fuel tank unit
1) Fuel pump
2) Fuel gauge sensor
4 2 6 5 C732
31-RG2A 1 BK
S81
G54
31-RG2 1 BK
3 C731
A195
Fuel pump driver module
8-GA7 .5 WH/RD
9-GA7 .5 BN/RD
P91
Central Junction Box (CJB)
75
F50 7.5A
9 C13
P93
Battery Junction Box (BJB)
30
F20 10A
A77
Anti–theft/central locking module
10 C451
A322
A322
!!! No Data Found !!!
10 C451
with central locking
without central locking
30-GG14 .75 RD
A147
Powertrain Control Module (PCM)
20 21 C61
10 11 C63
46 C415
11 C70
A7
ABS control module
8-GA7 .35 WH/RD
31S-AA43 .75 BK/WH
13 C385
15S-AA17 .35 GN/WH
29 C61
4 C62
31S-CF45 .75 BK/GN
25 C51b
25 C51a
21 C70
9-GA7 .35 BN/RD
30-GG14 .35 RD
75-GG14 .35 YE/BU
15S-AA17 .35 GN/WH
31S-AA43 .35 BK/WH
31S-CF45 .35 BK/GN
15 8 14 25 10 7 5 C809
A30
Instrument cluster
3) Charge
6) Illumination
18) O/D off
20) Pre–glow indicator
21) Catalyst warning
41) Microprocessor
42) Check engine
61) Low fuel indicator
41
CHECK
O/D OFF
6 21 61 42 20 3 18
413–01–00–1
413–01–00–5