C175

12B637

A147
Powertrain Control Module
(PCM)

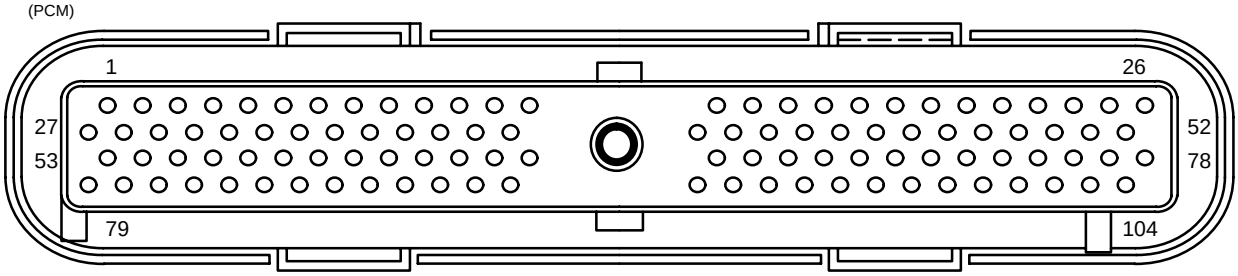

F104001

Pin	Circuit	Circuit Function
1	315 (VT/OG)	Shift solenoid B
2	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
3	1144 (YE/BK)	Digital Transmission Range (DTR) sensor TR1
4	–	not used
5	–	not used
6	970 (DG/WH)	Turbine shaft speed (TSS) sensor
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	29 (YE/WH)	Fuel pump/fuel gauge sender
13	107 (VT)	Flash EEPROM power supply
14	–	not used
15	915 (PK/LB)	SCP Bus -
16	914 (TN/OG)	SCP Bus +
17	1224 (BN/YE)	RX, signal
18	1223 (GY/RD)	TX, signal
19	–	not used
20	–	not used
21	350 (GY)	Crankshaft position sensor +
22	349 (DB)	Crankshaft position sensor -
23	–	not used
24	570 (BK/WH)	Ground

Pin	Circuit	Circuit Function
25	57 (BK)	Ground
26	850 (YE/BK)	Ignition coil A
27	237 (OG/YE)	Shift solenoid A
28	386 (LB)	Low speed fan control relay, control
29	–	not used
30	343 (DB/LG)	Anti–theft, indicator, input
31	330 (YE/LG)	Power steering pressure switch, input – 3.0L 4V
32	1273 (YE)	Powertrain Control Module (PCM), to knock sensor – 3.0L 4V
33	–	not used
34	–	not used
35	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #12, input
36	968 (TN/LB)	Mass Air Flow (MAF) sensor, signal, return
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
38	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor, input
39	743 (GY)	Intake Air Temperature (IAT) sensor, input
40	787 (PK/BK)	Fuel pump, Power

Pin	Circuit	Circuit Function
41	879 (DG/WH)	A/C high pressure switch, input
42	–	not used
43	–	not used
44	329 (PK)	Starter relay, control
45	–	not used
46	639 (LG/VT)	High speed cooling fan relay, control
47	360 (BN/PK)	EGR Vacuum Regulator (EVR), control
48	11 (TN/YE)	Tachometer
49	1145 (LB/BK)	Digital Transmission Range (DTR) sensor, TR2
50	1143 (WH/BK)	Digital Transmission Range (DTR) sensor, TR4
51	570 (BK/WH)	Ground
52	851 (YE/RD)	Ignition coil B
53	971 (PK/BK)	Shift solenoid C
54	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid
55	883 (PK/LB)	Voltage supplied at all times (overload protected)
56	101 (GY/YE)	EVAP canister purge valve
57	310 (YE/RD)	Knock sensor – 3.0L 4V
58	–	not used
59	–	not used
60	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11, input
61	393 (VT/LG)	Heated Oxygen Sensor (HO2S) #22, input
62	791 (RD/PK)	Fuel tank pressure transducer sensor
63	–	not used
64	1268 (RD/BK)	Digital Transmission Range (DTR) sensor, TR3A
65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) sensor, input
66	–	not used
67	91 (VT/WH)	Canister vent
68	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
69	331 (PK/YE)	A/C clutch relay, control
70	–	not used
71	361 (RD)	Voltage supplied in Start and Run (overload protected)
72	–	not used

Pin	Circuit	Circuit Function
73	559 (TN/BK)	Fuel injector 5, control
74	557 (BN/YE)	Fuel injector 3, control
75	555 (TN)	Fuel injector 1, control
76	570 (BK/WH)	Ground
77	570 (BK/WH)	Ground
78	852 (YE/WH)	Ignition coil C
79	911 (WH/LG)	Check Transaxle lamp
80	926 (LB/OG)	Fuel pump relay, control
81	924 (BN/OG)	Powertrain Control Module (PCM), to Electronic Pressure Control (EPC) solenoid
82	1017 (BK/WH)	Check cap indicator lamp
83	264 (WH/LB)	Idle air control valve (IAC), control
84	136 (DB/YE)	Powertrain Control Module (PCM) - Output shaft speed sensor (OSS)
85	282 (DB/OG)	Camshaft position sensor, input
86	347 (BK/YE)	A/C clutch relay, switched output
87	392 (RD/LG)	Heated Oxygen Sensor (HO2S) #21, input
88	967 (LB/RD)	Mass Air Flow (MAF) sensor, output
89	355 (GY/WH)	Throttle Position Sensor (TPS), input
90	351 (BN/WH)	Reference, voltage
91	359 (GY/RD)	signal, return
92	810 (RD/LG)	Brake pedal position switch, input
93	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11, heater
94	389 (WH/BK)	Heated Oxygen Sensor (HO2S) #21, heater
95	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #12, heater
96	390 (TN/YE)	Heated Oxygen Sensor (HO2S) #22, heater
97	–	not used
98	–	not used
99	560 (LG/OG)	Fuel injector 6, control
100	558 (BN/LB)	Fuel injector 4, control
101	556 (WH)	Fuel injector 2, control
102	–	not used
103	570 (BK/WH)	Ground
104	–	not used