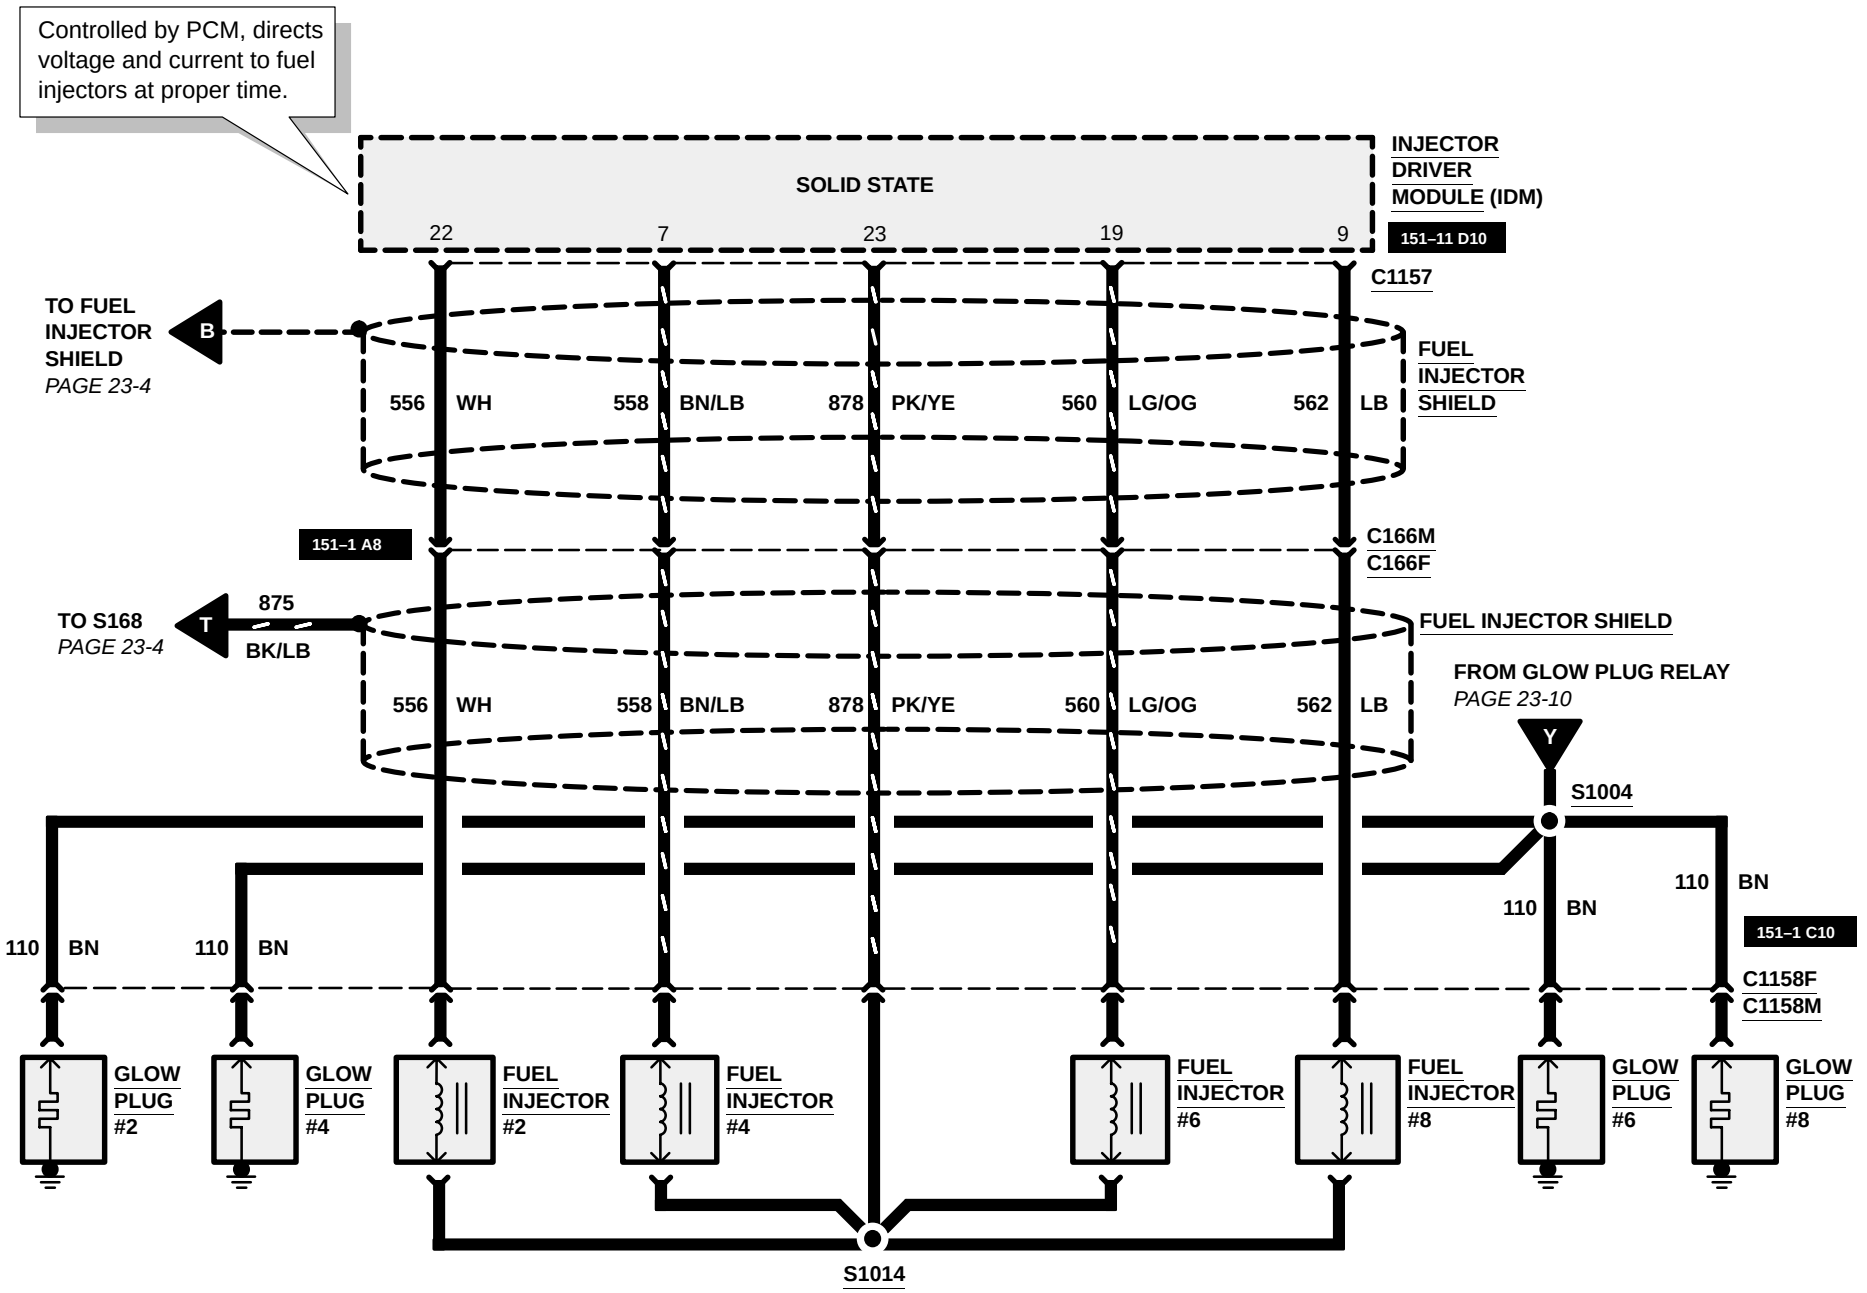
Controlled by PCM, directs voltage and current to fuel injectors at proper time.
SOLID STATE
INJECTOR DRIVER MODULE (IDM)
151–11 D10
22
7
23
19
9
C1157
TO FUEL INJECTOR SHIELD
PAGE 23-4
B
556 WH
558 BN/LB
878 PK/YE
560 LG/OG
562 LB
FUEL INJECTOR SHIELD
151–1 A8
C166M
C166F
TO S168
PAGE 23-4
T
875
BK/LB
FUEL INJECTOR SHIELD
FROM GLOW PLUG RELAY
PAGE 23-10
Y
S1004
110 BN
110 BN
110 BN
110 BN
151–1 C10
C1158F
C1158M
GLOW PLUG #2
GLOW PLUG #4
FUEL INJECTOR #2
FUEL INJECTOR #4
FUEL INJECTOR #6
FUEL INJECTOR #8
GLOW PLUG #6
GLOW PLUG #8
S1014