C489 (OG)

14K138

N297
Window operating switch, passenger side front

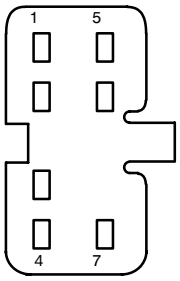

F07016

Pin	Circuit	Circuit Function
1	32-AJ17 (WH/VT)	Switched between: Battery voltage, Ground or Open
2	15-AJ18 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
3	33-AJ18 (YE/VT)	Switched between: Battery voltage, Ground or Open
4	31-HB37 (BK) + 31-LH23 (BK)	Ground
5	–	not used
6	32-AJ18 (WH/VT)	Switched between: Battery voltage, Ground or Open
7	33-AJ17 (YE/VT)	Switched between: Battery voltage, Ground or Open

C491

13412

E34
License plate lamp, left

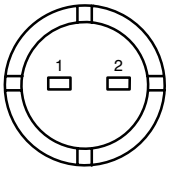

F02019

Pin	Circuit	Circuit Function
1	31-LF21 (BK)	Ground
2	29S-LF21 (OG/BK)	Voltage supplied at all times (overload protected), switched

C492

13412

E35
License plate lamp, right

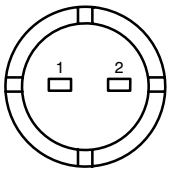

F02019

Pin	Circuit	Circuit Function
1	31-LF22 (BK)	Ground
2	29S-LF22 (OG/BK)	Voltage supplied at all times (overload protected), switched

C493

14K024

E69
Heater panel illumination lamp

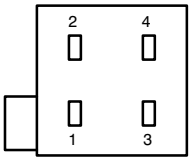

F04024

Pin	Circuit	Circuit Function
1	31-LH27 (BK)	Ground
	31-LB9 (BK) + 31-LH27 (BK)	Ground
2	64S-LH27 (BU/YE)	Variable D.C. voltage (not overload protected), switched
	64S-LH27 (BU/YE) + 64S-LK40 (BU/RD)	Variable D.C. voltage (not overload protected), switched
3	–	not used
4	–	not used