C365

MD Trans Harness

VIM

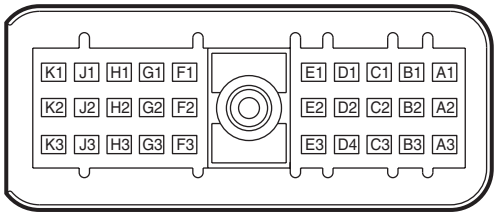

1687787C1

Pin	Circuit	Circuit Function
A1	140 (BK/PK)	Back up lamp feed
A2	—	Not used
A3	—	Not used
B1	295 (LB/PK)	Fused run to back up switch
B2	—	Not used
B3	—	Not used
C1	1290 (WH/OG)	Fuse panel to transmission range sensor
C2	—	Not used
C3	—	Not used
D1	—	Not used
D2	1064 (YE/LB)	Exhaust brake input
D3	—	Not used
E1	—	Not used
E2	1286 (RD/OG)	PCM - exhaust brake enable switch
E3	—	Not used

Pin	Circuit	Circuit Function
F1	32 (RD/LB)	Starter control
F2	—	Not used
F3	—	Not used
G1	325 (DB/OG)	Module, ignition - crank enable
G2	—	Not used
G3	—	Not used
H1	—	Not used
H2	—	Not used
H3	—	Not used
J1	—	Not used
J2	—	Not used
J3	—	Not used
K1	570 (BK/WH)	Ground (type 1 ground)
K2	—	Not used
K3	—	Not used