C428

14A005

E57
Luggage compartment lamp (13A756)

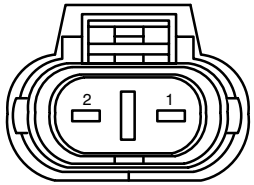

F02443

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, switched power
2	486 (BN/WH)	Liftgate unlock relay, control

C430

14A005

Y212
Luggage compartment lid release solenoid (5443252)



F03032

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	605 (RD)	Voltage supplied at all times (not overload protected)
3	486 (BN/WH)	Liftgate unlock relay, control

C431

14A005

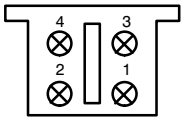

F04271

(1) 14 (BN)
14 (BN)
(2) 57 (BK)
(3) 5 (OG/LB)
(4)

13407

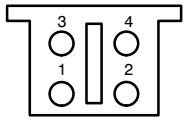

F04271

(1) 14 (BN)
(2) 57 (BK)
(3) 5 (OG/LB)
(4)

C432

14A005



F04271

(1) 14 (BN)
(2) 57 (BK)
(3) 9 (OG/LB)
(4)

13407



F04271

(1) 14 (BN)
(2) 57 (BK)
(3) 5 (OG/LB)
(4)

C434

14A005

A31
Fuel tank unit (9H307)

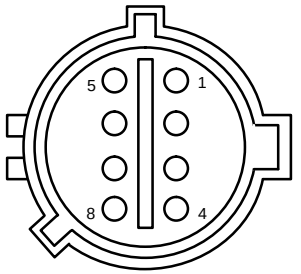

F08052

Pin	Circuit	Circuit function
1	–	not used
2	359 (GY/RD)	signal, return
3	791 (RD/PK)	Fuel tank pressure transducer sensor (9C968)
4	351 (BN/WH)	Reference, voltage
5	29 (YE/WH)	Fuel pump/fuel gauge sender
6	57 (BK)	Ground
7	787 (PK/BK)	Fuel pump, Power
8	676 (PK/OG)	Vehicle Speed Sensor (VSS) –