C775

9H589

Y112
Injector 5



F02058

Pin	Circuit	Circuit Function
1	91S-RL14 (BK/RD)	Ground, switched
2	15-RL14 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)

C776

9H589

Y113
Injector 6



F02058

Pin	Circuit	Circuit Function
1	91S-RL15 (BK/RD)	Ground, switched
2	15-RL15 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)

C779

9H589

B10
Engine Coolant Temperature (ECT) sensor

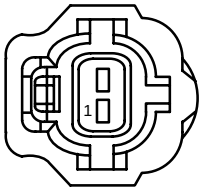

F02027

Pin	Circuit	Circuit Function
1	8-RJ6 (WH/GN)	Sensor signal
2	9-RJ6 (BN/GN)	Sensor signal return (reference/ground)

C780

12A522

Y33
Electr. Vacuum Regulator (EVR) solenoid valve

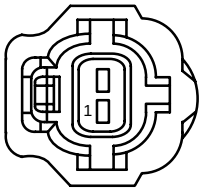

F02027

Pin	Circuit	Circuit Function
1	15-PA25 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-PA25 (BK/GN)	Ground, switched

C782

14A584

M122
Window regulator motor, driver side front



F02051

Pin	Circuit	Circuit Function
1	32-AJ6 (WH)	Switched between: Battery voltage, Ground or Open
2	33-AJ6 (YE)	Switched between: Battery voltage, Ground or Open

C785 (BU)

14K024

K26
Fog lamp relay

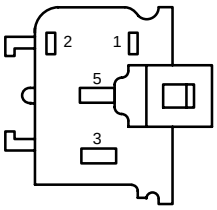

F04010

Pin	Circuit	Circuit Function
1	31-LD23 (BK)	Ground
2	29S-LE14 (OG)	Voltage supplied at all times (overload protected), switched
3	29S-LD10 (OG/GN)	Voltage supplied at all times (overload protected), switched
5	29-LD24 (OG/WH)	Voltage supplied at all times (overload protected)