Master window adjust switch (14529)

Terminals

C504a
C504b

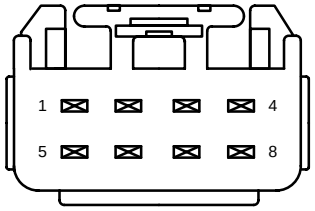

F08207

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Power and Ground Checks Before Any Other Tests	8 (C504b) and 3 (C504a)	All Eight Window Switches (at rest)	Open circuit
	8 (C504b) and 4 (C504a)		
	8 (C504b) and 1 (C504a)		
	8 (C504b) and 2 (C504a)		
	8 (C504b) and 5 (C504b)		
	8 (C504b) and 7 (C504a)		
	8 (C504b) and 8 (C504a)		
	8 (C504b) and 6 (C504a)		
	8 (C504b) and 5 (C504a)		
	5 (C504b) and 7 (C504b)		
	5 (C504b) and 8 (C504a)		
	8 (C504b) and 7 (C504b)	All Eight Window Switches (at rest)	Closed circuit
	5 (C504b) and 3 (C504a)		
	5 (C504b) and 4 (C504a)		
	5 (C504b) and 1 (C504a)		
	5 (C504b) and 2 (C504a)		
	5 (C504b) and 7 (C504a)		
	5 (C504b) and 8 (C504a)		
	5 (C504b) and 6 (C504a)		
	5 (C504b) and 5 (C504a)		
Left front window circuit	8 (C504b) and 7 (C504b)	Up	Closed circuit
	8 (C504b) and 5 (C504a)		
	8 (C504b) and 7 (C504b)	Down	
	5 (C504b) and 6 (C504a)		
	5 (C504b) and 6 (C504b)		
Right front window circuit	8 (C504b) and 7 (C504a)	Up	Closed circuit
	5 (C504b) and 8 (C504a)		
	8 (C504b) and 8 (C504a)	Down	
	5 (C504b) and 7 (C504a)		
Left rear window circuit	8 (C504b) and 2 (C504a)	Up	Closed circuit
	5 (C504b) and 1 (C504a)		
	8 (C504b) and 1 (C504a)	Down	
	5 (C504b) and 2 (C504a)		
Right rear window circuit	8 (C504b) and 3 (C504a)	Up	Closed circuit
	5 (C504b) and 4 (C504a)		
	8 (C504b) and 4 (C504a)	Down	
	5 (C504b) and 3 (C504a)		