C602b

14A005

N240
Door ajar switch, passenger side front (14018)

F01067

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C604

14A005

N105
Window adjust switch, passenger side

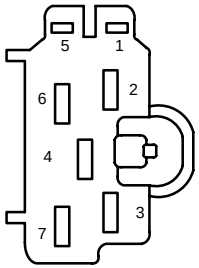

F07044

Pin	Circuit	Circuit function
1	–	not used
2	333 (YE/RD)	Window motor, feed, Up
3	314 (TN/LB)	Window switch, feed, right front, Down
4	170 (RD/LB)	Window lockout, switched power, output
5	–	not used
6	334 (RD/YE)	Window motor, feed, Down
7	313 (WH/YE)	Window switch, feed, right front, Up

C605

14A005

N205
Door lock switch, passenger side (14028)

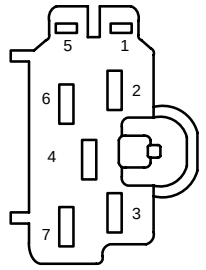

F07044

Pin	Circuit	Circuit function
1	–	not used
2	120 (PK/LG)	Door unlock relay, control
3	–	not used
4	797 (LG/VT)	Voltage supplied at all times (overload protected)
5	–	not used
6	119 (PK/VT)	Door lock relay, control
7	–	not used

C606

14630

E178
Door entry lamp, right front (13776)



F02071

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground