C466a

19B113

A14
Subwoofer amplifier
(18C804)



F10009

Pin	Circuit	Circuit function
1	7-MD19 (YE/RD)	Subwoofer, Enable
2	31-MD19 (BK)	Ground
3	–	not used
4	–	not used
5	30-MD19A (RD)	Voltage supplied at all times (not overload protected)
6	–	not used
7	1-MD19 (WH/RD)	Subwoofer, signal, Audio signal positive
8	2-MD19 (GY/RD)	Subwoofer, signal, Audio signal negative
9	48-MD15C	Subwoofer, signal, Drain wire
10	–	not used

C466b

19B113

A14
Subwoofer amplifier
(18C804)

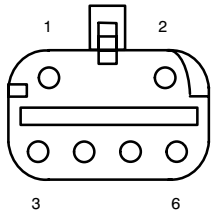

F06052

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	10-MD22 (GY/OG)	Subwoofer, left, Audio signal negative
4	8-MD22 (WH/GN)	Subwoofer, left, Audio signal positive
5	10-MD21 (GY/VT)	Subwoofer, right, Audio signal negative
6	8-MD21 (WH/BU)	Subwoofer, right, Audio signal positive