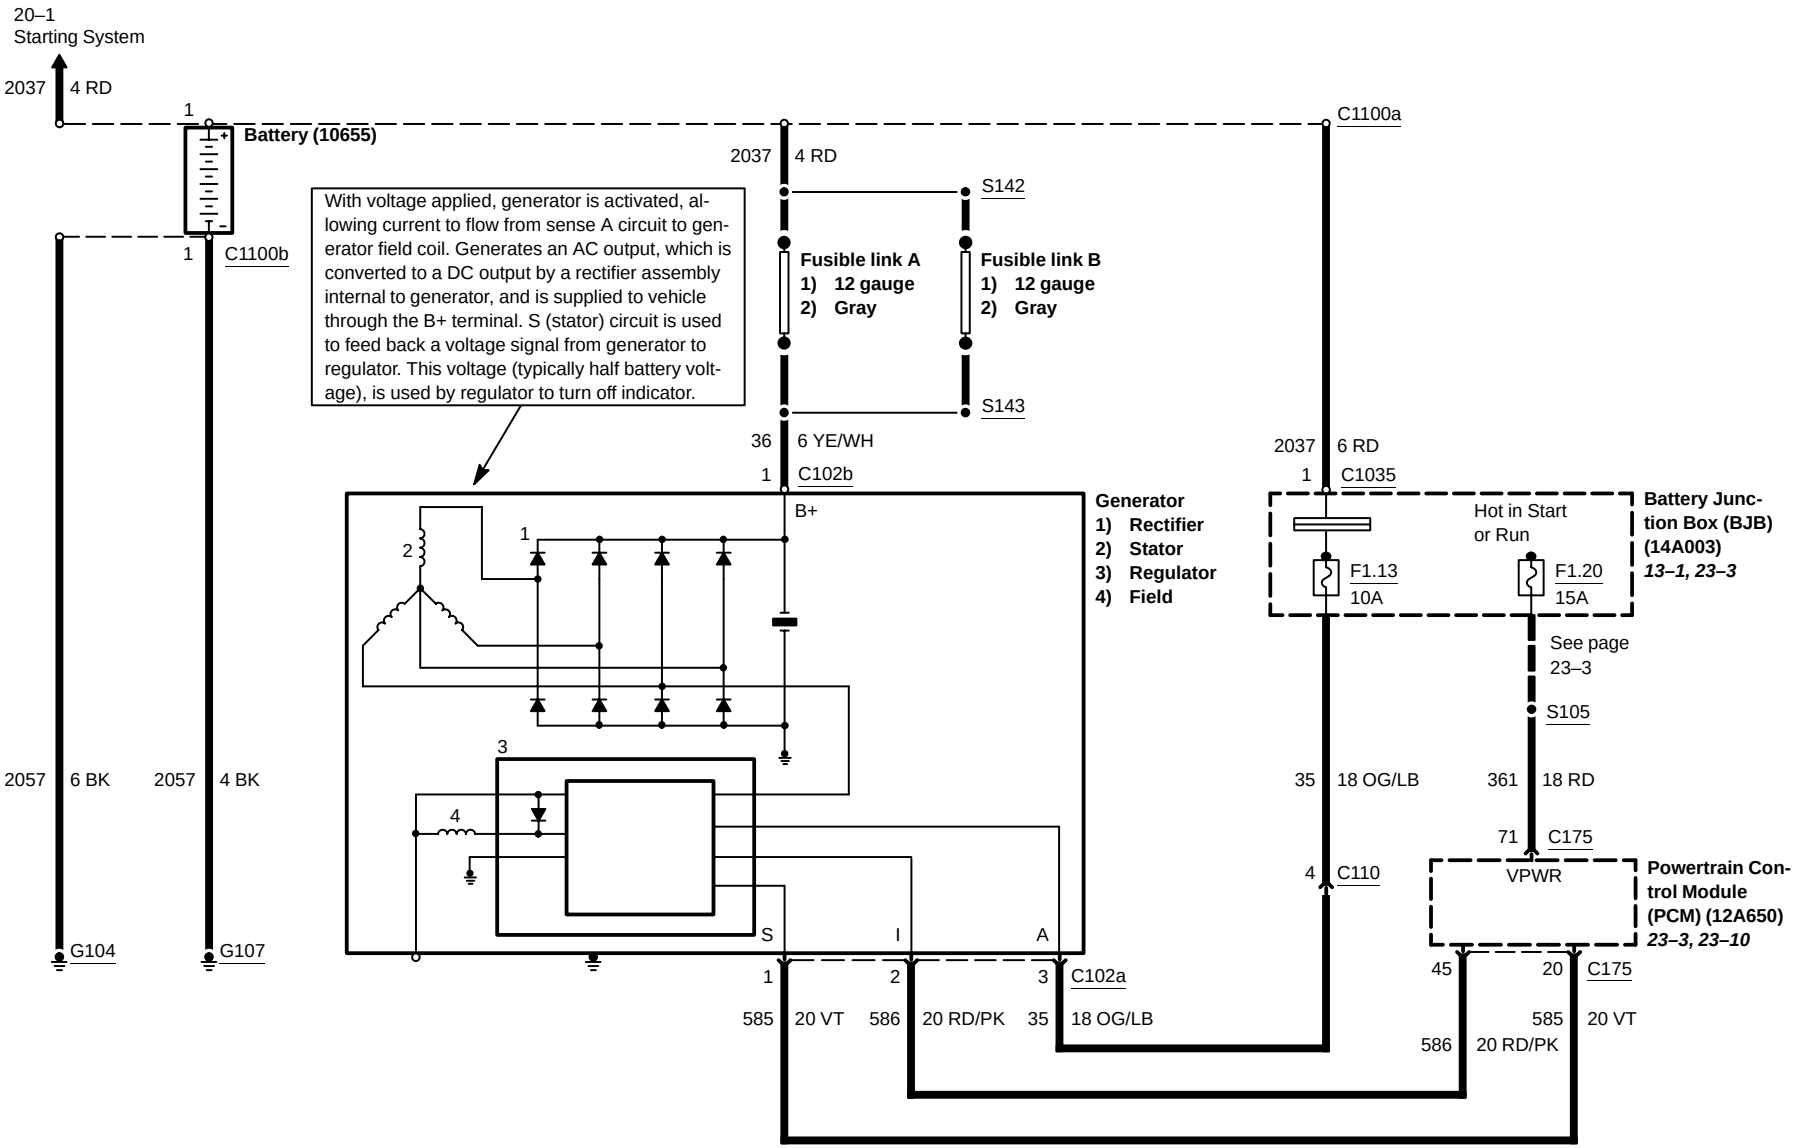
20–1
Starting System
2037 4 RD
1
Battery (10655)
1 C1100b
C1100a
2037 4 RD
S142
Fusible link A
1) 12 gauge
2) Gray
Fusible link B
1) 12 gauge
2) Gray
S143
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
36 6 YE/WH
1 C102b
B+
Generator
1) Rectifier
2) Stator
3) Regulator
4) Field
2037 6 RD
1 C1035
Hot in Start or Run
F1.13 10A
F1.20 15A
Battery Junction Box (BJB) (14A003)
13–1, 23–3
See page 23–3
S105
2057 6 BK
2057 4 BK
35 18 OG/LB
361 18 RD
71 C175
4 C110
VPWR
Powertrain Control Module (PCM) (12A650)
23–3, 23–10
G104
G107
S
I
A
1 2 3 C102a
585 20 VT
586 20 RD/PK
35 18 OG/LB
45 20 C175
585 20 VT
586 20 RD/PK