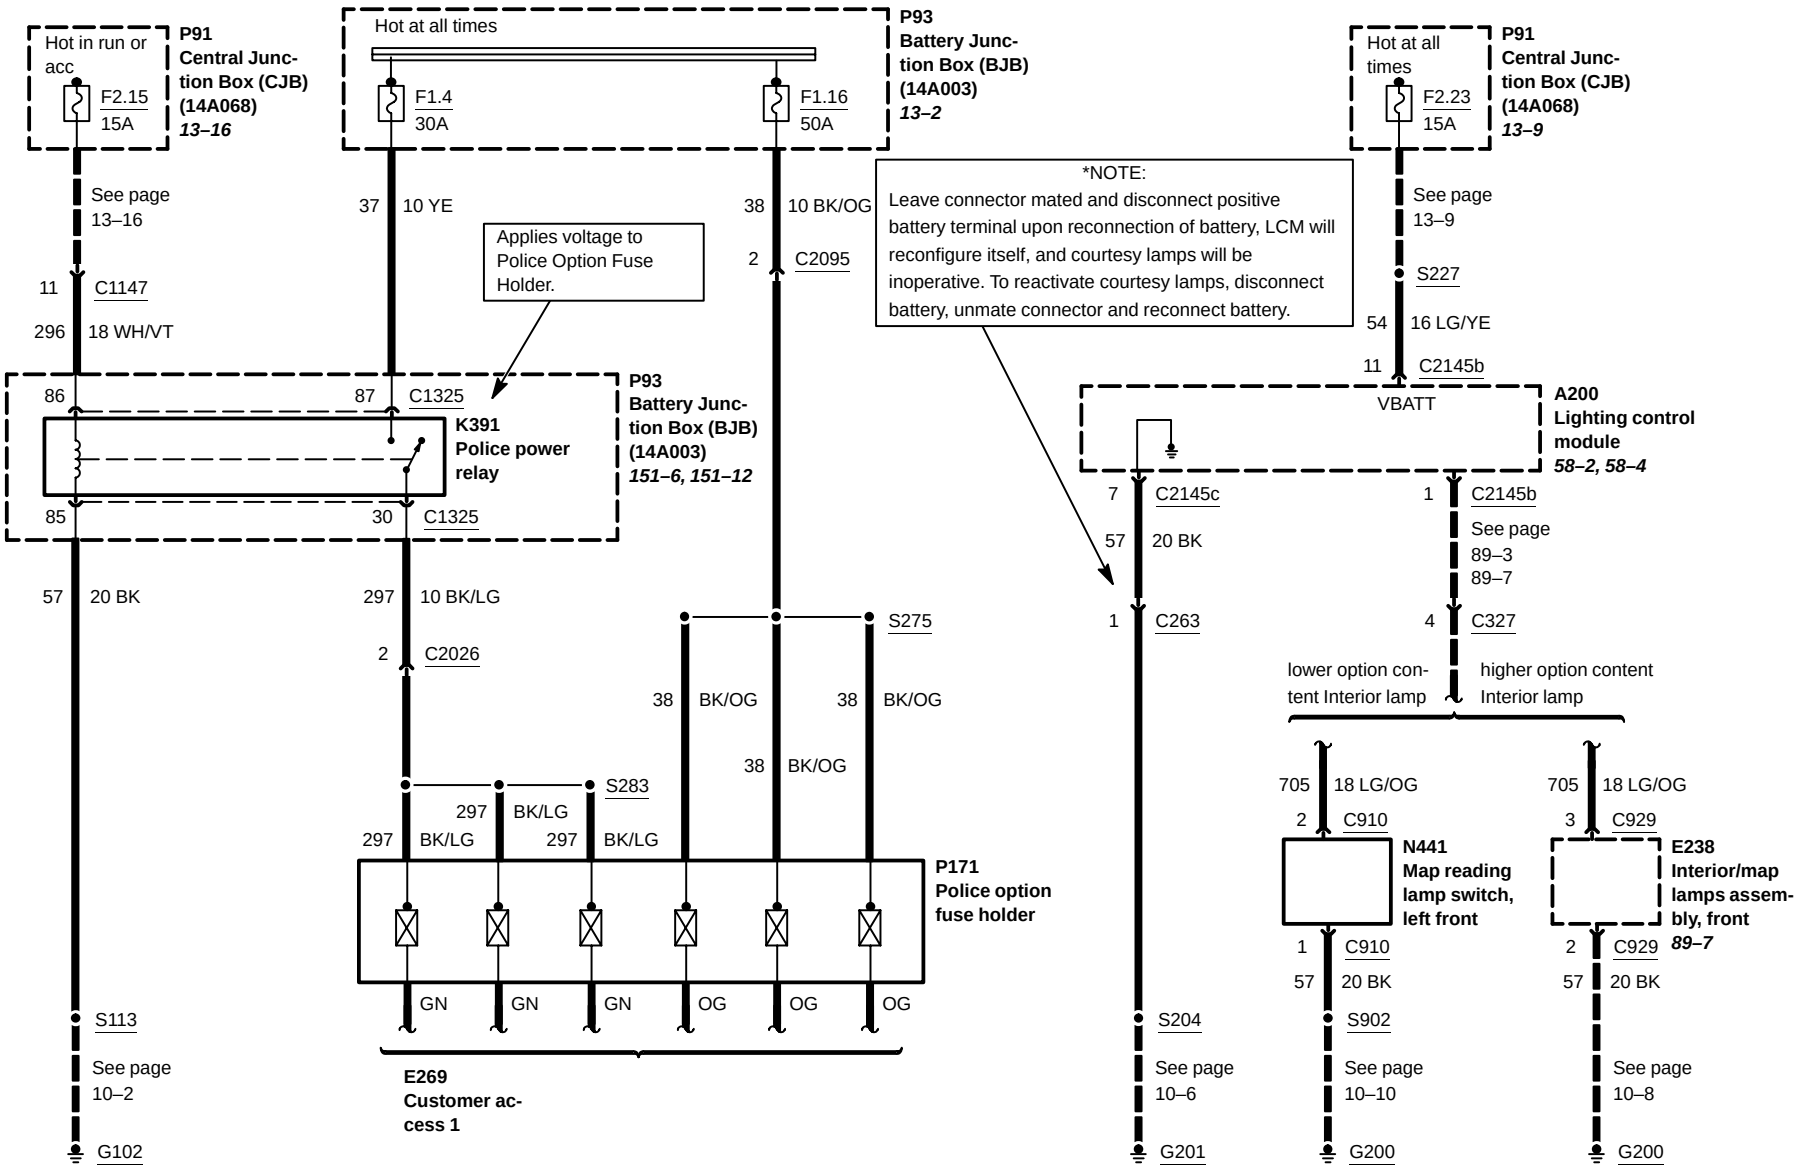
Hot in run or acc
F2.15
15A
P91
Central Junction Box (CJB)
(14A068)
13–16
Hot at all times
F1.4
30A
F1.16
50A
P93
Battery Junction Box (BJB)
(14A003)
13–2
Hot at all times
F2.23
15A
P91
Central Junction Box (CJB)
(14A068)
13–9
See page 13–16
37 10 YE
38 10 BK/OG
2 C2095
See page 13–9
S227
54 16 LG/YE
11 C2145b
11 C1147
296 18 WH/VT
Applies voltage to Police Option Fuse Holder.
*NOTE:
Leave connector mated and disconnect positive battery terminal upon reconnection of battery, LCM will reconfigure itself, and courtesy lamps will be inoperative. To reactivate courtesy lamps, disconnect battery, unmate connector and reconnect battery.
VBATT
A200
Lighting control module
58–2, 58–4
86
87 C1325
K391
Police power relay
P93
Battery Junction Box (BJB)
(14A003)
151–6, 151–12
85
30 C1325
7 C2145c
1 C2145b
See page 89–3
89–7
57 20 BK
297 10 BK/LG
1 C263
4 C327
S275
2 C2026
lower option content Interior lamp
higher option content Interior lamp
38 BK/OG
38 BK/OG
38 BK/OG
705 18 LG/OG
2 C910
705 18 LG/OG
3 C929
S283
297 BK/LG
297 BK/LG
297 BK/LG
N441
Map reading lamp switch, left front
E238
Interior/map lamps assembly, front
89–7
P171
Police option fuse holder
1 C910
2 C929
57 20 BK
57 20 BK
GN
GN
GN
OG
OG
OG
S113
See page 10–2
S204
See page 10–6
S902
See page 10–10
See page 10–8
E269
Customer access 1
G102
G201
G200
G200