Marauder

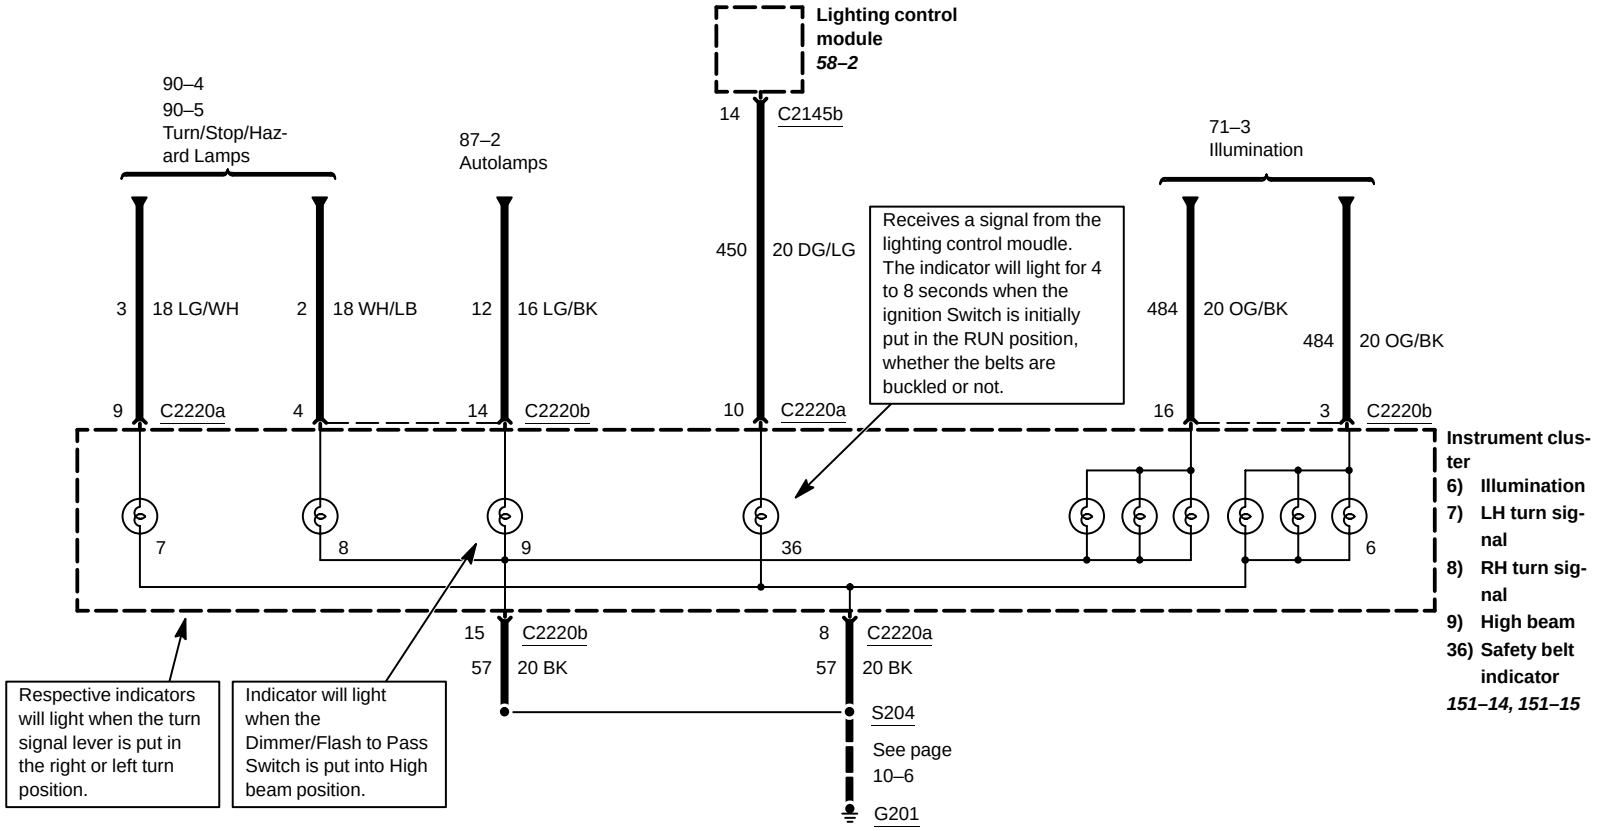
Lighting control module
58–2
14
C2145b
90–4
90–5
Turn/Stop/Hazard Lamps
87–2
Autolamps
71–3
Illumination
450
20 DG/LG
Receives a signal from the lighting control moudle. The indicator will light for 4 to 8 seconds when the ignition Switch is initially put in the RUN position, whether the belts are buckled or not.
3
18 LG/WH
2
18 WH/LB
12
16 LG/BK
484
20 OG/BK
484
20 OG/BK
9
C2220a
4
14
C2220b
10
C2220a
16
3
C2220b
Instrument cluster
6) Illumination
7) LH turn signal
8) RH turn signal
9) High beam
36) Safety belt indicator
151–14, 151–15
7
8
9
36
6
15
C2220b
57
20 BK
8
C2220a
57
20 BK
S204
See page 10–6
G201
Respective indicators will light when the turn signal lever is put in the right or left turn position.
Indicator will light when the Dimmer/Flash to Pass Switch is put into High beam position.