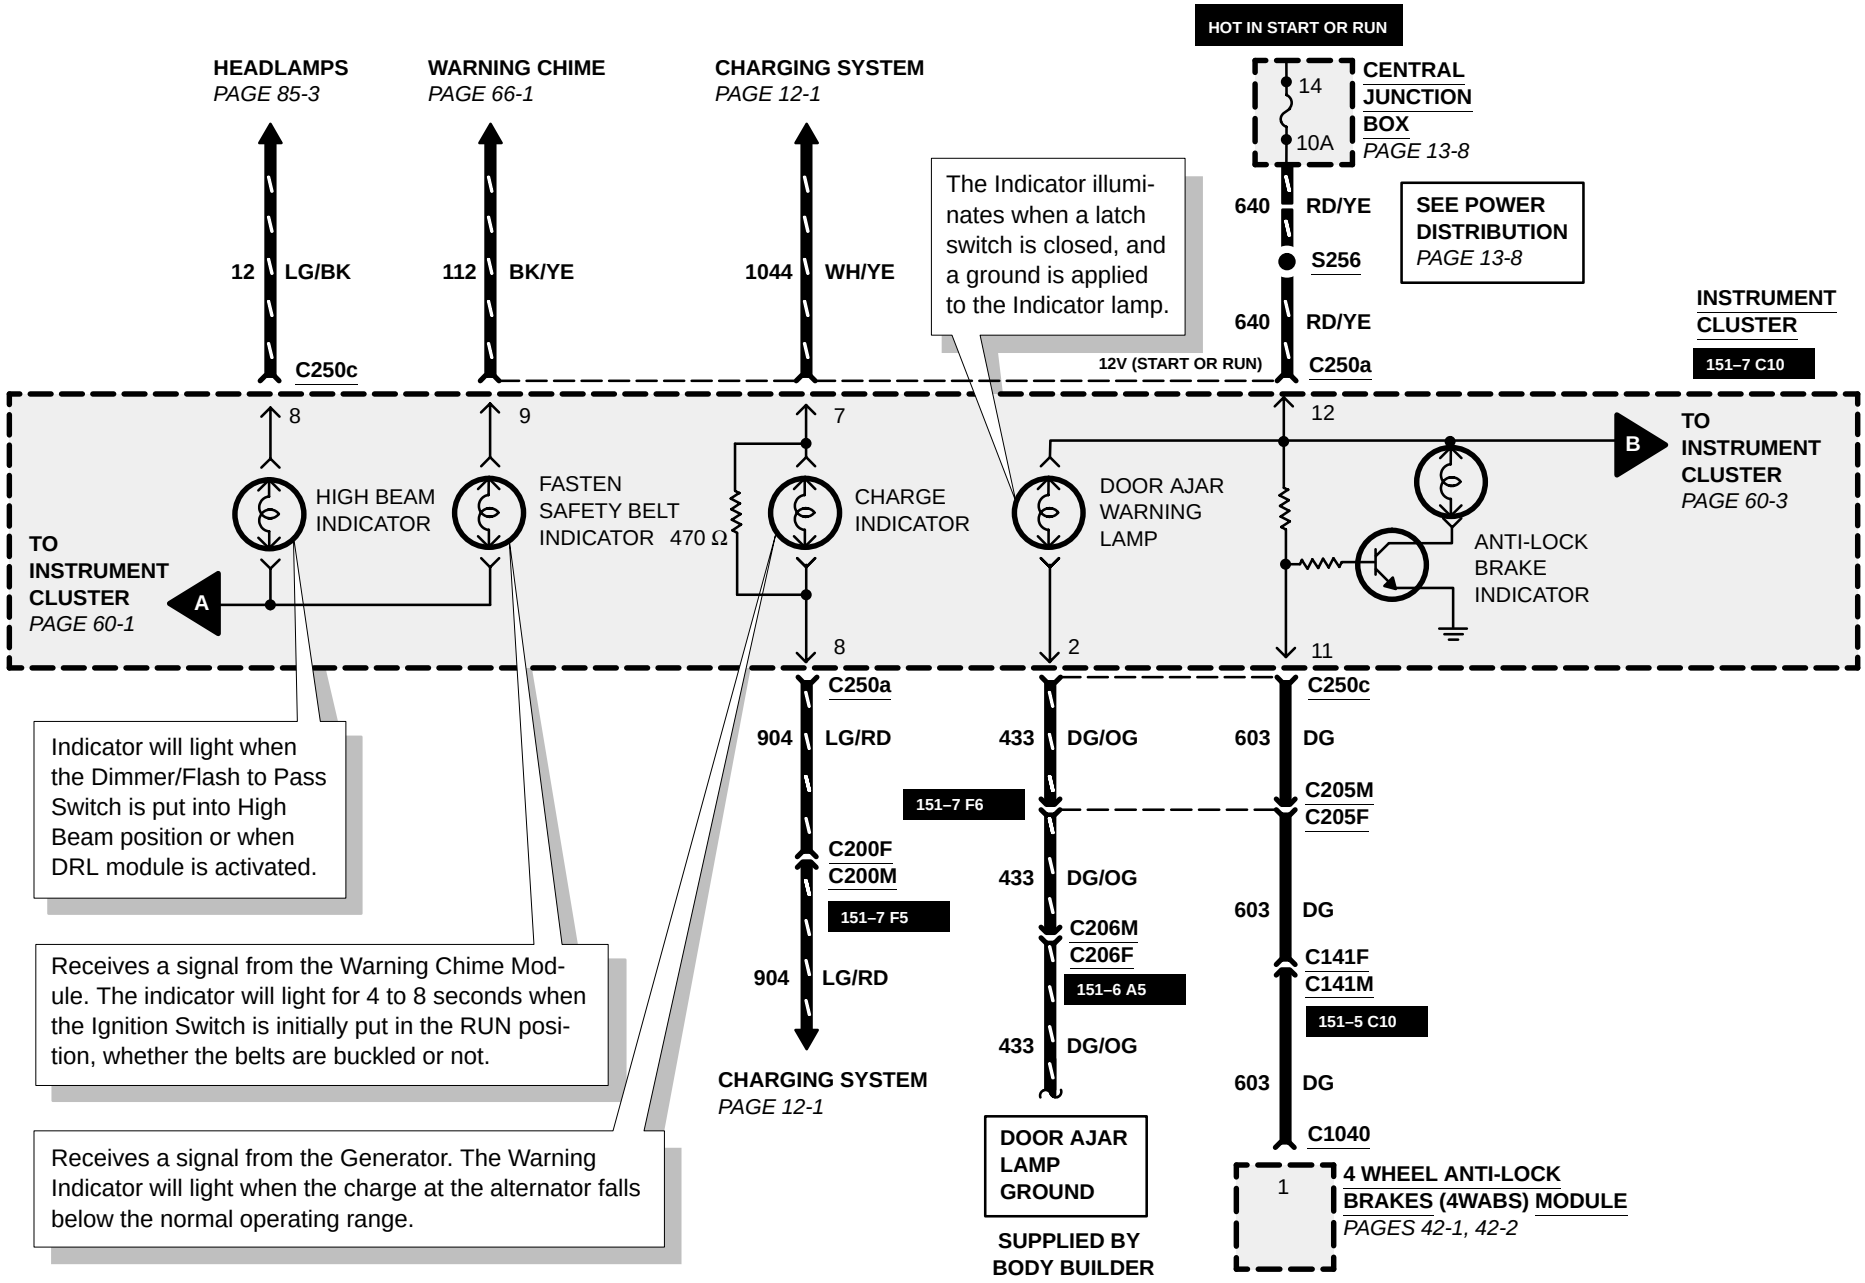
HOT IN START OR RUN
HEADLAMPS
PAGE 85-3
WARNING CHIME
PAGE 66-1
CHARGING SYSTEM
PAGE 12-1
CENTRAL JUNCTION BOX
PAGE 13-8
14
10A
640 RD/YE
S256
640 RD/YE
C250a
SEE POWER DISTRIBUTION
PAGE 13-8
INSTRUMENT CLUSTER
151–7 C10
12 LG/BK
C250c
112 BK/YE
1044 WH/YE
The Indicator illuminates when a latch switch is closed, and a ground is applied to the Indicator lamp.
12V (START OR RUN)
8
9
7
12
HIGH BEAM INDICATOR
FASTEN SAFETY BELT INDICATOR 470 Ω
CHARGE INDICATOR
DOOR AJAR WARNING LAMP
ANTI-LOCK BRAKE INDICATOR
TO INSTRUMENT CLUSTER
PAGE 60-3
B
TO INSTRUMENT CLUSTER
PAGE 60-1
A
8
2
11
C250a
904 LG/RD
433 DG/OG
603 DG
C250c
151–7 F6
C205M
C205F
C200F
C200M
151–7 F5
433 DG/OG
603 DG
C206M
C206F
151–6 A5
C141F
C141M
151–5 C10
904 LG/RD
433 DG/OG
603 DG
CHARGING SYSTEM
PAGE 12-1
DOOR AJAR LAMP GROUND
SUPPLIED BY BODY BUILDER
C1040
1
4 WHEEL ANTI-LOCK BRAKES (4WABS) MODULE
PAGES 42-1, 42-2
Indicator will light when the Dimmer/Flash to Pass Switch is put into High Beam position or when DRL module is activated.
Receives a signal from the Warning Chime Module. The indicator will light for 4 to 8 seconds when the Ignition Switch is initially put in the RUN position, whether the belts are buckled or not.
Receives a signal from the Generator. The Warning Indicator will light when the charge at the alternator falls below the normal operating range.