C175

12A581

A147
Powertrain Control
Module (PCM)
(12A650)

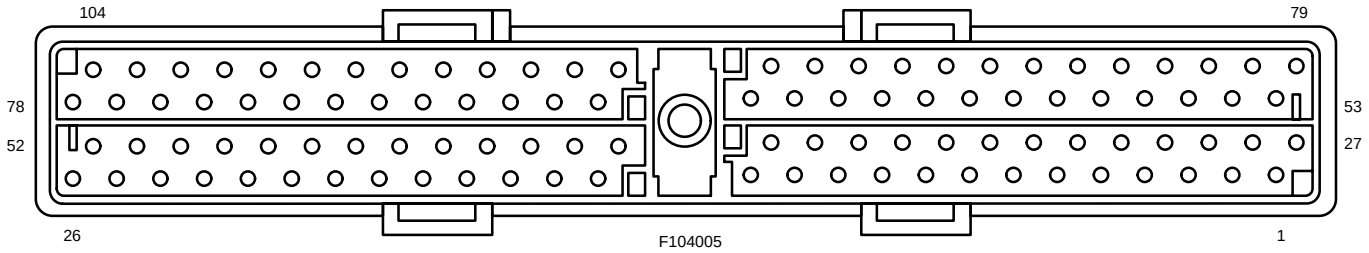

Pin	Circuit	Circuit function
1	–	not used
2	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
3	–	not used
4	–	not used
5	338 (TN/RD)	Parking brake switch (15A851)
6	–	not used
7	–	not used
8	1277 (WH/LG)	output, to, Glow plug relay
9	–	not used
10	1285 (RD/LG)	Idle validation switch, control
11	–	not used
12	–	not used
13	107 (VT)	Module programming signal
14	–	not used
15	915 (PK/LB)	SCP Bus –
16	914 (TN/OG)	SCP Bus +
17	–	not used
18	–	not used
19	648 (WH/PK)	Tachometer, signal
20	–	not used
21	795 (DG)	Camshaft position sensor (6B288), to, Powertrain Control Module (PCM) (12A650)
22	–	not used
23	–	not used
24	357 (YE/WH)	Powertrain Control Module (PCM) (12A650), to, Generic Electronic Module (GEM) (14B205)

Pin	Circuit	Circuit function
25	570 (BK/WH)	Ground
26	–	not used
27	–	not used
28	643 (RD)	indicator, Water–in–fuel sensor
29	329 (PK)	Starter relay (11450), control
30	–	not used
31	307 (BK/YE)	Brake pressure switch (2B264), input
32	–	not used
33	–	not used
34	–	not used
35	–	not used
36	1280 (GY/RD)	Fuel heater, to, Powertrain Control Module (PCM) (12A650)
37	–	not used
38	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), input
39	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input
40	175 (BK/YE)	Tweeter, left front, to, Speaker, left front (18808), +
41	347 (BK/YE)	A/C clutch relay, switched output
42	–	not used
43	–	not used
44	–	not used
45	–	not used
46	–	not used
47	–	not used
48	818 (GY/WH)	Injector Driver Module (IDM) power relay, to, Powertrain Control Module (PCM) (12A650)

Pin	Circuit	Circuit function
49	–	not used
50	–	not used
51	570 (BK/WH)	Ground
52	–	not used
53	–	not used
54	–	not used
55	797 (LG/VT)	Voltage supplied at all times (overload protected)
56	–	not used
57	–	not used
58	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
59	–	not used
60	–	not used
61	–	not used
62	1291 (RD/YE)	Manifold Absolute Pressure (MAP) sensor, to, Powertrain Control Module (PCM) (12A650)
63	–	not used
64	–	not used
65	796 (LB)	Camshaft position sensor (6B288), signal, return
66	322 (LB/YE)	Power, input
67	–	not used
68	–	not used
69	–	not used
70	464 (BK/PK)	Headlamp relay, output
71	361 (RD)	Voltage supplied in Start and Run (overload protected)
72	–	not used
73	–	not used
74	–	not used
75	–	not used
76	–	not used

Pin	Circuit	Circuit function
77	570 (BK/WH)	Ground
78	–	not used
79	358 (LG/BK)	Manifold Absolute Pressure (MAP) sensor, to, Powertrain Control Module (PCM) (12A650)
80	814 (WH/BK)	Injector Driver Module (IDM) power relay, control
81	–	not used
82	–	not used
83	552 (YE/RD)	Injection Pressure Regulator (IPR), to, Powertrain Control Module (PCM) (12A650)
84	–	not used
85	–	not used
86	–	not used
87	812 (DB/LG)	Injector pressure sensor, input
88	–	not used
89	355 (GY/WH)	Throttle Position Sensor (TPS) (9B989), input
90	351 (BN/WH)	Reference, voltage
91	359 (GY/RD)	signal, return
92	810 (RD/LG)	Brake pedal position switch (13480), input
93	–	not used
94	237 (OG/YE)	Shift solenoid A
95	821 (BN/OG)	fuel delivery command, signal, output
96	817 (YE/LG)	cylinder identification, signal, output
97	361 (RD)	Voltage supplied in Start and Run (overload protected)
98	–	not used
99	–	not used
100	–	not used
101	1086 (VT/OG)	Voltage supplied at all times (overload protected)
102	–	not used
103	570 (BK/WH)	Ground
104	–	not used