C1917

14K733

E8
Turn lamp, right
front

F03142

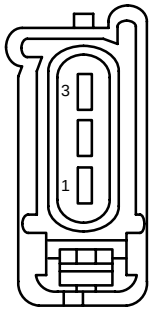

Pin	Circuit	Circuit Function
1	31-LG18 (BK)	Ground
2	–	not used
3	49-LG18 (BU)	Pulsed power feed (overload protected)

C1919

13A612

N208
Start inhibit switch

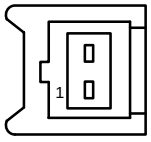

F02012

Pin	Circuit	Circuit Function
1	31S-BB12 (BK/YE)	Ground, switched
2	31S-BB6 (BK/YE)	Ground, switched

C1927 (WH)

14A584

N137
Door lock/unlock
switch, driver

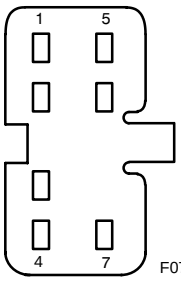

F07016

Pin	Circuit	Circuit Function
1	32-AA39 (WH)	Switched between: Battery voltage, Ground or Open
2	31-AA34 (BK) + 31-LH28 (BK)	Ground
3	–	not used
4	31-AD12 (BK) + 31-LH28 (BK)	Ground
5	15-LH28 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
6	–	not used
7	33-AA39 (YE)	Switched between: Battery voltage, Ground or Open