## C1085

**14398**

A/C Indicator diode




F02009

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1205 (BK) | Ground |
| 2 | 321 (GY/WH) | A/C clutch relay, switched output |

## C1100a

**14A280**

Battery (10655)



F01059

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 2037 (RD) | Battery cable + |
| | 2037 (RD) | Battery cable + |

## C1100b

**14A280**

Battery (10655)



F01059

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 2057 (BK) | Battery cable – |
| | 2057 (BK) | Battery cable – |

## C1101 (BK)

**14398**

Horn, left

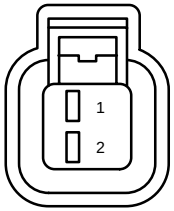


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1205 (BK) | Ground |
| 2 | 1 (DB) | Horn relay, control |

## C1102 (BK)

**14398**

Horn, right

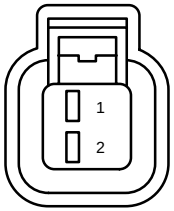


F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1205 (BK) | Ground |
| 2 | 1 (DB) | Horn relay, control |

## C1108 (BK)

**14398**

Repeater lamp, left




F02221

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 3 (LG/WH) | Turn lamps, feed, left front |
| 2 | 1205 (BK) | Ground |