## Headlamp switch, Interior lamps

### Schematic

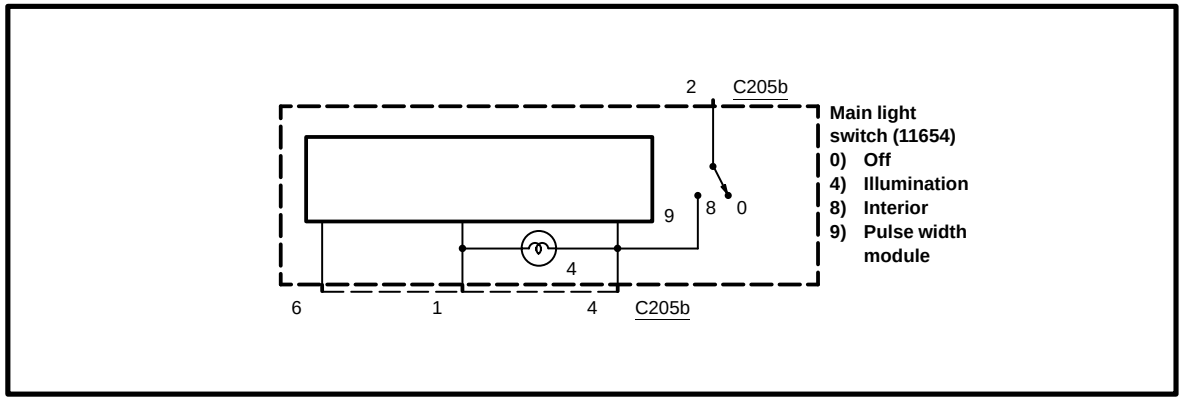


### Terminals

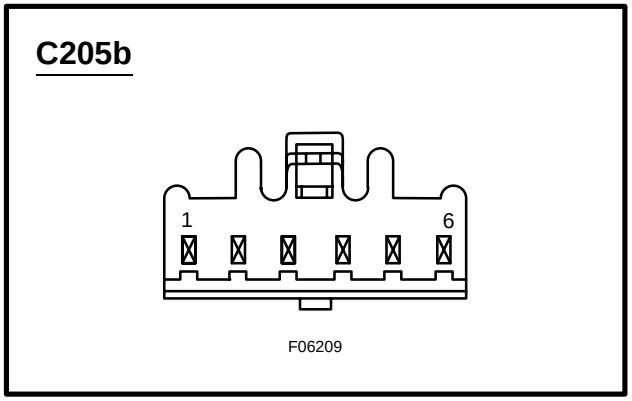


### Component testing procedure

| Circuit to test | Connect self–powered test light or ohm-meter to terminals | Move key to these positions | A good switch will indicate |
|---|---|---|---|
| **Interior lamp** | 2 and 4 | On | Open circuit |
| | | Off | Closed circuit |

### Component testing procedure (voltage applied)

Disconnect the ohmmeter; connect pin 6 using a fused (10A) jumper to 12V DC power and pin 4 to ground. Measure the voltage between pin 1 and pin 4 while rotating the thumbwell from full illumination to no illumination. If the voltage smoothly decreases from near 12 volts to near 0 volts, the illumination dimmer is okay. If not, replace the main light switch.