C218b (GY)

14401

Air bag sliding contact (14A664)

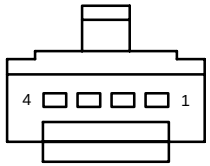

F04146

Pin	Circuit	Circuit function
1	1517 (RD/OG)	stage, 2, –
2	1516 (YE/WH)	stage, 2, +
3	615 (GY/WH)	stage, 1, –
4	614 (GY/OG)	stage, 1, +

C220a (BK)

14401

Instrument cluster

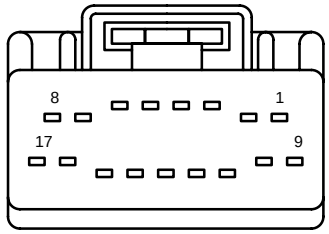

F17006

Pin	Circuit	Circuit function
1	3049 (BK/LG)	Voltage supplied at all times (overload protected)
2	1203 (BK/LB)	Ground
3	81 (RD/LG)	Washer fluid level switch
4	1009 (OG/YE)	Rear window defrost relay, control
5	1004 (LB/RD)	Accessory delay relay, control
6	1005 (VT/OG)	Battery saver relay, control
7	489 (PK/BK)	Voltage supplied in Start and Run (overload protected)
8	1411 (GY/OG)	Message center switch to Instrument cluster
9	–	not used
10	1420 (YE/LB)	Instrument cluster, to, Interior lamps
11	1034 (BK/WH)	Main light switch (11654) to Instrument cluster
12	1404 (YE)	Main light switch (11654) to Instrument cluster
13	1390 (DB)	Air bag, tone driver
14	162 (LG/RD)	Parking brake switch (15A851)
15	688 (GY/LB)	Rear window defrost, input
16	1392 (LG/OG)	Turn lamps, feed, right front
17	–	not used